ONN 100012585

Onn. 50" Class 4K (2160P) UHD Smart LED TV

Model: 100012585 | Brand: ONN

Introduction

This manual provides essential information for the safe and efficient operation of your new Onn. 50" Class 4K UHD Smart LED TV. Please read all instructions carefully before using the product and retain this manual for future reference.

Safety Information

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury. Ensure proper ventilation, avoid blocking vents, and do not expose the TV to rain or moisture. Disconnect the power cord during lightning storms or when unused for long periods. Refer to local regulations for proper disposal of electronic waste.

What's in the Box

- Onn. 50" Class 4K UHD Smart LED TV
- TV Stand (2 pieces)
- Remote Control
- Power Cord
- Quick Start Guide (not included in this manual)

Setup

Physical Setup (Stand Installation)

If you are not wall-mounting your TV, attach the included stands. Carefully place the TV face down on a soft, clean surface to prevent screen damage. Align each stand with the corresponding screw holes on the bottom of the TV and secure with screws (not provided in product data, but typically included with stand). Ensure the stands are firmly attached before placing the TV upright.

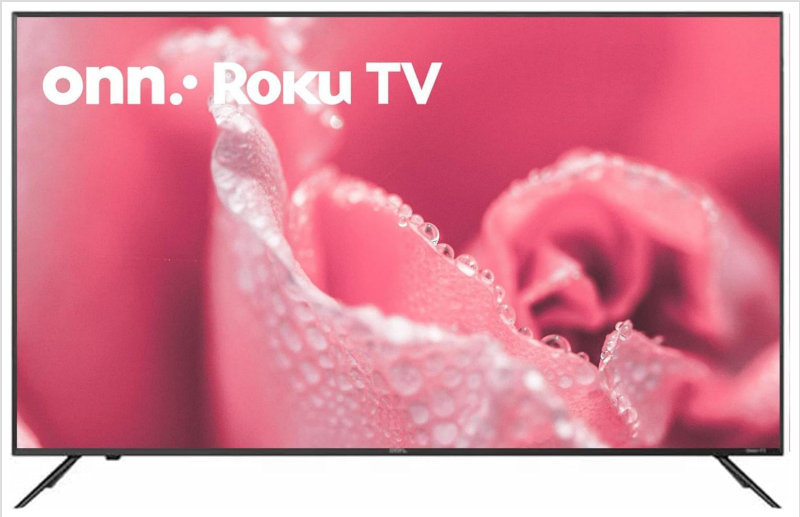


Figure 1: Front view of the TV with stands.



Figure 2: Back view of the TV, highlighting VESA mounting points (200 x 200 mm).

Connecting Devices

Your Onn. TV offers multiple connectivity options for various devices.

- **HDMI:** Connect up to 3 HDMI devices (gaming consoles, Blu-ray players, cable boxes) for high-definition audio and video.
- **Composite:** Use the composite input for older devices (DVD players, VCRs).
- **USB:** Plug in a USB drive to view photos or play media files.
- **Optical:** Connect to a soundbar or home theater system for digital audio output.
- **Coaxial/Cable:** Connect an antenna or cable TV feed.
- **LAN:** For a wired internet connection.
- **Headphone:** For private listening.

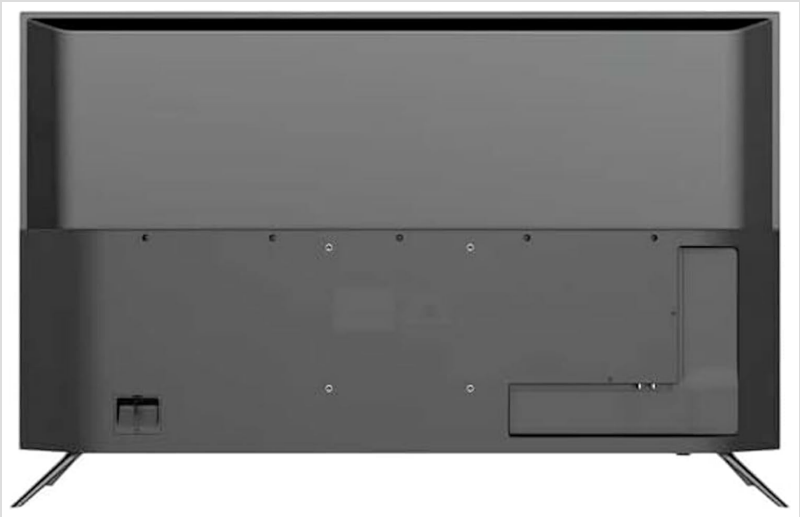


Figure 3: TV Input Ports.

Power On

Connect the power cord to the TV and then to a wall outlet. The TV will power on automatically or can be turned on using the remote control.

Operating Your TV

Remote Control

The included remote control provides full functionality for navigating your Onn. Roku TV.



Figure 4: Remote Control.

- **Power Button:** Turns the TV on/off.
- **Directional Pad (Purple Cross):** Navigate menus and select options.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku Home screen.
- **Back Button:** Goes back to the previous screen.
- **Volume Up/Down:** Adjusts the TV volume (buttons on the side of the remote).
- **Mute Button:** Mutes/unmutes the TV sound (button on the side of the remote).
- **Dedicated App Buttons:** Quick access to popular streaming services (Netflix, Disney+, Hulu, Vudu).

Smart TV Features (Roku Interface)

Your Onn. TV features the intuitive Roku Smart TV platform, providing access to a vast library of streaming content.

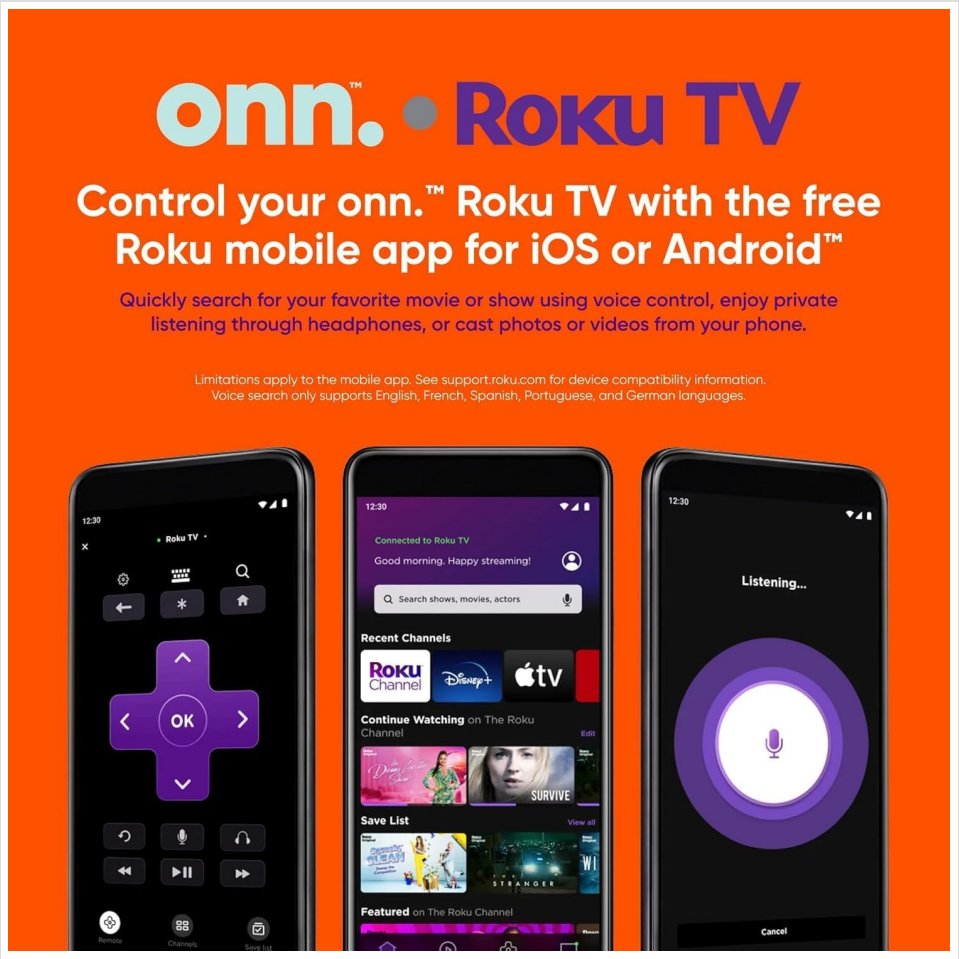


Figure 5: Roku TV Home Screen.

- **Home:** Access all your installed streaming channels, connected devices, and settings.
- **Streaming Channels:** Browse and add new apps from the Roku Channel Store.
- **Live TV:** Access live broadcast channels if an antenna is connected.
- **Search:** Find movies, TV shows, actors, and directors across various streaming services.
- **Settings:** Configure network, display, audio, and other TV preferences.

Roku Mobile App

Enhance your TV experience by downloading the free Roku mobile app for iOS or Android. The app allows for quick search, voice control, private listening through headphones, and casting photos or videos from your phone.



Figure 6: Roku Mobile App Interface.

Maintenance

To ensure the longevity of your TV, follow these maintenance tips:

- **Cleaning:** Use a soft, dry cloth to clean the screen and TV cabinet. Do not use liquid cleaners or sprays directly on the TV.
- **Ventilation:** Ensure adequate airflow around the TV to prevent overheating. Do not block ventilation openings.
- **Power:** Unplug the TV from the power outlet before cleaning or if it will be unused for an extended period.

Troubleshooting

If you encounter issues with your TV, try the following solutions:

- **No Power:** Check if the power cord is securely connected to the TV and the wall outlet. Try a different outlet.
- **No Picture/Sound:** Ensure the correct input source is selected. Check all cable connections.
- **Remote Not Working:** Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Network Connection Issues:** Verify your Wi-Fi password or LAN cable connection. Restart your router.

Specifications

Feature	Specification

Feature	Specification
Display Size	50 inches (49.5 inches actual diagonal)
Resolution	4K (2160p) UHD
Display Type	DLED
Refresh Rate	60 Hz
VESA Compatibility	200 x 200 mm
Connections	3 HDMI, 1 Composite, 1 USB, 1 Optical, 1 Coaxial/Cable, 1 LAN, Headphone
Connectivity Technology	Wireless (Wi-Fi), Ethernet
Power Source	DC
Product Dimensions	5.91 x 41.81 x 26.38 inches (without stand)
Item Weight	29.2 pounds (13.27 Kilograms)



Figure 7: TV Dimensions.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official ONN website. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question