Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lefant M210P

Lefant M210B/M210P Robotic Vacuum Cleaner User Manual

Model: M210P

1. Introduction and Overview

This manual provides essential information for the safe and efficient operation of your Lefant M210B/M210P Robotic Vacuum Cleaner. Please read it thoroughly before first use and keep it for future reference.
The Lefant M210B/M210P is a versatile 2-in-1 robotic vacuum cleaner designed for both vacuuming and mopping. It features advanced FreeMove Technology 2.0 for obstacle avoidance, multiple cleaning modes, and smart control via app or voice commands. Its brushless suction structure is ideal for pet hair, preventing tangles and ensuring efficient cleaning on various floor types.

2. Product Components

Ensure all components are present upon unboxing:

- Lefant M210B/M210P Robotic Vacuum Cleaner
- Charging Base
- Power Adapter
- 500ML Large Dust Bin (pre-installed)
- 4 x Side Brushes
- Washable Mopping Cloth
- Wipe Holder
- Cleaning Brush
- 2 x HEPA Filters
- 5 x Disposable Wipes
- User Manual



Image: The Lefant M210B/M210P robotic vacuum cleaner shown alongside its charging base and a smartphone displaying the control app.

3. Setup Guide

1. **Unpack and Remove Protective Film:** Carefully remove the robot vacuum and all accessories from the packaging. Remove any protective films or stickers from the robot and charging base.
2. **Install Side Brushes:** Attach the two side brushes to the corresponding posts on the bottom of the robot until they click into place.
3. **Position the Charging Base:** Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on either side and 1.5 meters (4.9 feet) in front of the charging base. Plug the power adapter into the charging base and a wall outlet.
4. **Initial Charge:** Place the robot vacuum onto the charging base, ensuring the charging contacts align. The robot will begin charging. For first use, fully charge the robot (approximately 4-5 hours) until the indicator light turns solid.
5. **Download the Lefant APP:** Search for "Lefant Life" in your smartphone's app store (App Store for iOS or Google

Play Store for Android) and download the application.

6. **Connect to Wi-Fi:** Follow the in-app instructions to connect your robot vacuum to your home 2.4GHz Wi-Fi network. This enables smart control features.

4. Operating Instructions

4.1 Cleaning Modes

The M210B/M210P offers four distinct cleaning modes to suit various needs:

- **Auto Clean:** The robot intelligently navigates and cleans the entire floor area.
- **Spot Clean:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Wall Follow Clean (Edge Clean):** Cleans along walls and furniture edges.
- **Manual Clean:** Allows you to control the robot's movement directly via the app or remote control.



Image: Visual representation of the robot vacuum performing Zigzag, Edge, Spot, and Auto cleaning patterns.

4.2 Suction Power Adjustment

The robot features adjustable suction power with Standard, Strong, and Max modes to handle different levels of dirt and debris.



Image: Depiction of the robot vacuum demonstrating its cleaning capability across different suction settings: Standard, Strong, and Max.

4.3 Mopping Function

The M210B/M210P can also mop your floors. Attach the wet cloth mop or a disposable wipe to the wipe holder and then attach it to the robot. The robot will then perform a wet cleaning cycle.

4.4 Smart Control

Control your robot vacuum using the Lefant APP, remote control, or voice commands via Amazon Alexa or Google Home.

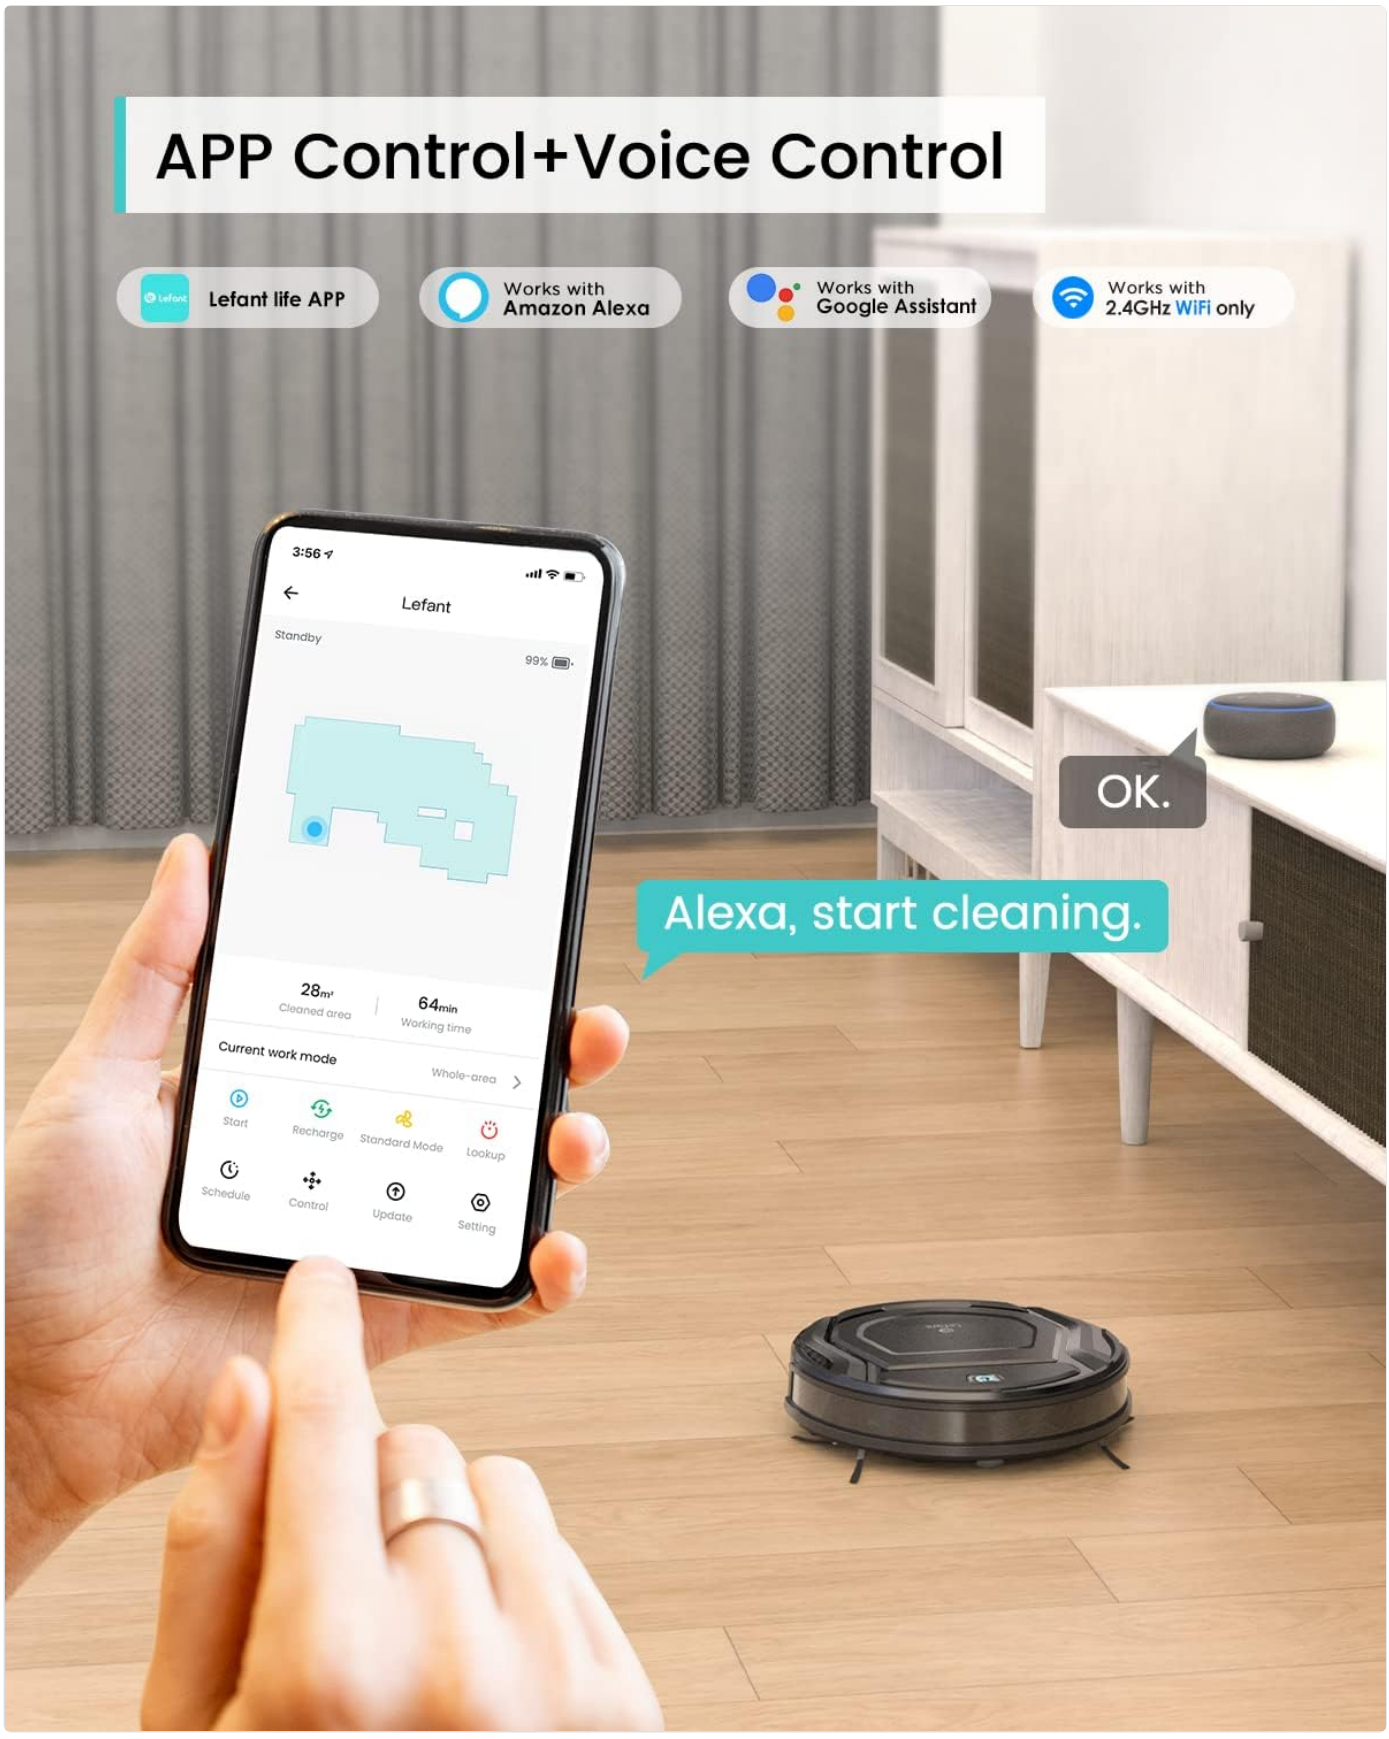


Image: A user interacting with the Lefant app on a smartphone to control the robot vacuum, with a voice assistant device in the background.

Your browser does not support the video tag.

Video: An official demonstration of the Lefant M210B robotic vacuum in action, highlighting its daily cleaning capabilities.

Your browser does not support the video tag.

Video: The official brand video for the Lefant M210 Pro, showcasing its features and benefits.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

5.1 Emptying the Dust Bin

The 500ml dust bin should be emptied after each cleaning cycle or when full. Press the release button to remove the dust bin, open it, and discard the contents. Close the dust bin securely and reinsert it into the robot.

5.2 Cleaning the Filter

The HEPA filter should be cleaned regularly using the provided cleaning brush. Tap the filter gently to remove dust. Replace the filter every 1-3 months depending on usage.

5.3 Cleaning Side Brushes

Check the side brushes for tangled hair or debris. Use the cleaning brush or scissors to remove any obstructions. Replace worn or damaged side brushes as needed.

5.4 Cleaning Sensors and Charging Contacts

Wipe the anti-collision infrared sensors and charging contacts on both the robot and the charging base with a clean, dry cloth to ensure proper function.



Image: The underside of the robot vacuum, highlighting its brushless suction port designed to prevent hair entanglement, contrasted with a typical tangled roller brush.

6. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery or not charged.	Place the robot on the charging base and ensure it is fully charged.
Robot does not charge.	Charging contacts are dirty or misaligned.	Clean the charging contacts on both the robot and the base. Ensure proper alignment.
Robot gets stuck frequently.	Obstacles in the cleaning path or dirty sensors.	Clear obstacles. Clean the robot's sensors.
Poor cleaning performance.	Full dust bin, dirty filter, or tangled side brushes.	Empty dust bin. Clean/replace filter. Clean side brushes.
Cannot connect to Wi-Fi/App.	Incorrect Wi-Fi password, 5GHz network, or robot too far from router.	Ensure correct 2.4GHz Wi-Fi network and password. Move robot closer to router. Reset Wi-Fi on robot if necessary.

7. Specifications

Feature	Detail
Brand	Lefant
Model Name	M210P
Special Features	Non-Stop Suction, Logical Navigation, Edge Cleaning, Scheduling, Pet Hair Pick Up
Color	Dimblack
Product Dimensions	11"L x 11"W x 2.99"H
Filter Type	Cartridge (HEPA)
Battery Life	Up to 120 minutes
Voltage	19 Volts (DC)
Dust Bin Capacity	500 Milliliters
Power Source	Battery Powered
Control Method	App, Remote, Voice (Amazon Echo, Google Home)
Item Weight	7.04 pounds
Manufacturer	Lefant
Country of Origin	China

8. Warranty and Support

Your Lefant M210B/M210P Robotic Vacuum Cleaner comes with a 12-month warranty.
For reliable customer service and support, please contact: support.us@lefant.com.

© 2024 Lefant. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B094XYRDLZ

More documents and user manuals: **https://manuals.plus/**