Philips S5466

Philips Series 5000 Electric Shaver S5466/18 User Manual

Model: S5466/18 | Brand: Philips

Introduction

This manual provides essential information for the safe and effective use of your Philips Series 5000 Electric Shaver S5466/18. Please read these instructions carefully before first use and keep them for future reference. This shaver is designed for a close yet gentle shave, suitable for both wet and dry use.



Image: Philips Series 5000 Electric Shaver S5466/18, showcasing its blue and black design with three rotary shaving heads.

Product Features

- **27 Self-Sharpening Blades:** Designed for an efficient and close shave, cutting hair right above skin level.
- **360° Flexible Heads:** These heads flex and pivot to maintain optimal skin contact, adapting to the contours of your face and neck for a comfortable shave.
- **Wet & Dry Use:** Enjoy a convenient dry shave or a refreshing wet shave with gel or foam, even in the shower.
- **50 Minutes Cordless Shaving:** A powerful Lithium-Ion battery provides up to 50 minutes of cordless shaving after a full charge.
- **SmartClick Precision Trimmer:** Easily attachable trimmer for precise styling of your mustache and sideburns.
- **SkinGlide Rings:** Equipped with micro-beads for a smoother glide over the skin, reducing friction and irritation.



Image: Close-up of the shaver head illustrating the unique rotary technology designed to capture hair growing in any direction.

Setup

1. **Initial Charge:** Fully charge the shaver before its first use. Connect the charging cable to the shaver and a power outlet. The battery indicator will show charging progress.
2. **Attachment:** Ensure the desired shaving head (rotary or precision trimmer) is securely attached to the shaver body.



Image: The bottom of the Philips shaver showing the charging port, with a charging cable connected.

Operating Instructions

1. **Power On:** Press the power button to turn on the shaver.
2. **Shaving Method:** Choose between a dry shave or a wet shave with foam or gel.
3. **Shaving Technique:** Gently move the shaver in circular motions over your skin. The 360° flexible heads will adapt to your facial contours.
4. **Precision Trimmer:** To use the SmartClick precision trimmer, remove the rotary shaving head and attach the trimmer. Use it for shaping sideburns or trimming a mustache.
5. **Power Off:** Press the power button again to turn off the shaver.

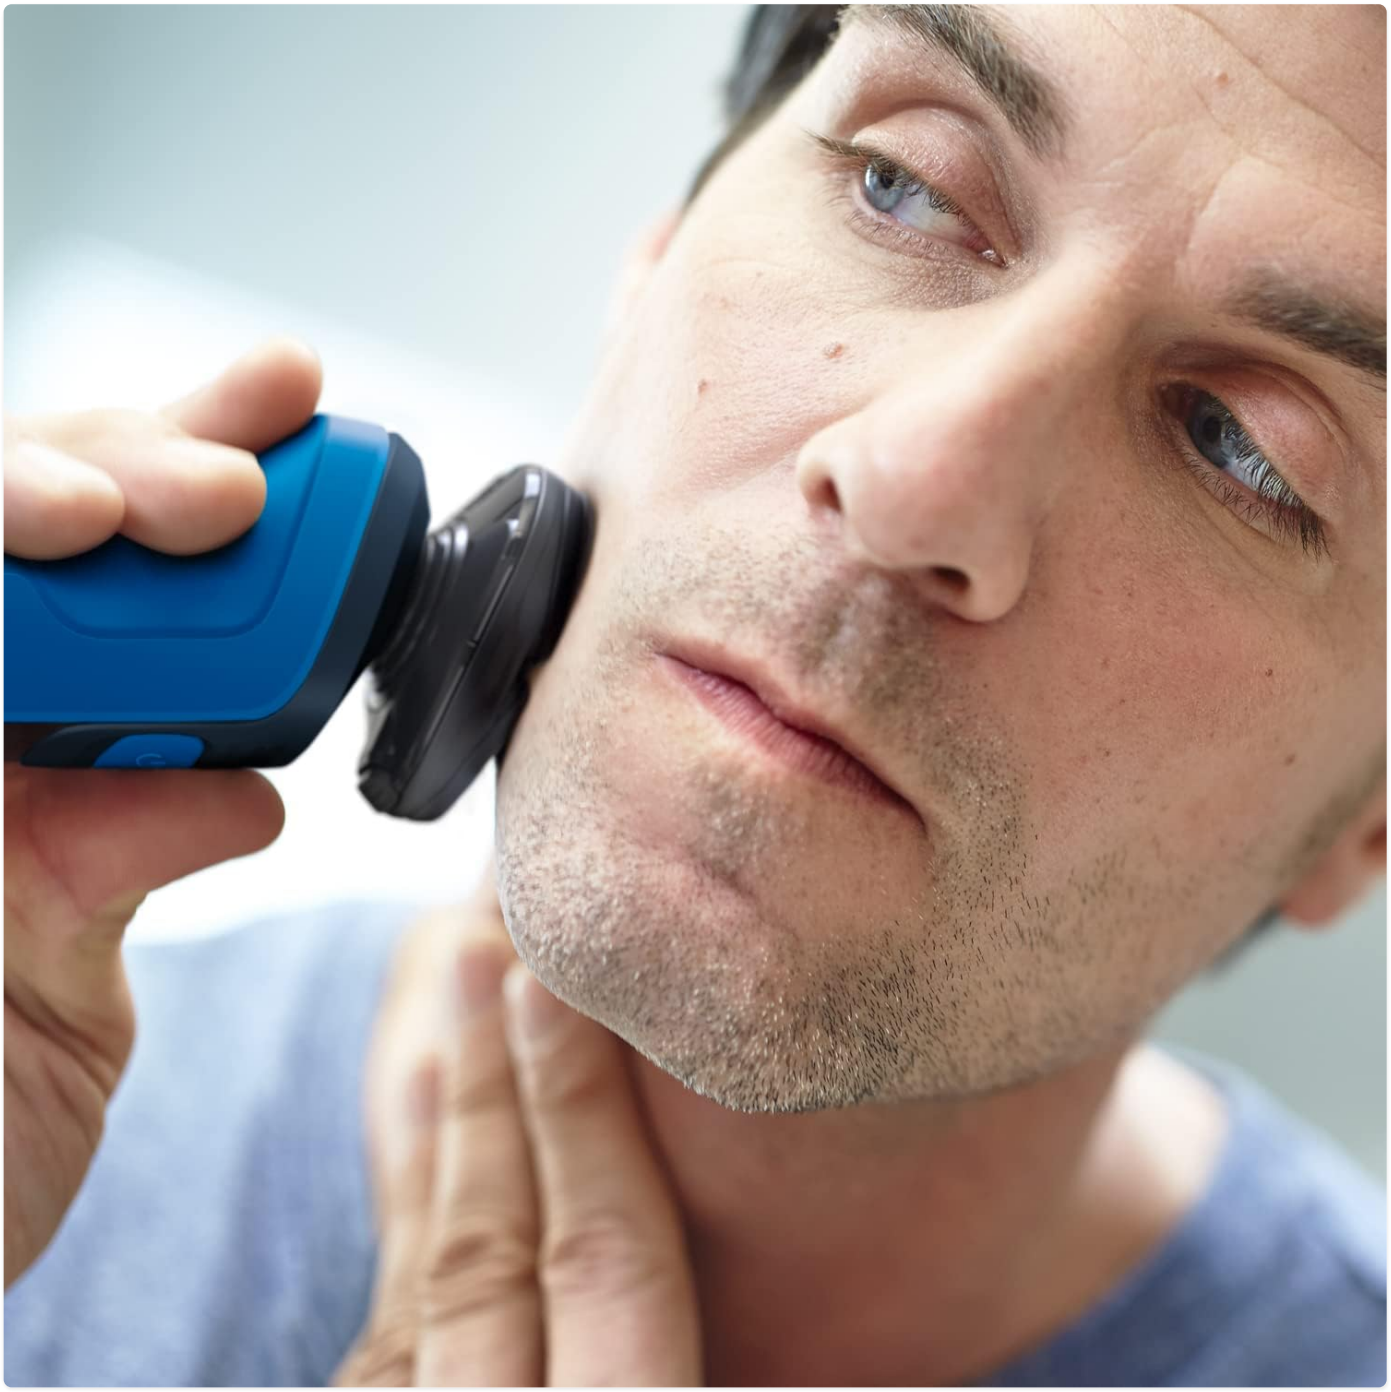


Image: A man using the Philips Series 5000 shaver on his face, demonstrating the rotary heads in action.



Image: The Philips Series 5000 shaver with the SmartClick precision trimmer attachment being used to trim sideburns.

Maintenance

- **Daily Cleaning:** Clean the shaver after each use. The shaver is waterproof, so you can rinse the shaving head under running water.
- **Deep Cleaning:** For a more thorough clean, detach the shaving head and rinse it thoroughly. Some users find cleaning with a little soap every 4 shaves beneficial.
- **Head Replacement:** Replace the shaving heads every two years to maintain optimal performance. Over time, blades can dull, affecting shave quality.
- **Storage:** Store the shaver in a dry place. If not using for an extended period, ensure the battery is charged and consider removing it if applicable (though for integrated Li-ion, this usually means just storing it charged).

Your browser does not support the video tag.

Video: A short demonstration of the Philips Series 5000 shaver, showing its design, rotary heads, and the attachable trimmer. This video

highlights the product's features and ease of use, including the quick head replacement for the trimmer.

Troubleshooting & Safety Warnings

- **Water Safety:** Do not use the device near water if it is not explicitly designed for wet use or while charging. This model is designed for wet and dry use, but always ensure the charging port is dry before connecting the charger.
- **Skin Sensitivity:** Individuals with sensitive skin should handle the flexible shaving heads with care to avoid irritation.
- **Charging:** Always charge the shaver according to the instructions in this manual. If the battery is low, the indicator will signal the need for charging.
- **Battery Removal:** If the shaver will not be used for a long period, it is recommended to extract the batteries if they are removable (for this model, the Lithium-Ion battery is integrated, so ensure it is stored with some charge).

Specifications

Feature	Detail
Model Number	S5466/18
Power Source	Battery (1 Lithium Ion, included)
Battery Life	50 Minutes
Blade Material	Stainless Steel
Special Feature	Waterproof (Wet & Dry use)
Head Type	Pivoting (360° flexible)
Included Components	Accessory (Precision Trimmer), Battery
Product Dimensions	7 x 13.5 x 19 cm; 283 g
Country of Origin	China

Warranty and Support

For warranty information and customer support, please refer to the official Philips website or contact your local Philips customer service center. Keep your proof of purchase for any warranty claims.
You can find more information and register your product at the official Philips website:www.philips.com

© 2024 Philips. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question