Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bonnlo ZDP-WWB

Bonnlo Pop Up Gazebo 3mx3m Instruction Manual

Model: ZDP-WWB

Important Safety Information

Please read and understand all instructions before assembling and using the Bonnlo Pop Up Gazebo. Failure to follow these instructions may result in injury or damage to the product.

- Always anchor the gazebo securely to the ground using the provided ground nails and ropes.
- Do not use the gazebo in strong winds, heavy rain, or snowy conditions. Disassemble and store the gazebo during adverse weather.
- Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- Adult assembly is required. Keep children and pets away during assembly and disassembly.
- Ensure all locking mechanisms on the frame legs are fully engaged before use.
- Do not hang heavy objects from the frame.

Package Contents

Verify that all components are present before beginning assembly:

- 1x Pop Up Gazebo Frame
- 1x Fabric Canopy Cover (Blue)
- 1x Carry Bag
- 8x Ground Nails (Stakes)
- 4x Ropes (Guylines)



Figure 1: Product Accessories. This image displays the fabric cover, ground nails, ropes, folded frame, and carry bag.

Specifications

- **Brand:** Bonnlo
- **Model:** ZDP-WWB
- **Dimensions (L x W x H):** 118.11" x 118.11" x 100.39" (approximately 3m x 3m x 2.5m)
- **Adjustable Height Positions:** 3 (ranging from 2.5m to 2.68m)
- **Frame Material:** White Powder Coated Alloy Steel
- **Canopy Material:** Water-proof 210D Oxford Fabric Cover
- **Color:** Blue
- **Water Resistance:** Yes
- **UV Protection:** 99% (190T polyester top with Alumina protection)
- **Weight:** Approximately 22 lbs



Figure 2: Gazebo Dimensions and Height Positions. This diagram illustrates the overall dimensions and the three available height settings for the gazebo.

Setup Instructions

Follow these steps for quick and easy assembly. Two people are recommended for optimal setup.

1. **Step 1: Remove Frame.** Take the folded iron frame out of the carry bag and place it in the desired setup location.
2. **Step 2: Unfold Frame.** With a person on each side, gently pull the frame outwards to partially unfold it. Do not fully extend yet.
3. **Step 3: Place Top Cloth.** Drape the fabric canopy cover over the partially unfolded frame. Align the four corners of the canopy with the frame's corners.
4. **Step 4: Fully Extend and Adjust Height.** Continue to pull the frame outwards until it is fully open. Press the push-button on each leg and slide the inner leg to the desired height. Ensure all four legs are locked at the same height.
5. **Step 5: Secure Gazebo.** Attach the ropes to the gazebo's corners and stake them into the ground at an angle. Use the ground nails to secure the gazebo's feet to the ground for maximum stability.

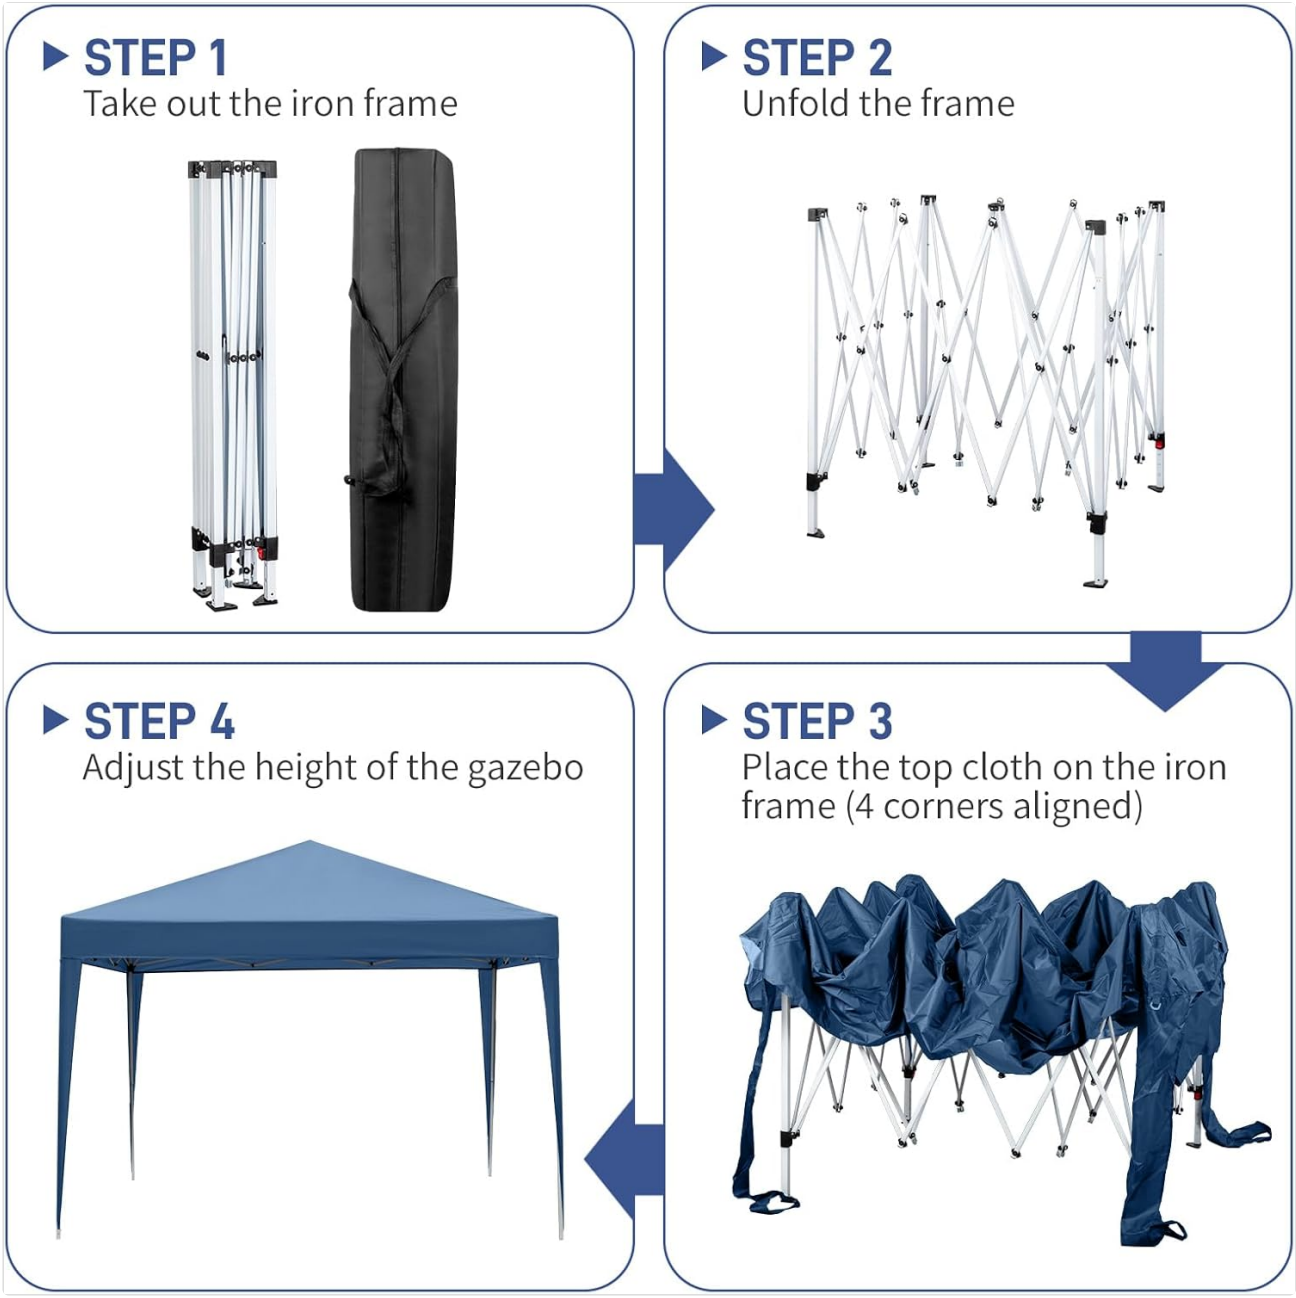


Figure 3: Gazebo Setup Steps. This image provides a visual guide for the assembly process.



Figure 4: Product Details. This image highlights key components such as height adjusters, stand base, iron frame, thumb button, and top tensioner.

Operating Instructions

- **Height Adjustment:** The gazebo offers three adjustable height positions. To change the height, locate the push-button on each leg. Press the button and slide the inner leg to the desired height setting. Ensure all four legs are securely locked at the same height for stability.
- **Securing the Gazebo:** For safe operation, always utilize the provided ground nails and ropes to anchor the gazebo. Attach the ropes to the designated points on the gazebo frame and stake them firmly into the ground at an appropriate angle to provide tension.
- **Usage Environment:** This pop-up gazebo is designed for temporary outdoor use. It is suitable for events such as parties, picnics, and beach outings. Avoid using it as a permanent structure or in extreme weather conditions.

Maintenance

- **Cleaning the Canopy:** Clean the fabric cover with a soft cloth, mild soap, and lukewarm water. Do not use

harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric and its waterproof coating. Rinse thoroughly and allow the canopy to air dry completely before folding and storing to prevent mildew.

- **Frame Care:** Periodically inspect the steel frame for any signs of dirt, rust, or damage. Clean any debris from the frame. If minor rust spots appear, clean them and apply a rust-inhibiting paint. Ensure all moving parts operate smoothly.
- **Storage:** When not in use, disassemble the gazebo according to the reverse of the setup instructions. Fold the frame carefully and place it, along with the dry canopy and accessories, into the provided carry bag. Store the gazebo in a cool, dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan.

Troubleshooting

- **Gazebo is unstable:** Ensure all four legs are fully extended and locked at the same height. Verify that all ground nails and ropes are properly installed and taut, anchoring the gazebo firmly to the ground. Do not use the gazebo in windy conditions.
- **Difficulty unfolding or folding the frame:** Check for any obstructions or bent parts in the frame's joints. Applying a small amount of silicone lubricant to the moving parts can help. Ensure two people are assisting with the process for easier handling.
- **Water pooling on the canopy:** Ensure the canopy is stretched tautly over the frame and properly secured at all attachment points. Adjust the height of the legs if necessary to create a slight slope for better water runoff. While the canopy is waterproof, excessive pooling can stress the fabric.

Warranty and Support

For warranty information, technical assistance, or to inquire about replacement parts, please contact Bonnlo customer service. Refer to your purchase documentation or the Bonnlo official website for specific contact details and warranty terms.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B095HPLHRV

More documents and user manuals: **https://manuals.plus/**