cosofme Cordless Automatic Hair Curler

User Manual: Cordless Automatic Hair Curler

Model: Cordless Automatic Hair Curler

Brand: cosofme

1. Introduction

Thank you for choosing the cosofme Cordless Automatic Hair Curler. This device is designed to provide convenient and efficient hair styling, allowing you to create beautiful curls anywhere, anytime. Please read this manual thoroughly before first use to ensure safe and optimal operation of your new hair curler. Keep this manual for future reference.

2. Safety Information

To reduce the risk of burns, electrocution, fire, or injury to persons, please observe the following safety precautions:

- Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Keep the cord away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- This appliance is for household use only.
- Do not operate if the cord or plug is damaged, if it is not working properly, or if it has been dropped or damaged.
- Keep out of reach of children.

3. Product Overview

The cosofme Cordless Automatic Hair Curler features a ceramic-coated heater and an intuitive LCD display for precise control.



The cosofme Cordless Automatic Hair Curler in teal, demonstrating its compact design and how it is held during use.

Components and Controls



Detailed diagram of the curler's components, including the ceramic-coated heater, U-shaped hair entrance, control buttons (Start, Adjustment, Power ON/OFF), LCD display showing temperature, timer, curl direction (L/R), and battery indicator.

- **Heater with Ceramic Coating:** Ensures even heat distribution and reduces hair damage.
- **U-shaped Curler Hair Entrance:** Guides hair smoothly into the curling chamber.
- **Start Button:** Initiates the curling process.
- **Adjustment Buttons (+/-):** Used to set temperature and time.
- **Power ON/OFF Button:** Turns the device on or off.
- **LCD Display:** Shows current temperature, timer settings, curl direction, and battery level.

4. Specifications

Feature	Specification

Product Dimensions	7.8 x 2.2 x 2.2 inches (20 x 5.3 x 5.3 cm)
Item Weight	13.58 ounces (385 Grams)
Power Source	Battery Powered
Battery Type	Lithium Polymer (included)
Battery Capacity	5200 mAh
Charging Time	3-5 Hours
Working Time	Up to 60 minutes
Material	Ceramic
Auto Shut-Off	10 minutes of inactivity



Image showing the dimensions of the curler: 20cm (7.87 inches) in length and 5.3cm (2.0 inches) in width.



Information graphic detailing the curler's battery specifications: 5200 mAh capacity, 3-5 hours charging time, 60 minutes working time, and 10 minutes auto shut-off.

5. Setup

Charging the Device

Before first use, fully charge the hair curler. The device is powered by a built-in 5200mAh Lithium Polymer battery.


1. Connect the provided USB charging cable to the charging port on the curler.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
3. The battery indicator on the LCD display will show charging progress.
4. A full charge typically takes 3-5 hours. Ensure the device is fully charged before initial operation for optimal performance.



Diagram illustrating the internal battery and the wireless charging dock, highlighting the 5200mAh battery capacity and the 10-minute auto shut-off feature.

6. Operating Instructions

Follow these steps to achieve desired curls:

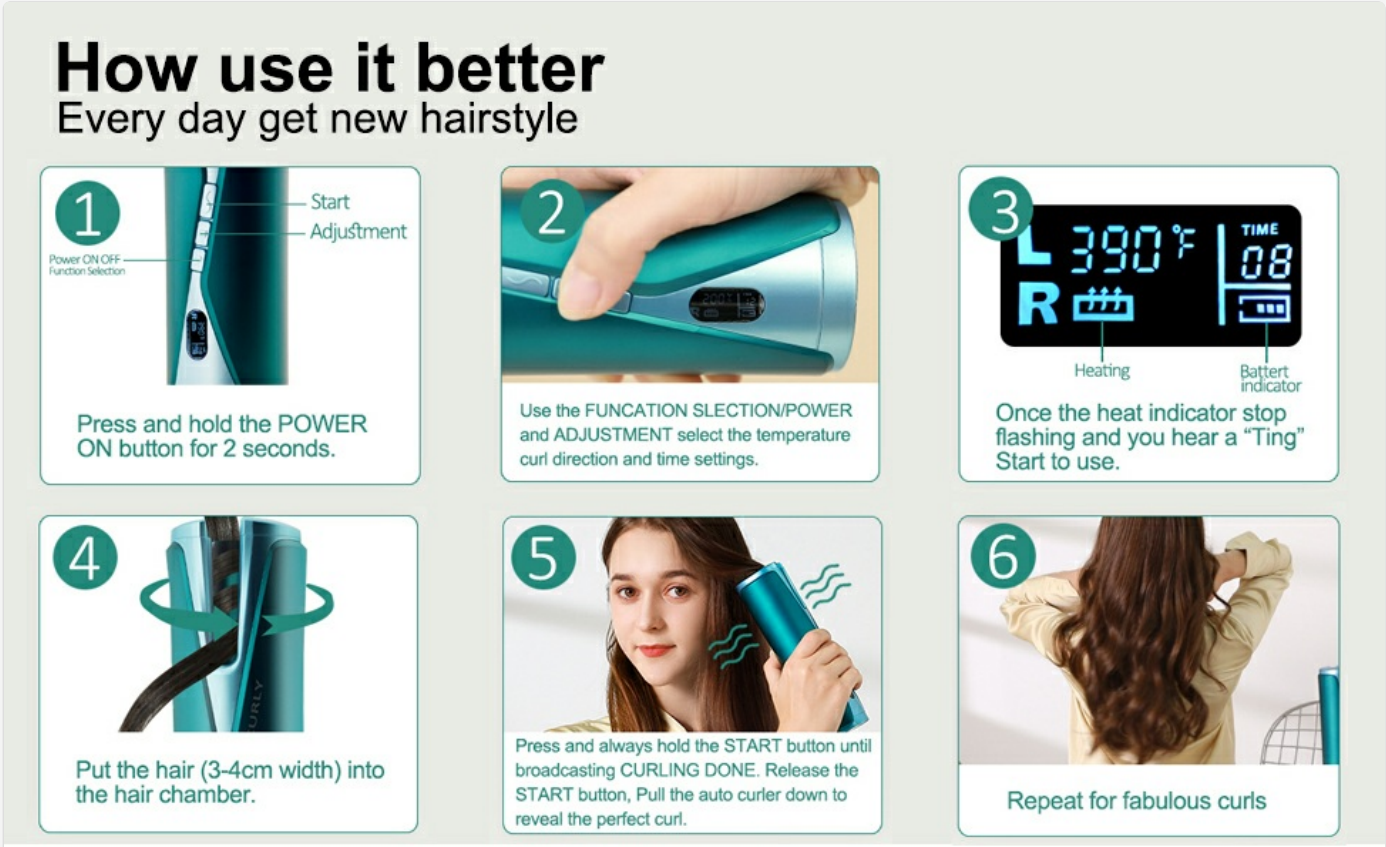

A six-step visual guide demonstrating how to use the automatic hair curler, from powering on and setting parameters to inserting hair and releasing the curl.

1. **Power On:** Press and hold the Power ON/OFF button for 2 seconds to turn on the device. The LCD display will illuminate.
2. **Adjust Settings:** Use the Adjustment buttons (+/-) to select your desired temperature, curling time, and curl direction (L for left, R for right).



Illustration of the five adjustable temperature settings: 160°C (320°F) for wavy curls, 180°C (360°F) for loose curls, and 200°C (390°F) for tight curls, with corresponding hair examples.

- **Temperature:** Choose from 160°C (320°F), 180°C (360°F), or 200°C (390°F) based on your hair type and desired curl tightness.
- **Time:** Select curling time from 6 to 12 seconds. Longer times result in tighter curls.
- **Curl Direction:** Select 'L' to curl hair to the left (recommended for hair on the right side of your face) or 'R' to curl hair to the right (recommended for hair on the left side of your face).



Close-up view of the curler's internal mechanism and the curl direction setting, indicating 'L' for left rotation (for hair on the right side of the face) and 'R' for right rotation.

3. **Heat Up:** Wait for the heat indicator to stop flashing and for the device to emit a "Ting" sound, indicating it has reached the set temperature.
4. **Insert Hair:** Take a section of dry hair, approximately 3-4 cm (1.2-1.6 inches) wide, and place it into the hair chamber. Ensure the hair is clean and tangle-free.
5. **Start Curling:** Press and hold the START button. The hair will be automatically drawn into the curling chamber. Continue holding the button until the device broadcasts "CURLING DONE" or the set time elapses.
6. **Release Curl:** Release the START button and gently pull the auto curler downwards to release the perfectly formed curl.
7. **Repeat:** Repeat steps 4-6 for all sections of your hair until you achieve your desired hairstyle.

7. Maintenance

Proper maintenance ensures the longevity and performance of your hair curler.

- **Cleaning:** Ensure the device is turned off and completely cooled down before cleaning. Use a soft, damp cloth to wipe the exterior. For the curling chamber, use a small brush (if provided) to remove any hair residue. Do not use

abrasive cleaners or immerse the device in water.

- **Storage:** Store the curler in a cool, dry place, away from direct sunlight and moisture. Ensure the cable is not wrapped tightly around the device, which could damage it.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

8. Troubleshooting

If you encounter issues with your hair curler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully (3-5 hours).
Hair gets tangled in the curler.	Hair section too large or tangled.	Ensure hair section is no more than 3-4 cm wide and is combed through before inserting.
Curls are not holding.	Incorrect temperature or time settings; hair not dry.	Increase temperature or curling time. Ensure hair is completely dry before curling.
Device automatically shuts off.	Inactivity or low battery.	This is a safety feature (10-minute auto shut-off). If not due to inactivity, recharge the battery.
LCD display is dim or not working.	Low battery.	Recharge the device.

If the problem persists after trying these solutions, please contact customer support.

9. Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the product packaging or contact cosofme customer support.
For technical support, troubleshooting assistance, or warranty claims, please visit the official cosofme store on Amazon or contact their customer service directly. You can find more information at: cosofme Amazon Store.

© 2024 cosofme. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question