Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ANGELS HORN H00501

ANGELS HORN H00501 Vinyl Record Player Instruction Manual

Model: H00501

1. Introduction

This manual provides essential instructions for the safe and efficient operation of your ANGELS HORN H00501 Vinyl Record Player. Please read this manual thoroughly before using the product and retain it for future reference. This Hi-Fi system includes a belt-drive turntable, built-in phono preamp, Bluetooth connectivity, and stereo bookshelf speakers, designed to deliver high-fidelity audio.

2. Safety Instructions

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the unit before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, level surface to prevent damage or injury.

3. Package Contents

Verify that all items listed below are included in your package:

- ANGELS HORN H00501 Turntable Unit
- Stereo Bookshelf Speakers (2 units)
- Dust Cover
- Platter
- Drive Belt
- Counterweight
- Anti-skating Weight
- Power Adapter
- RCA Audio Cable

- 45 RPM Adapter
- Instruction Manual

4. Product Overview

4.1 Turntable Components



Image: The ANGELS HORN H00501 turntable system, featuring the main turntable unit, two matching wood-finish bookshelf speakers, and

a vinyl record placed on the platter, ready for playback.

- **Platter:** The rotating disc where records are placed.
- **Tonearm:** Holds the cartridge and stylus, tracking the record grooves.
- **Counterweight:** Balances the tonearm and adjusts tracking force.
- **Anti-skating Mechanism:** Prevents the tonearm from being pulled towards the center of the record.
- **Cartridge (AT-3600L):** Converts mechanical vibrations into electrical signals.
- **Speed Selector:** Switch between 33 1/3 RPM and 45 RPM.
- **Volume Control:** Adjusts the output volume.
- **Dust Cover:** Protects the turntable from dust when not in use.

4.2 AT-3600L Cartridge

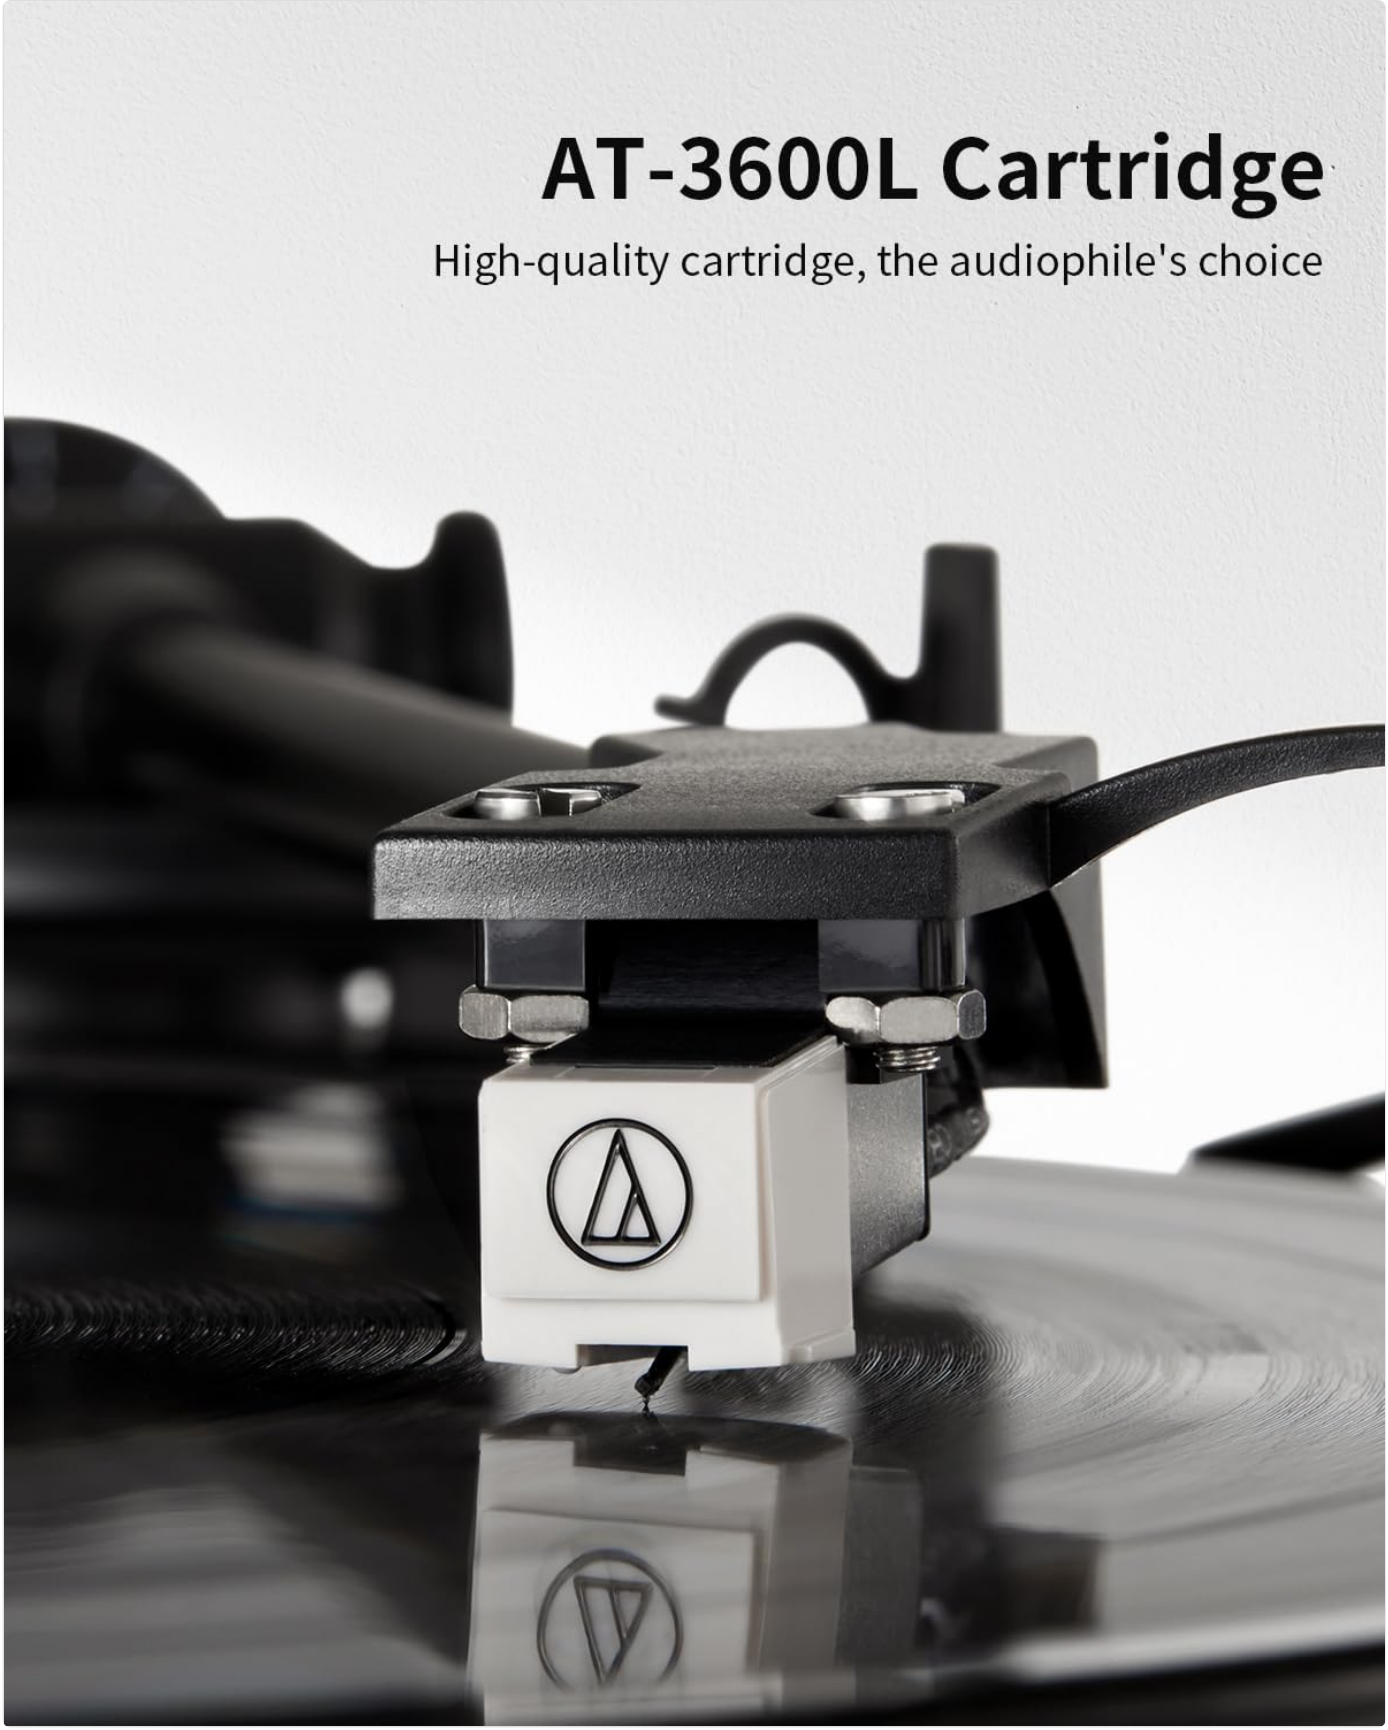


Image: A detailed view of the AT-3600L magnetic cartridge, showing the stylus tip resting on the grooves of a vinyl record. This cartridge is designed for high-quality audio reproduction.

4.3 Bookshelf Speakers



Image: An exploded view of a bookshelf speaker, highlighting its internal components including the woofer cone and tweeter, which work together to produce a full range of sound.

4.4 Rear Panel Connections



Image: The rear connection panel of the turntable, illustrating the RCA (R&L) output jacks, the Phono/Line switch, the DC 15V power input, and the speaker output terminals for connecting the included bookshelf speakers.

- **RCA (R&L) Jacks:** For connecting to an external amplifier or powered speakers.
- **Phono-Line Out Switch:** Selects between phono preamp output (for phono input on an amplifier) and line-level output (for aux input on an amplifier).
- **DC IN 15V:** Power input for the included adapter.
- **Speaker Output Terminals:** Connects to the passive bookshelf speakers.

5. Setup

5.1 Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Place the turntable on a stable, level surface, away from direct sunlight, heat sources, and strong vibrations.
3. Ensure there is enough space around the unit for proper ventilation.

5.2 Platter and Belt Installation



Image: A detailed view of the belt drive system, illustrating how the drive belt connects the motor pulley to the underside of the platter, enabling smooth rotation.

1. Place the platter onto the turntable spindle.
2. Locate the drive belt and carefully stretch it around the motor pulley and the inner rim of the platter.
3. Ensure the belt is not twisted and sits securely.

5.3 Counterweight and Anti-skating Adjustment



Image: A close-up of the tonearm assembly, highlighting the adjustable counterweight at the rear and the anti-skating dial, both crucial for precise stylus tracking.

1. Gently remove the stylus protector.
2. Install the counterweight onto the rear of the tonearm.
3. Balance the tonearm by adjusting the counterweight until it floats freely and horizontally.
4. Rotate the numbered ring on the counterweight to '0' without moving the counterweight itself.
5. Rotate the counterweight counter-clockwise to the recommended tracking force (typically 2.5-3.5 grams for the AT-3600L cartridge).
6. Attach the anti-skating weight to the anti-skating post and loop the thread over the support. Set the anti-skating force to match the tracking force.

5.4 Speaker and Power Connection

1. Connect the included bookshelf speakers to the Speaker Output Terminals on the rear of the turntable using the speaker wires. Ensure correct polarity (+ to + and - to -).
2. Connect the power adapter to the DC IN 15V port on the turntable and then plug it into a wall outlet.

6. Operating Instructions

6.1 Playing a Vinyl Record

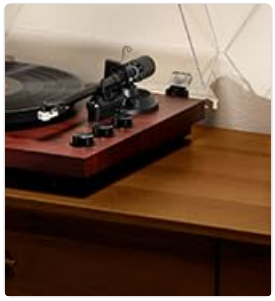


Image: A close-up of the turntable's control panel, showing the rotary knobs for selecting playback speed (33 1/3 or 45 RPM) and adjusting the overall volume output.

1. Place a vinyl record on the platter. For 45 RPM records, use the included adapter.
2. Select the appropriate speed (33 1/3 or 45 RPM) using the speed selector knob.
3. Lift the tonearm using the cueing lever.
4. Position the tonearm over the desired starting groove of the record.
5. Lower the tonearm gently using the cueing lever. The stylus will begin playing the record.
6. Adjust the volume using the volume control knob.
7. To stop playback, lift the tonearm with the cueing lever and return it to the tonearm rest.

6.2 Bluetooth Connectivity



Image: The turntable positioned next to a smartphone, which shows a music playback interface and Bluetooth settings, indicating the wireless connectivity feature of the record player.

1. Ensure the turntable is powered on.
2. Switch the turntable to Bluetooth mode (if applicable, or ensure no record is playing). The Bluetooth indicator light will typically flash.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "ANGELS HORN" or a similar name from the list of devices to pair.

5. Once paired, the Bluetooth indicator light will become solid. You can now stream audio from your device to the turntable's speakers.

Note: The built-in Bluetooth receiver is for input only, allowing you to play digital music through the turntable's speakers. It does not support output to Bluetooth headphones or external Bluetooth speakers.

7. Maintenance

7.1 Cleaning the Turntable

- Wipe the turntable and dust cover with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, abrasive cleaners, or waxes.
- For stubborn marks, lightly dampen the cloth with water, then wipe dry immediately.

7.2 Stylus Care

- Clean the stylus regularly using a soft brush, brushing gently from back to front.
- Avoid touching the stylus with your fingers.
- Replace the stylus approximately every 300-500 hours of playback, or if you notice a degradation in sound quality.

7.3 Record Care

- Handle records by their edges to avoid touching the grooves.
- Store records vertically in their sleeves, away from heat and direct sunlight.
- Clean records with a dedicated record brush or cleaning solution before each play to remove dust and static.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected to the unit and a working power outlet.
No sound or low volume	Speakers not connected, volume too low, or incorrect Phono-Line switch setting.	Check speaker connections. Increase volume. Ensure Phono-Line switch is set correctly for your setup (LINE for built-in speakers).
Skipping or distorted sound	Incorrect tracking force, anti-skating, dirty stylus/record, or unstable surface.	Adjust counterweight and anti-skating. Clean stylus and record. Place turntable on a stable surface.
Turntable speed is incorrect	Incorrect speed selected or drive belt issue.	Verify speed selector is set to 33 1/3 or 45 RPM. Check if the drive belt is properly installed and not stretched.
Bluetooth not pairing	Turntable not in pairing mode, device too far, or previously paired.	Ensure turntable is in Bluetooth mode. Move device closer. Forget previous pairing on your device and try again.

9. Specifications

- **Model:** H00501

- **Brand:** ANGELS HORN
- **Product Dimensions:** 16.54 x 14.17 x 4.92 inches
- **Item Weight:** 27 pounds
- **Maximum Rotational Speed:** 45 RPM (supports 33 1/3 RPM and 45 RPM)
- **Included Components:** Turntable, Speakers
- **Special Features:** Adjustable Counterweight, Built-In Phono Preamp, Built-In Bluetooth Receiver, Detachable Speakers
- **Material:** Wood
- **Compatible Devices:** Smartphone (for Bluetooth input)

10. Warranty and Support

ANGELS HORN products come with a standard warranty. For specific warranty details, please refer to the warranty card included in your package or visit the official ANGELS HORN website. For technical support, troubleshooting assistance, or any inquiries regarding your product, please contact ANGELS HORN customer service. Contact information is typically available on the product packaging or the official brand website.

Online Resources: For additional setup guides, FAQs, and support, please visit the ANGELS HORN Store on Amazon.

11. Product Video Overview

Your browser does not support the video tag.

Video: An overview of the ANGELS HORN H00501 Vinyl Record Player, demonstrating its features and components. This video provides a visual guide to the product's design and functionality.

© 2026 ANGELS HORN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B095SQ1GP5

More documents and user manuals: **https://manuals.plus/**