Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tefal DT9530

Tefal Pure Tex Handheld Garment Steamer DT9530 User Manual

Model: DT9530 | Brand: Tefal

1. Introduction

Welcome to the user manual for your new Tefal Pure Tex Handheld Garment Steamer DT9530. This versatile appliance is designed to simplify your garment care routine by offering four key functions: sanitising, de-wrinkling, cleaning, and adding fragrance to your textiles. With its powerful steam output and innovative multi-pad system, the Pure Tex steamer provides efficient and effective results for a wide range of fabrics and home textiles.

Please read this manual carefully before first use to ensure safe and optimal operation of your appliance. Keep this manual for future reference.





Image: The Tefal Pure Tex Handheld Garment Steamer DT9530, featuring a blue and white design with a large steaming head and a transparent water tank.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Use the appliance only for its intended use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Always turn off and unplug the appliance from the electrical outlet when filling with water or emptying, and when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Do not allow the cord to touch hot surfaces. Let the appliance cool completely before putting away.
- Always ensure the water tank is securely closed before operating.
- Steam is hot. Keep hands and face away from the steam outlet when the appliance is in use. Do not direct steam at people or pets.
- Use only demineralized or distilled water in the appliance to prevent limescale buildup and ensure optimal performance.

3. Product Overview

The Tefal Pure Tex Handheld Garment Steamer DT9530 comes with a unique multi-pad system designed for various fabric care needs.



Image: A diagram illustrating the Tefal Pure Tex steamer and its exclusive multi-pad system, showing the main unit, microfibre attachment, velvet attachment, steam bonnet, and fragrance diffuser.

Components:

- **Main Unit:** The handheld steamer body with integrated water tank and steam outlet.
- **Microfibre Attachment:** Designed to remove dust, hair, and lint from fabrics. It is reversible for different cleaning needs.
- **Velvet Attachment:** Provides better glide and assists in effective crease removal.
- **Steam Bonnet:** Used for delicate fabrics to prevent water drips and ensure only safe steam reaches the textile.
- **Fragrance Diffuser:** Allows you to add your favorite fragrance to your garments while steaming.

4. Setup

1. **Unpack the Steamer:** Carefully remove all components from the packaging.
2. **Fill the Water Tank:**
    - Ensure the steamer is unplugged.
    - Remove the water tank from the main unit.
    - Open the water tank cap and fill with up to 200ml of demineralized or distilled water. Do not overfill.
    - Close the cap securely and reattach the water tank to the steamer until it clicks into place.
3. **Attach Desired Accessory:** Select the appropriate attachment (Microfibre, Velvet, or Steam Bonnet) based on your garment care needs and securely attach it to the steaming head. For adding fragrance, insert the fragrance diffuser into its designated slot.
4. **Power On:** Plug the steamer into a suitable electrical outlet. The indicator light will illuminate, indicating the steamer is heating up.
5. **Wait for Heat-Up:** The steamer will be ready for use in approximately 25 seconds when the indicator light changes or stops blinking (refer to your specific model's indicator behavior).

5. Operating Instructions

The Tefal Pure Tex steamer offers multiple functions for comprehensive fabric care.

General Steaming Technique:

Hang the garment on a hanger. Hold the steamer vertically and gently press the steam trigger. Move the steaming head slowly over the fabric, from top to bottom. For best results, gently pull the fabric taut with your free hand.

Functions:

1. **Sanitise:**
   The powerful steam kills 99.9% of viruses, bacteria, and germs on textiles. Use the steamer directly on the fabric, ensuring thorough steam penetration for effective sanitisation. This is ideal for items like children's toys, upholstery, and bedding.

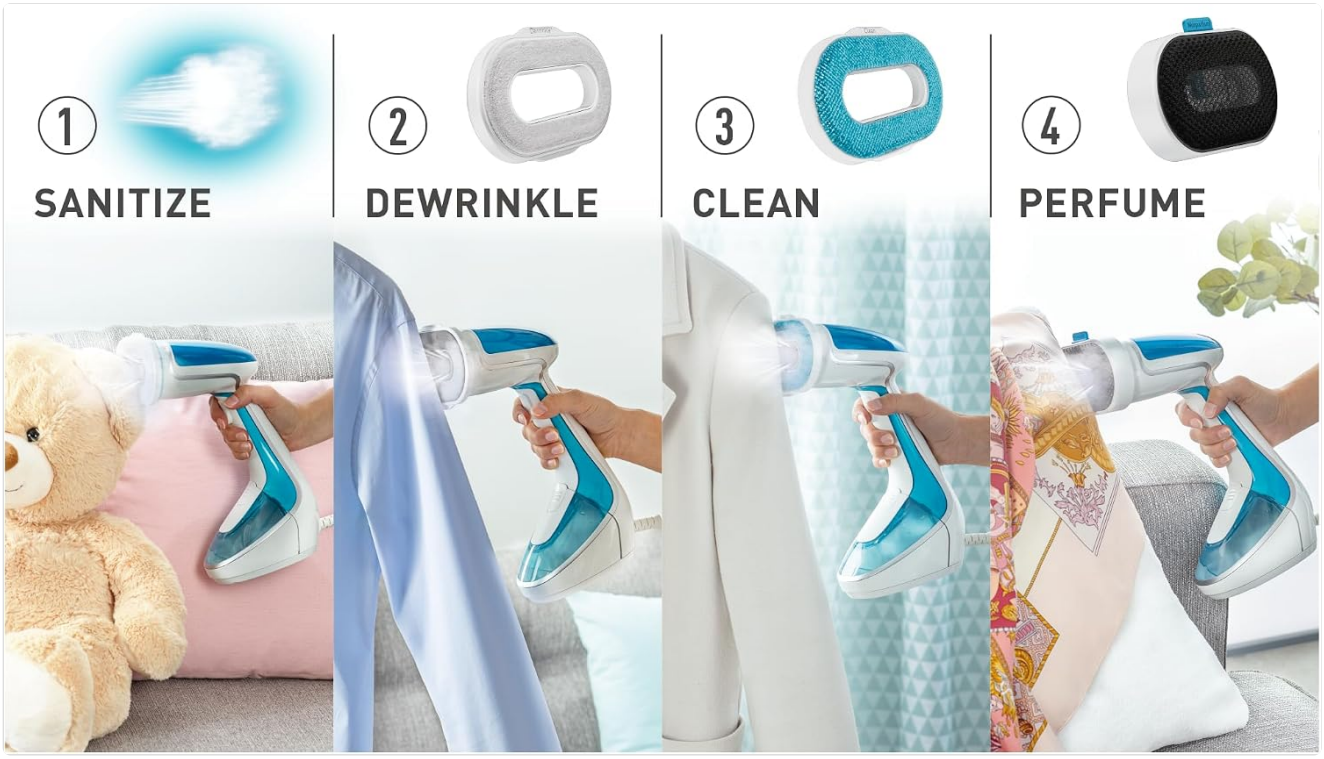


Image: A hand holding the steamer to sanitize a teddy bear, demonstrating the sanitizing function.

2. **Remove Creases (De-wrinkle):**

For smooth, wrinkle-free garments, use the steamer with the velvet attachment. The steamer provides a continuous steam output of up to 30 g/minute. For stubborn creases or heavier textiles, activate the 3X Power boost for up to 90 g/min steam output.



Image: A person using the Tefal Pure Tex steamer to quickly remove creases from a grey t-shirt hanging on a hanger, with other clothes in the background.

3. **Clean/De-lint:**
   Attach the microfibre pad to effectively remove dust, lint, and hair from your clothes and home textiles. The reversible design allows for versatile cleaning.

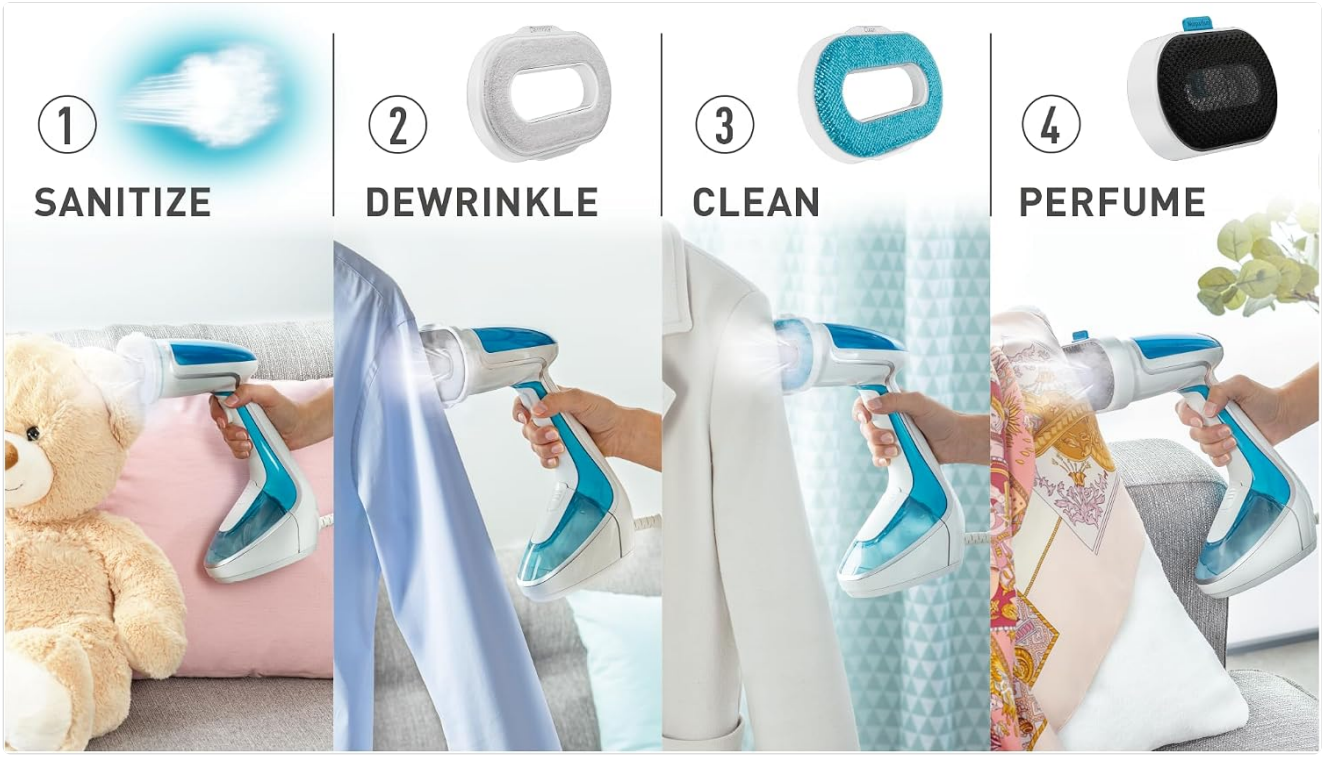


Image: A hand holding the steamer to clean a white jacket, illustrating the cleaning function.

4. **Add Fragrance (Perfume):**
   Insert your favorite fragrance into the dedicated diffuser. The steam will then infuse your garments with a fresh scent, leaving them smelling clean and revitalised.



Image: A close-up of hands inserting a fragrance capsule into the diffuser attachment of the steamer.

5. **Steaming Delicate Fabrics:**
   For delicate materials, use the steam bonnet attachment. This accessory ensures that only gentle, safe steam reaches your fabrics, preventing water drips and protecting sensitive textiles.



Image: A person using the Tefal Pure Tex steamer with the steam bonnet attachment on a delicate pink blouse, demonstrating its suitability for sensitive fabrics.

Product Demonstration Video:

Your browser does not support the video tag.

Video: An official demonstration of the Tefal Pure Tex DT9530 Handheld Garment Steamer, showcasing its 4-in-1 capabilities including sanitizing, cleaning, de-wrinkling, and perfuming various home textiles and garments.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your Tefal Pure Tex steamer.

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Empty any remaining water from the tank to prevent stagnant water and mineral buildup.
- **Clean Attachments:** The microfibre and velvet pads can be gently cleaned with mild soap and water. Allow them to air dry completely before reattaching or storing. The steam bonnet can also be rinsed.
- **Descaling:** The Tefal Pure Tex features an anti-calc system to minimize limescale buildup. To further prevent mineral deposits and ensure consistent steam, always use demineralized or distilled water. If you notice reduced steam output or

mineral residue, consult the full product manual for specific descaling instructions, though regular use of demineralized water should largely prevent this.

- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture. Ensure the water tank is empty and all attachments are clean and dry before storage.

7. Troubleshooting

If you encounter issues with your Tefal Pure Tex steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty or low. Appliance not heated sufficiently. Internal airlock or mineral buildup.	Refill water tank. Wait for the indicator light to show the appliance is ready. **If steam is slow, hold the steam trigger and shake the handset up, down, left, and right for 30 seconds to move water internally. If still slow, switch to high steam output and repeat.**
Water leaking or dripping from the steam head.	Appliance not hot enough. Overfilling the water tank. Using tap water.	Allow the steamer to fully heat up before use. Do not overfill the water tank. Use demineralized or distilled water. Ensure the steam bonnet is used for delicate fabrics.
Steamer not turning on.	Not plugged in correctly. Power outlet issue.	Check power cord connection. Try a different electrical outlet.
Attachments not staying on.	Not properly aligned or secured.	Ensure attachments are clicked firmly into place.

8. Specifications

Feature	Detail
Model Number	DT9530
Brand	Tefal
Power / Wattage	1700 W
Water Tank Capacity	200 Millilitres
Heat-up Time	25 Seconds
Continuous Steam Output	Up to 30 g/minute
Steam Boost	Up to 90 g/minute (in boost mode)
Product Dimensions	18 x 12 x 28.2 cm
Item Weight	1.23 kg
Material	Plastic


28.2cm
Clean
Tefal Pure tex
18cm
12cm

Image: A visual representation of the Tefal Pure Tex steamer with its dimensions labeled: 28.2cm height, 18cm length, and 12cm width.

9. Warranty and Support

Your Tefal Pure Tex Handheld Garment Steamer DT9530 is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.
For technical assistance, spare parts, or any questions not covered in this manual, please contact Tefal customer support. Contact information can typically be found on the Tefal official website or on your product packaging.
You can also visit the official Tefal website for more information and support:www.tefal.co.uk

© 2024 Tefal. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0963V9TWP

More documents and user manuals: **https://manuals.plus/**