Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AUNMAS AUNMAS9nd57mq3bg1334

AUNMAS Ceiling Fan Remote Control Kit User Manual

Model: AUNMAS9nd57mq3bg1334

1. Introduction

Thank you for choosing the AUNMAS Ceiling Fan Remote Control Kit. This kit provides a convenient wireless solution for controlling your ceiling fan and its integrated light. Designed for ease of use and installation, it enhances the functionality of your ceiling fan by allowing you to adjust fan speeds and light settings from anywhere in the room.
This manual will guide you through the installation process, explain the functions of the remote control, and provide troubleshooting tips to ensure optimal performance.

2. Product Components

Before you begin, please ensure all the following components are included in your package:

- 1 x Remote Control
- 1 x Receiver Unit
- 1 x Wall Mounting Plate for Remote Control
- 5 x Wire Nuts (Accessories)
- 1 x User Manual (this document)

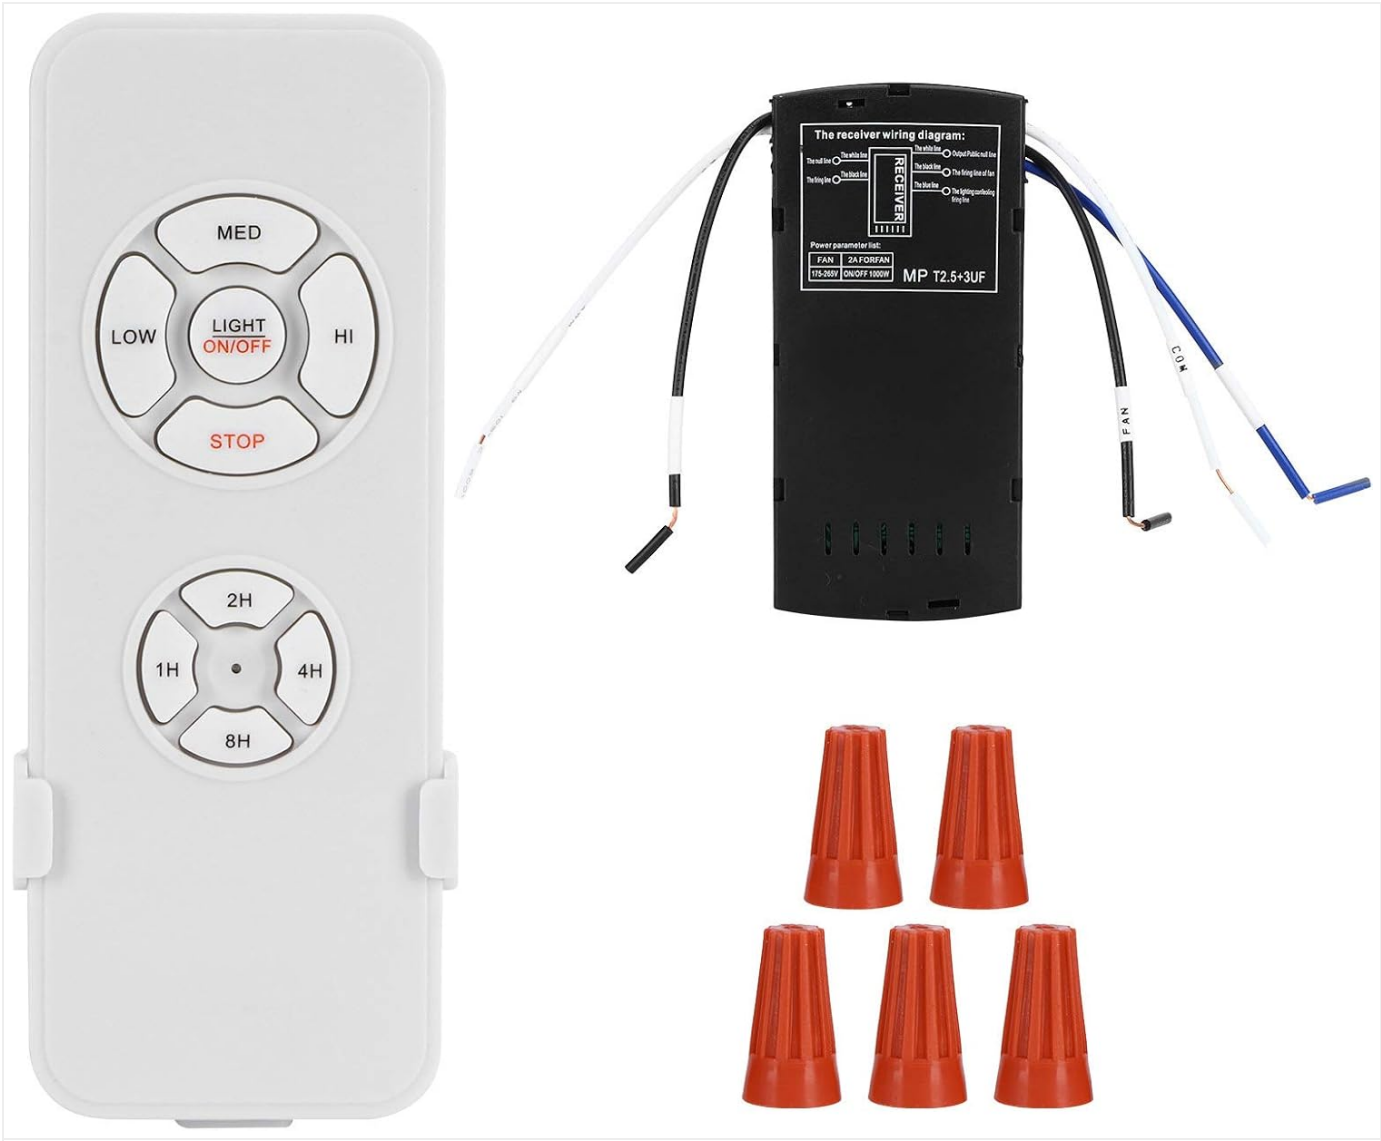


Image 2.1: All components included in the AUNMAS Ceiling Fan Remote Control Kit.

3. Specifications

Below are the technical specifications for the AUNMAS Ceiling Fan Remote Control Kit:

Feature	Specification
Power Supply Voltage	220 V
Maximum Power Consumption	<800 W
Current	10 A
Wireless Type	RF433
Remote Control Battery	2 x AAA batteries (not included)
Material	PC (Polycarbonate)
Product Dimensions (L x W x H)	14 x 13 x 3 cm (Remote and Receiver)
Item Weight	179 g



Image 3.1: Physical dimensions of the remote control and receiver unit.

4. Setup and Installation

WARNING: Before starting any electrical work, ensure the power supply to the ceiling fan circuit is turned OFF at the circuit breaker or fuse box. Failure to do so may result in electric shock or injury.

4.1 Wiring Method for the Receiver

The receiver unit connects directly into your ceiling fan's wiring. Follow the diagram and instructions carefully:

1. **Input Live Wire (Black Wire):** Connect this black wire from the receiver to the live wire from your household electrical supply.
2. **Input Neutral Line (White Line):** Connect this white wire from the receiver to the neutral line from your household electrical supply.
3. **Common Output Neutral Line (White Line):** Connect this white wire from the receiver to the neutral wire of your ceiling fan and light fixture.
4. **Output Fan Live Wire (Black Wire):** Connect this black wire from the receiver to the live wire of your ceiling fan motor.

5. **Output Light Wire (Blue Wire):** Connect this blue wire from the receiver to the live wire of your ceiling fan light.

Use the provided wire nuts to secure all connections. Ensure all connections are tight and insulated.



Image 4.1: Receiver wiring diagram.

4.2 Receiver Placement

Once wired, carefully tuck the receiver unit into the ceiling fan canopy or junction box, ensuring it does not interfere with the fan's operation or wiring. The compact design allows for easy integration.

4.3 Remote Control Battery Installation

The remote control requires 2 AAA batteries (not included). Open the battery compartment on the back of the remote and insert the batteries, observing the correct polarity (+/-). Close the compartment securely.

4.4 Initial Power On

After installation, restore power to the ceiling fan circuit at the breaker. The remote control is pre-paired with the receiver and should function immediately without additional pairing steps.

5. Operating Instructions

The remote control provides intuitive buttons for managing your ceiling fan and light. Familiarize yourself with the button layout:



Image 5.1: Remote control button layout.

- **LIGHT ON/OFF:** Press this button to toggle the ceiling fan light on or off.
- **LOW:** Sets the fan speed to low.
- **MED:** Sets the fan speed to medium.
- **HI:** Sets the fan speed to high.
- **STOP:** Turns the fan off.
- **1H** / **2H** / **4H** / **8H:**These buttons activate the fan timer function. Press the desired button to set the fan to automatically turn off after 1, 2, 4, or 8 hours, respectively.

The remote control operates using RF433 wireless technology, allowing signals to pass through walls for convenient control from various locations within your home or office.

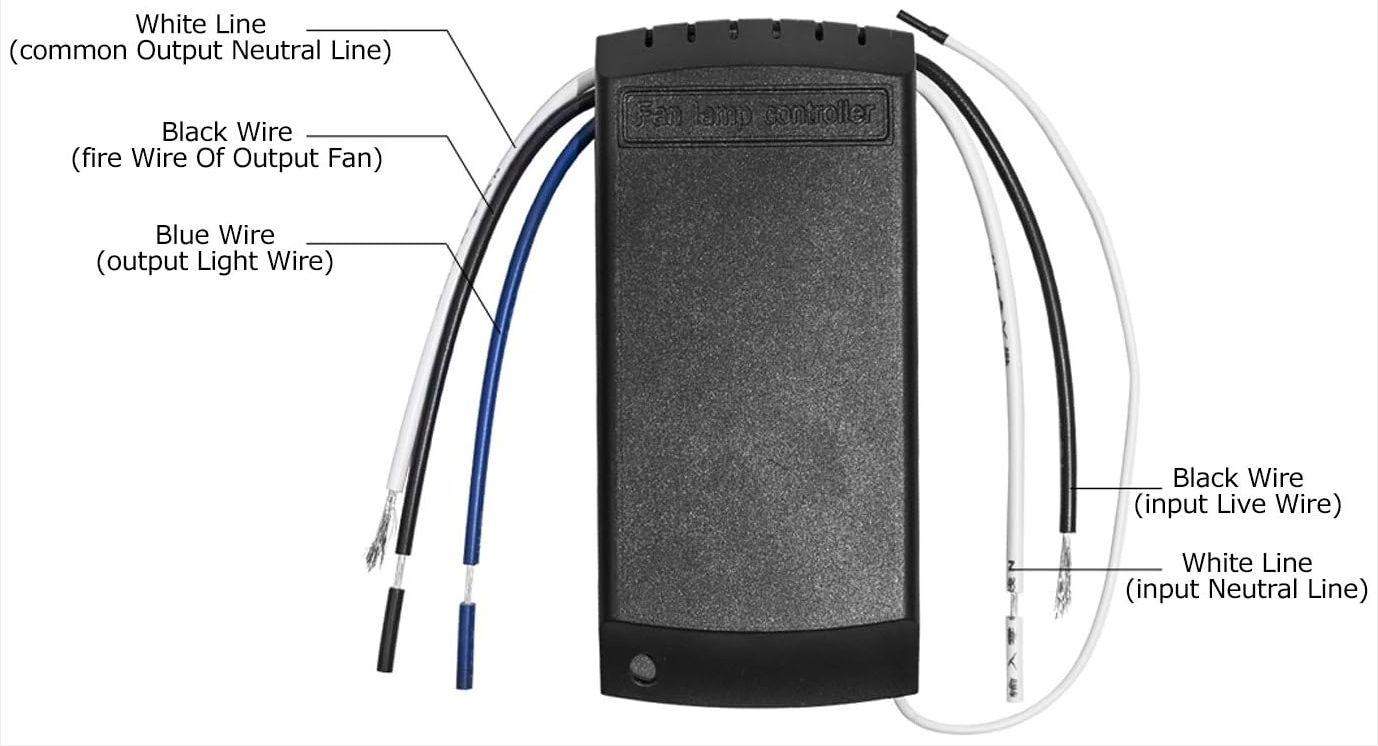


Image 5.2: Key features of the remote control system.

6. Maintenance

6.1 Battery Replacement

If the remote control's range decreases or it becomes unresponsive, it may be time to replace the batteries. Open the battery compartment on the back of the remote and replace the two AAA batteries with new ones, ensuring correct polarity. Dispose of old batteries responsibly.

6.2 Cleaning

To clean the remote control and receiver unit, wipe them with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the units in water. Keep the units dry to prevent damage.

7. Troubleshooting

If you encounter issues with your AUNMAS Ceiling Fan Remote Control Kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly installed batteries.	Replace the 2 AAA batteries in the remote control, ensuring correct polarity.
Fan or light does not turn on.	No power to the fan/receiver; incorrect wiring.	Check the circuit breaker. Verify all wiring connections to the receiver are secure and correct as per Section 4.1.
Fan operates, but light does not.	Light bulb issue; incorrect light wiring.	Check if the light bulb is functional and properly screwed in. Re-check the blue wire connection for the light (Section 4.1).
Remote range is poor.	Weak batteries; excessive interference.	Replace batteries. While the system is designed for good range, extreme interference sources might affect performance.

If the problem persists after trying these solutions, please contact AUNMAS customer support for further assistance.

8. Warranty and Support

For any product-related inquiries, technical support, or warranty information, please contact AUNMAS customer service. You can find more information and contact details by visiting the official AUNMAS store on Amazon:

Visit the AUNMAS Store

Please have your product model number (AUNMAS9nd57mq3bg1334) and ASIN (B096PHKXJZ) ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question