SHIWAKOTO SH-DVP23 MAX

SHIWAKOTO SH-DVP23 MAX DVD Player User Manual

Model: SH-DVP23 MAX

1. Introduction

Thank you for purchasing the SHIWAKOTO SH-DVP23 MAX DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Package Contents

Verify that all items listed below are included in your package:

- 1x SHIWAKOTO SH-DVP23 MAX DVD Player
- 1x Remote Control (Batteries not included)
- 1x HDMI Cable
- 1x RCA Cable
- 1x User Manual (This document)



SHIWAKOTO SH-DVP23 MAX DVD Player with included accessories: RCA cable, HDMI cable, and remote control.

2. Important Safety Instructions

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following precautions:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. Product Components Overview

Familiarize yourself with the various parts of your DVD player.

Front and Rear Panels



Front and rear panel overview of the SHIWAKOTO SH-DVP23 MAX DVD Player, highlighting ports and controls.

Front Panel Controls:

- **POWER Button:** Turns the unit on or off.
- **Digital Display:** Shows playback time, track number, and other status information.
- **Disc Tray:** For inserting DVDs and CDs.
- **PLAY/PAUSE Button:** Starts or pauses playback.
- **PREVIOUS/NEXT Buttons:** Skips to the previous or next track/chapter.
- **USB Port:** For connecting USB flash drives for media playback.
- **VOLUME Knob:** Adjusts the output volume.
- **MIC 1/MIC 2 Jacks:** Inputs for microphones.

Rear Panel Connections:

- **AC IN:** Power input.

- **HDMI Output:** Connects to a TV or monitor for high-definition video and audio.
- **RCA (AV) Output:** Connects to older TVs or audio systems using composite video and stereo audio cables.

4. Setup Instructions

Follow these steps to connect your DVD player to your television or audio system.

Connecting to a TV/Monitor

You have two primary options for connecting the DVD player to your display:

Option 1: HDMI Connection (Recommended for HD Quality)

1. Ensure both the DVD player and your TV are powered off.
2. Connect one end of the included HDMI cable to the **HDMI Output** port on the rear of the DVD player.
3. Connect the other end of the HDMI cable to an available **HDMI Input** port on your TV or monitor. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
4. Plug the power cord into the DVD player's **AC IN** port and then into a power outlet.
5. Power on your TV and select the corresponding HDMI input source.
6. Power on the DVD player. You should see the SHIWAKOTO logo or a standby screen on your TV.

Option 2: RCA (AV) Connection (For Standard Definition)

1. Ensure both the DVD player and your TV are powered off.
2. Connect the red, white, and yellow plugs of the included RCA cable to the corresponding colored **RCA Output** jacks on the rear of the DVD player.
3. Connect the other end of the RCA cable to the corresponding colored **RCA Input** jacks on your TV.
4. Plug the power cord into the DVD player's **AC IN** port and then into a power outlet.
5. Power on your TV and select the corresponding AV input source (often labeled AV, Video, or Composite).
6. Power on the DVD player. You should see the SHIWAKOTO logo or a standby screen on your TV.



Diagram illustrating HDMI and RCA connection options for the SHIWAKOTO SH-DVP23 MAX DVD Player.



Rear view of the SHIWAKOTO SH-DVP23 MAX DVD Player showing HDMI and RCA output ports for connection to a display.

5. Operating Instructions

This section details the basic functions and operations of your DVD player.

Disc Playback (DVD/CD)

1. Power on the DVD player and your TV.
2. Press the **OPEN/CLOSE** button on the remote or the front panel to open the disc tray.
3. Place a DVD or CD onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. The player will automatically begin reading the disc. Playback should start shortly.
6. Use the **PLAY/PAUSE**, **STOP**, **PREVIOUS**, **NEXT**, **FAST FORWARD**, and **REWIND** buttons on the remote control to manage playback.

This DVD player is **Region Free** and supports various disc formats including DVD/DVD-9/DVD-R/DVD-RW/CD/CD-R/CD-RW/SVCD/VCD/EVD. **Note: Blu-ray discs are not supported.**



The SHIWAKOTO SH-DVP23 MAX DVD Player supports 1080p Full HD, Dolby Digital, and is All Region compatible.



The SHIWAKOTO SH-DVP23 MAX DVD Player supports various media formats for premium experience.

USB Media Playback

The DVD player features a USB port for playing digital media files.

1. Insert a USB flash drive into the **USB Port** on the front panel.
2. The player should automatically detect the USB drive and display its contents. If not, use the remote control's **SOURCE** or **USB** button to switch to USB mode.
3. Navigate through your files using the remote control's arrow keys and**ENTER** button.
4. Select a file to begin playback.

Supported USB file formats include: Video (AVI [Xvid, MP4V, MPEG-1], MPG, DAT, VOB), Audio (ASF, WMA, MPEG-Audio [MP3, MP2, MP1]), and JPEG image files. USB files up to 720p resolution are supported.



The SHIWAKOTO SH-DVP23 MAX DVD Player supports various audio, video, and picture formats from USB disk.

Using Microphones

The DVD player includes two microphone jacks for karaoke or vocal use.

1. Connect your microphones to the **MIC 1** and **MIC 2** jacks on the front panel.
2. Adjust the microphone volume using the dedicated **VOLUME** knob on the front panel.
3. For microphone audio output through an external sound system, connect the DVD player's RCA audio outputs (red and white) to your audio system's inputs. Microphone audio may not transmit via HDMI.



The SHIWAKOTO SH-DVP23 MAX DVD Player features dual microphone inputs and a volume knob for adjustment.


Close-up view of the microphone input jacks.



Close-up view of the volume adjustment knob.

Remote Control Operation

The included remote control provides full functionality for the DVD player. Insert two AAA batteries (not included) into the remote before use.

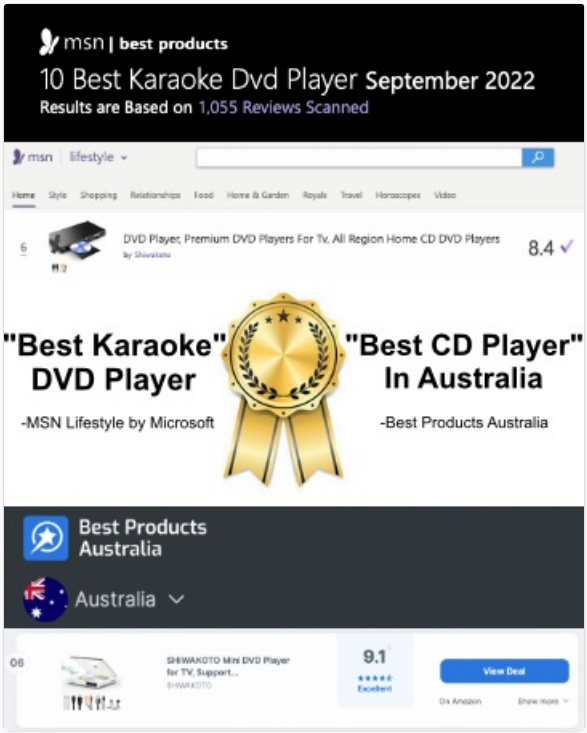

The remote control for the SHIWAKOTO SH-DVP23 MAX DVD Player.

Key remote functions include:

- **POWER:** Turns the player on/off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE, STOP:** Controls disc and USB playback.
- **PREVIOUS/NEXT:** Skips tracks/chapters.
- **VOL +/-:** Adjusts volume.
- **SETUP:** Accesses the system settings menu.
- **SOURCE/USB:** Switches input source to USB.
- **MUTE:** Mutes audio output.
- **ZOOM:** Zooms in on video playback.

- **REPEAT:** Repeats current track/chapter or entire disc.

6. Maintenance and Care

Proper care will ensure the longevity and optimal performance of your DVD player.

Cleaning the Unit

- Disconnect the power cord before cleaning.
- Use a soft, dry cloth to wipe the exterior of the player. Do not use liquid cleaners, abrasive cleaners, or solvents.
- Keep the ventilation openings clear of dust and debris.

Disc Care

- Handle discs by their edges to avoid fingerprints.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases to prevent scratches and dust accumulation.

7. Troubleshooting Guide

If you encounter issues with your DVD player, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working	Ensure power cord is securely plugged in. Test the outlet with another device.
No picture on TV	Incorrect TV input selected; Loose HDMI/RCA cable; TV/monitor off	Select the correct HDMI/AV input on your TV. Check cable connections. Ensure TV is on.
No sound	TV/player volume too low; Mute activated; Incorrect audio output settings	Increase volume on both player and TV. Deactivate mute. Check audio settings in player menu.
Disc not playing	Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format (e.g., Blu-ray)	Reinsert disc correctly. Clean disc. Ensure disc is a supported format (not Blu-ray).
USB drive not recognized	USB drive not formatted correctly; Unsupported file types; USB drive too large	Ensure USB drive is formatted to FAT32. Check file types are supported. Try a different USB drive.
Remote control not working	Batteries dead or inserted incorrectly; Obstruction between remote and player	Replace batteries. Ensure correct polarity. Remove any obstructions. Point remote directly at player.
Microphone sound too low	Microphone volume knob low; External audio system not connected or volume low	Adjust the MIC VOLUME knob on the player. Ensure RCA audio cables are connected to an external audio system and its volume is adjusted.

8. Specifications

Technical details of the SHIWAKOTO SH-DVP23 MAX DVD Player.

Feature	Detail
Brand	SHIWAKOTO
Model Name	SH-DVP23 MAX
Scanner Resolution	1920x1080 (1080p)
Compatible Devices	Active speaker, monitor, TV
Special Features	Anti-Shock, Compact, Multi-Format Playback, Region Free, Surround Sound
Audio Output Mode	Surround (7.1 channel speaker configuration)
Supported Disc Formats	DVD/DVD-9/DVD-R/DVD-RW/CD/CD-R/CD-RW/SVCD/VCD/EVD (Does not support Blu-ray)
Supported USB File Formats	Video: AVI [Xvid, MP4V, MPEG-1], MPG, DAT, VOB (up to 720p) Audio: ASF, WMA, MPEG-Audio [MP3, MP2, MP1] Image: JPEG
Total USB Ports	1
Connector Type	HDMI, RCA, USB
Power Source Type	Corded Electric
Product Dimensions	36 x 18.5 x 3 cm
Item Weight	948.01 g (2.09 Pounds)

9. Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact SHIWAKOTO customer service through the retailer where the product was acquired. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question