Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall X2N5

oneisall Dog Clippers and Paw Trimmer Kit User Manual

Model: X2N5

Safety Information

Use with caution to avoid hearing damage, cuts, and electrical hazards. Keep away from water sources and unplug when not in use.

Product Overview

The oneisall Dog Clippers and Paw Trimmer Kit is a comprehensive grooming solution designed for various pet hair types and lengths. This 2-in-1 kit provides both a powerful main clipper for general body grooming and a precise paw trimmer for delicate areas.



The oneisall Dog Clippers and Paw Trimmer Kit includes a main dog clipper, a smaller paw trimmer, various guide combs, scissors, a comb, and a cleaning brush.

Key Features

- **Best Salon:** Designed for thick hair with different hair types, including long hair. Includes 6 different sizes of guide combs for various lengths.
- **For Small Medium Large Dogs:** Standard gold dog clippers feature an LCD display for power level and 2 adjustable speeds for different coat thicknesses.
- **Dog Paw Trimmers for Small Areas:** Made of upgraded stainless steel fixed blade for sharpness and safety, ideal

for paws, eyes, ears, and butt.

- **Long-Lasting Battery & Rechargeable:** Built-in rechargeable USB with indicator light. Main clipper lasts 2.5 hours after 2.5 hours of charging; paw trimmer lasts 2 hours after 2 hours of charging.
- **What You Need in One Set:** Standard dog grooming clippers come with 6 guide guards (3 mm/6 mm/9 mm/12 mm/15 mm/18 mm). The kit also includes a cleaning brush, comb, and scissors.
- **Easy to Use:** Cordless operation for convenience, can be used while charging. Suitable for beginners.

Components and Identification

Familiarize yourself with the main components of your grooming kit.



This kit features a main dog clipper, a specialized paw trimmer, and an interchangeable small trimmer head for precise grooming of sensitive areas like face, ears, and paws.



Detailed dimensions for both the main dog clipper (Model X2) and the paw trimmer (Model C61) are provided for reference.

Setup

Charging the Clippers

1. Before first use, fully charge both the main dog clipper and the paw trimmer.

2. Connect the USB charging cable to the charging port on each clipper and plug the other end into a compatible USB power adapter (not included).
3. The main clipper's LCD display will show charging progress. The paw trimmer has an indicator light.
4. The main clipper requires approximately 2.5 hours for a full charge, providing 2.5 hours of use. The paw trimmer requires 2 hours for a full charge, providing 2 hours of use.



Both the main dog clipper and the paw trimmer are rechargeable via USB. The main clipper has a 2000mAh battery, and the paw trimmer has an 800mAh battery, providing long-lasting cordless operation.

Attaching Guide Combs

1. Select the desired guide comb length (3mm, 6mm, 9mm, 12mm, 15mm, or 18mm) for the main clipper.
2. Align the comb with the clipper blade and slide it firmly into place until it clicks.
3. Ensure the comb is securely attached before turning on the clipper.



The main dog clipper comes with six guide combs (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) to achieve desired hair lengths.

Operating Instructions

Preparing Your Pet

1. **Step 1: Bathe your dog first to keep the fur clean.** Ensure your pet is clean and dry before grooming. This helps the clippers glide smoothly and prevents blade dulling.
2. **Step 2: Smoothing the coat with a comb.** Thoroughly brush your pet's fur to remove any tangles, mats, or loose hair. This ensures an even cut and prevents pulling.



Before grooming, ensure your pet's fur is clean and smooth. Bathe your dog to remove dirt and tangles, then comb through the coat to prepare it for clipping.

Using the Main Dog Clipper

1. Turn on the main clipper using the power button.
2. Adjust the speed setting as needed. The clipper offers two speeds to accommodate different hair types and thicknesses.
3. **Step 3: Trimming body hair with clipper.** Hold the clipper flat against the pet's body and move it in the direction of hair growth for a smooth, even cut.
4. Regularly clear accumulated hair from the blade during grooming to maintain optimal performance.



The powerful motor of the main clipper allows for smooth and efficient trimming, even through thick pet hair.

Using the Paw Trimmer

1. Turn on the paw trimmer. This smaller trimmer is designed for precision work.
2. **Step 4: Shaving small areas with paw trimmer.** Use the paw trimmer for delicate and hard-to-reach areas such as around the paws, eyes, ears, and sanitary areas.
3. Use gentle, short strokes to carefully trim hair in these sensitive spots.

Maintenance

Cleaning the Blades

1. After each use, turn off the clipper and detach the blade.
2. Use the included cleaning brush to remove any trapped hair from the blade and the clipper body.
3. The blades are detachable for thorough cleaning under running water. Ensure they are completely dry before reattaching.
4. Apply a few drops of clipper oil (not included) to the blades regularly to maintain sharpness and smooth operation.



The blades of both clippers are detachable for thorough cleaning under running water, ensuring hygiene and longevity.

Blade Disassembly and Installation (Main Clipper)

1. **Disassembly:** Adjust the blade adjustment ring to 0.8mm. Gently push the blade forward and up to detach it from the clipper body.
2. **Installation:** Align the blade with the clipper body. Adjust the blade adjustment ring to 2.0mm. Push the blade firmly down until it clicks into place.



To disassemble the main clipper blade, adjust the ring to 0.8mm and pull the blade off. To install, adjust to 2.0mm and push the blade back

into place.

Blade Removal and Installation (Paw Trimmer)

1. **Removal:** Twist the blade head counter-clockwise and pull it upwards to remove.
2. **Installation:** Align the blade head with the trimmer body, push it down, and twist clockwise until it locks into place.



The paw trimmer blade can be removed by twisting counter-clockwise and pulling up, and installed by placing it back and twisting clockwise.

Troubleshooting

Issue	Possible Cause	Solution
Clipper not turning on / Low power	Battery is depleted.	Charge the clipper fully. Check the LCD display or indicator light for charging status.
Clipper pulling hair / Not cutting effectively	Blades are dull, dirty, or misaligned. Pet's fur is tangled or matted.	Clean the blades thoroughly and apply clipper oil. Ensure blades are properly installed. Brush and detangle pet's fur before grooming.
Excessive noise or vibration	Blades are dirty or not properly lubricated. Blade assembly is loose.	Clean and oil the blades. Ensure the blade is securely attached to the clipper body.
Battery not holding charge	Battery degradation or faulty charging cable/adapter.	Ensure you are using the correct USB charging cable. If the issue persists, contact customer support.

Specifications


Feature	Detail
Brand	oneisall

Feature	Detail
Model Number	X2N5
Item Weight	1.85 pounds (0.84 Kilograms)
Item Dimensions (LxWxH)	6.89 x 1.77 x 1.57 inches
Batteries	2 Lithium Ion batteries required (included)
Material	Stainless Steel
Color	Gold
Size	15 Piece Set
Specific Uses	Grooming and trimming hair on pets
Hair Type	Thick

Warranty and Support

Warranty Information

The oneisall Dog Clippers and Paw Trimmer Kit comes with a 2-year warranty, ensuring quality and reliability for your purchase.

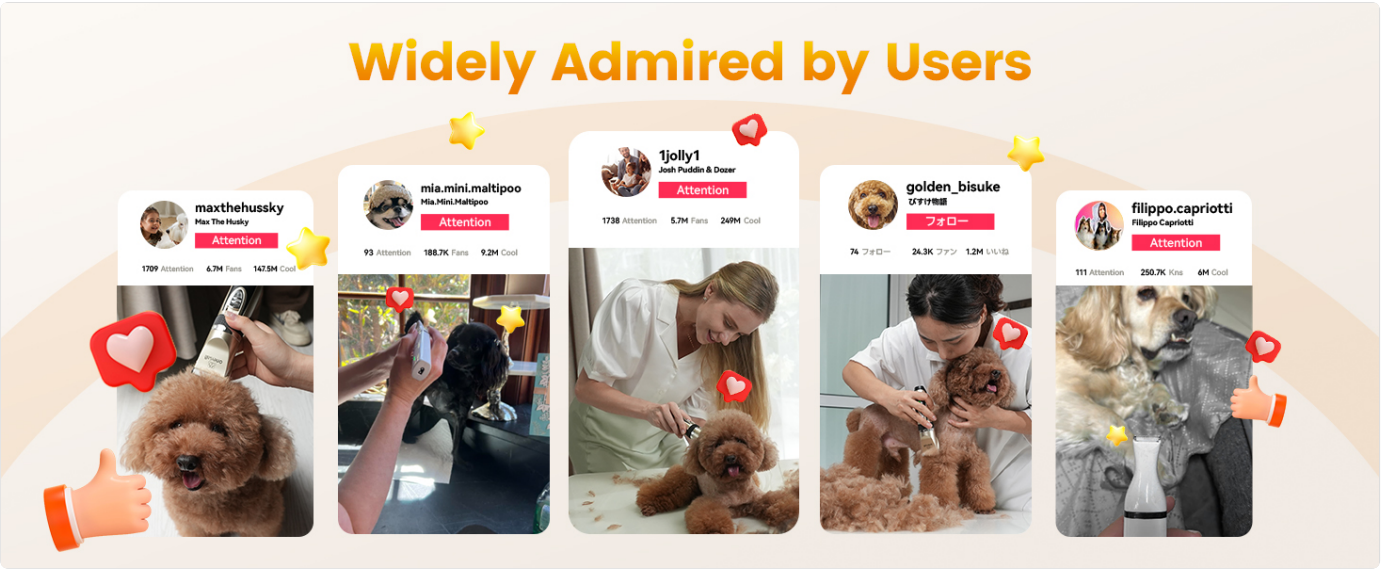

oneisall is committed to customer satisfaction, offering a 2-year warranty on this product.

Customer Support

For any inquiries, technical assistance, or support regarding your oneisall product, please contact our customer service team. 24-hour customer service is available to assist you.

Visit the official oneisall store for more information and products:oneisall Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B096VP4L1W

More documents and user manuals: **https://manuals.plus/**