Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Pickle Power LIP1359

Pickle Power PS3 Controller Battery Instruction Manual

Model: LIP1359

Introduction

Thank you for choosing the Pickle Power LIP1359 Replacement Battery for your Sony PS3 Dualshock 3 Wireless Controller. This manual provides essential information for the proper installation, operation, and maintenance of your new battery to ensure optimal performance and longevity.



Overview of the Pickle Power PS3 Controller Battery Replacement Kit.

What's in the Box


Your Pickle Power PS3 Controller Battery kit includes the following items:

- 2 x Pickle Power LIP1359 Replacement Batteries for PS3 Controller

- 1 x USB Charging Cable
- 1 x Tool Set (screwdriver and prying tool)



All components included in your battery replacement kit.

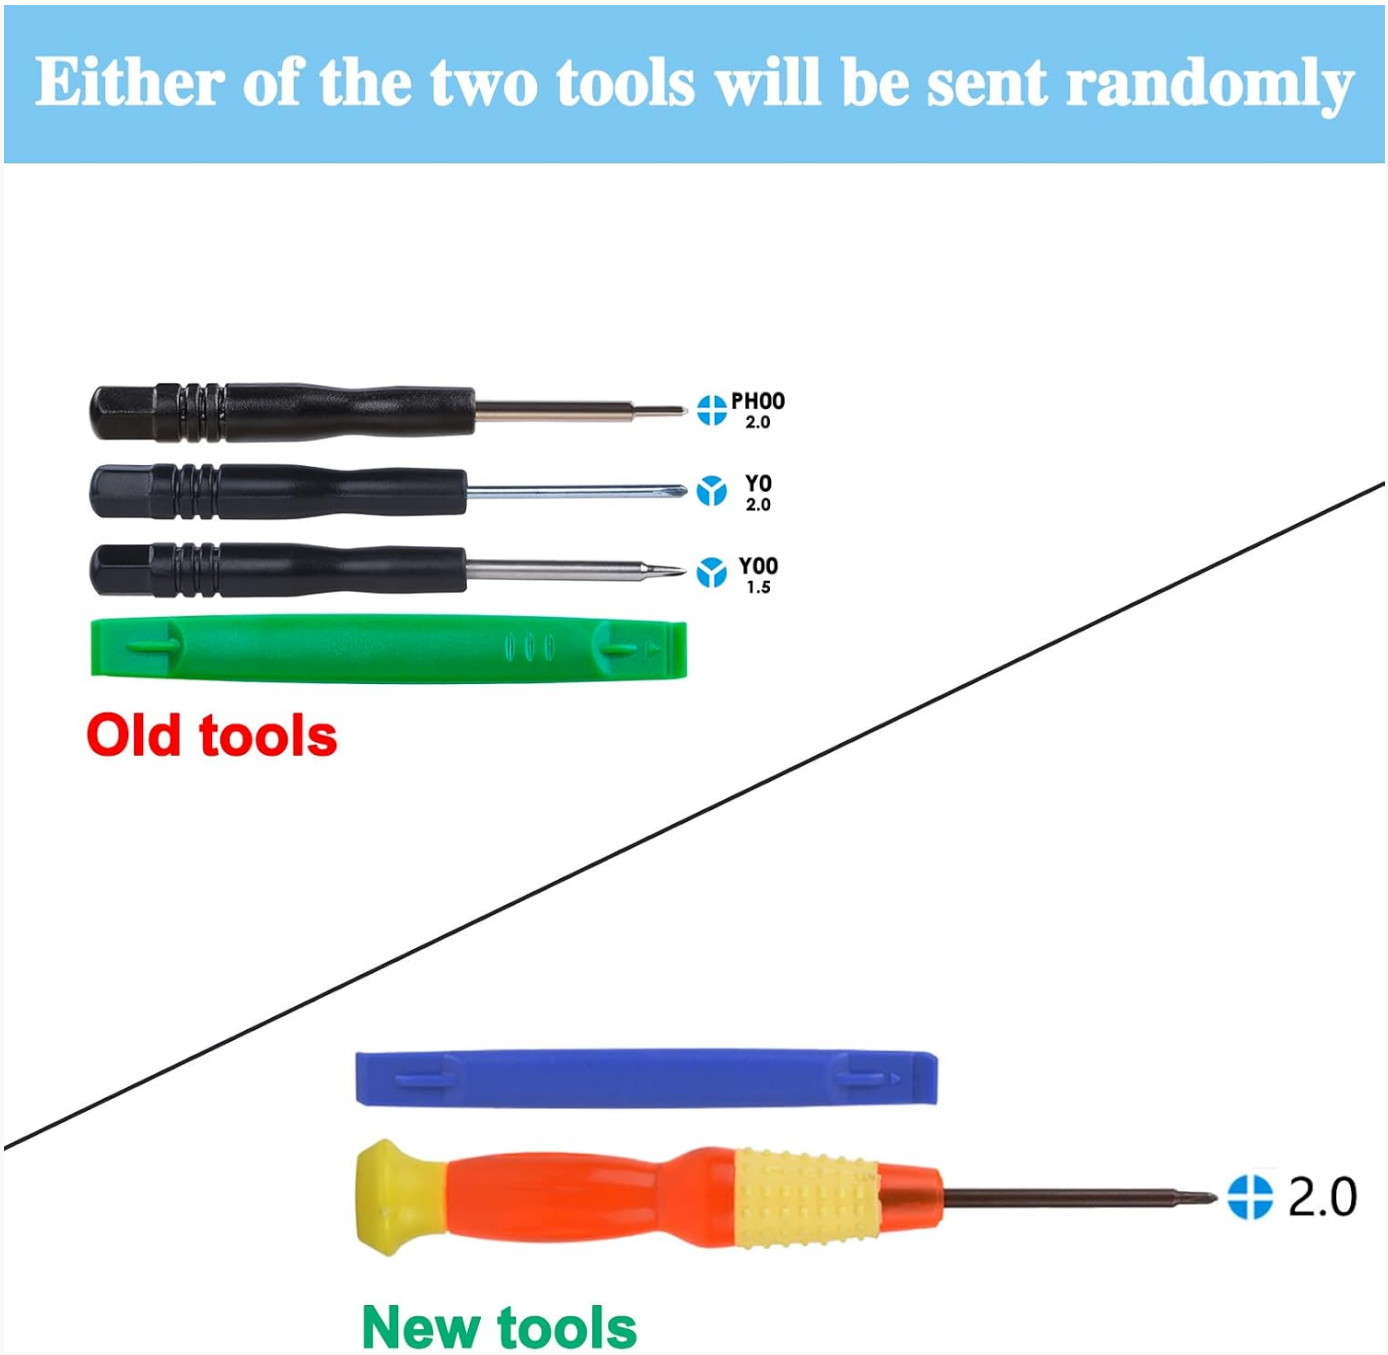

The tool set provided may vary in appearance.

Specifications

Key technical specifications for the Pickle Power LIP1359 battery:

Specification	Value
Model	LIP1359
Battery Type	Lithium Ion Rechargeable Battery Pack
Nominal Voltage	3.7V
Limited Charge Voltage	4.2V
Capacity	1800mAh (6.66Wh)
Compatible Controller Models	Sony PS3 Sixaxis Dualshock 3 Wireless Controller (CECHZC2E, CECHZC2U)

Battery Dimensions (approx.)	58mm x 36mm x 6mm (2.28 x 1.42 x 0.24 inches)
Connector Size (approx.)	4.5mm (0.18 inches)
Item Weight	0.705 ounces

Product infornmation



Model： LIP 1359

Capacity： 1800mAh

Standard Voltage： 3.7V

Limited Voltage： 4.2V

Size： 58mm*36mm*6mm

The interface size： 4.5mm

Applicable brand： PS3 wireless Controller Console

Detailed product information and dimensions of the battery.



Summary of battery specifications and compatibility.

Setup and Installation

Follow these steps to replace the battery in your PS3 Dualshock 3 controller. It is recommended to watch a video tutorial for visual guidance if you are unfamiliar with controller disassembly.

1. **Prepare Your Workspace:** Ensure you have a clean, well-lit area. Gather your new Pickle Power battery, the provided tool set, and your PS3 controller.
2. **Disassemble the Controller:** Carefully use the provided screwdriver to remove the screws from the back of your PS3 controller. Use the prying tool to gently separate the two halves of the controller casing. Be mindful of any ribbon cables connecting the halves.
3. **Locate and Disconnect Old Battery:** Once the controller is open, locate the existing battery. Carefully disconnect its plug from the circuit board.
4. **Remove Old Battery:** Remove the old battery from its compartment. Note that some original batteries may have a bracket or holder; the Pickle Power battery is designed for direct installation without needing this bracket.
5. **Install New Battery:** Insert the new Pickle Power LIP1359 battery into the battery compartment. Ensure the battery connector aligns correctly with the port on the controller's circuit board and gently push it in until it is securely connected.
6. **Reassemble the Controller:** Carefully align the two halves of the controller casing and snap them back together. Ensure no wires are pinched. Reinsert and tighten the screws using the provided screwdriver.

Important Note: The Pickle Power LIP1359 battery is designed for direct installation and does not require the internal bracket often found with original PS3 controller batteries. Do not attempt to force a bracket if your controller has one; simply install the battery directly.

for PS3

Big Plug

Big Connector for PS3 Controller



The battery features a compatible connector for PS3 controllers.

Using high-quality lithium batteries

Excellent chemical performance, stable structure and high capacity



Our battery allows for direct installation without an internal bracket.

Operating (Charging)

To charge your PS3 controller with the new Pickle Power battery, use the provided USB charging cable. Connect the small end of the USB cable to the controller's charging port and the larger end to a USB port on your PS3 console or a compatible computer. The controller's indicator lights will typically show charging status.

The battery features premium Grade A cells for a longer lifespan and has no memory effect, allowing you to charge it whenever convenient without reducing its overall capacity.

Maintenance

Proper care and maintenance will extend the life of your Pickle Power battery:

- Keep battery terminals clean to ensure good conductivity.
- Always store the battery in a dry place when not in use.
- Avoid fully discharging the battery frequently; partial discharges and recharges are generally better for lithium-ion battery health.

Troubleshooting

If you encounter issues with your Pickle Power battery, consider the following common troubleshooting steps:

- **Battery Not Charging:** Ensure the USB cable is securely connected to both the controller and the charging source. Try a different USB port or cable if available. Verify the controller's charging port is clean and free of debris.
- **Short Battery Life:** Ensure the battery is fully charged. If the issue persists after a full charge, ensure the battery was installed correctly and its connector is firm.
- **Controller Not Powering On:** Double-check that the battery is properly connected to the controller's circuit board. Ensure the controller halves are securely closed and all internal components are correctly seated.

If problems persist, refer to the safety information and contact customer support.

Safety Information

For your safety and to prevent damage to the battery or controller, please observe the following precautions:

- Do not short circuit the battery pack.
- Do not disassemble the battery pack.
- Do not expose the battery to high temperatures (e.g., direct sunlight, heat sources).
- Do not put the battery into water or fire.
- Charge the battery only with a specified charger (e.g., your PS3 console or a compatible USB charger).
- The product is CE certified and built with multiple circuit protections, including over-charging, short-circuit, high-temperature, and surge protection.



The battery is designed with multiple safety features.

Warranty and Support

Pickle Power is committed to providing high-quality and cost-effective products. Our batteries undergo demanding tests to comply with CE certification quality standards and are designed for compatibility with OEM products.

For any questions, concerns, or support needs regarding your Pickle Power battery, please refer to the seller's contact

information on the product listing or your purchase documentation. We adhere to the principle of quality first and customer first.

© 2025 Pickle Power. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09726K2LC

More documents and user manuals: **https://manuals.plus/**