Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WALKINGPAD WPP1F

WALKINGPAD P1 Foldable Walking Treadmill User Manual

Model: WPP1F

1. Introduction

Thank you for choosing the WALKINGPAD P1 Foldable Walking Treadmill. This manual provides essential information for the safe and efficient use of your new fitness equipment. Please read it thoroughly before operation and retain it for future reference.

The WalkingPad P1 is designed for home and office use, offering a compact, quiet, and convenient way to integrate walking into your daily routine. Its foldable design allows for easy storage in small spaces.

2. Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This includes:

- Ensure the treadmill is placed on a flat, stable surface.
- Keep children and pets away from the treadmill during operation.
- Do not use the treadmill if the power cord or plug is damaged.
- Wear appropriate athletic footwear.
- Do not exceed the maximum weight capacity of 100 kg.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.
- The integrated child lock feature helps prevent accidental use. Always activate it when not in use.

3. What's in the Box

Upon unpacking, please verify that all the following components are included:

- WALKINGPAD P1 Foldable Walking Treadmill
- Remote Control
- Power Cord
- User Manual (this document)

4. Setup

The WalkingPad P1 requires no assembly. Simply unfold it and connect to power.

4.1 Unfolding the Treadmill

1. Place the folded treadmill on a flat surface.
2. Gently lift the rear section of the treadmill until it fully extends and locks into place.
3. Ensure the treadmill is completely flat and stable before use.



Image: A person demonstrating the unfolding process of the WalkingPad P1, showing its flexible design for easy setup.

4.2 Connecting to Power

- Connect the power cord to the treadmill's power port.
- Plug the power cord into a suitable electrical outlet.

4.3 Storing the Treadmill

The WalkingPad P1 can be easily folded and stored in compact spaces, such as under a bed or sofa.

1. Ensure the treadmill is turned off and unplugged.
2. Gently lift the rear section and fold it towards the front until it is fully collapsed.
3. Utilize the integrated wheels for easy movement and storage.



Image: A person demonstrating how to store the WalkingPad P1 treadmill under a bed, highlighting its compact folded size.

5. Operating Instructions

5.1 Powering On/Off

- Press the power button on the remote control to turn the treadmill on or off.
- The LED display on the treadmill will illuminate when powered on.

5.2 Operating Modes

The WalkingPad P1 offers two operating modes:

- **Manual Mode (M):** Control the speed using the remote control or the KS Fit app.
- **Automatic Mode (A):** The treadmill automatically adjusts speed based on your walking pace, detected by sensors on the belt.

Switch between modes using the mode switch button on the remote control.

5.3 Speed Control

- **Remote Control:** Use the acceleration and deceleration buttons to adjust speed in Manual Mode.
- **KS Fit App:** Connect your smartphone to the treadmill via the KS Fit app to control speed and monitor workout data.
- **Foot Control (Automatic Mode):** In Automatic Mode, stepping on the front section of the belt increases speed, the middle maintains constant speed, and the rear section decreases speed.



Image: Detailed view of the smart remote control, showing the LED display for live workout data, acceleration/deceleration buttons, power button, and mode switch.

KS Fit Application

Ajustez facilement votre vitesse avec des incréments de 0,5 km/h – idéal pour les débutants et ceux qui souhaitent progresser à leur rythme.

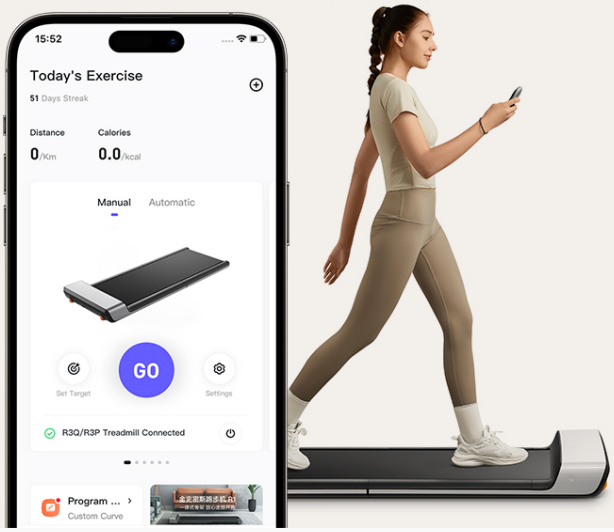


Image: Screenshot of the KS Fit application on a smartphone, displaying speed, distance, and calorie tracking for monitoring exercise progress.

5.4 Automatic Shutdown

The treadmill features an automatic shutdown function. If no user is detected on the belt for a short period (e.g., 2 seconds), the treadmill will automatically stop for safety.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your WalkingPad P1.

6.1 Cleaning

- Wipe down the treadmill surface with a damp cloth after each use.
- Regularly vacuum the area around and under the treadmill to prevent dust accumulation, which can affect performance.
- Do not use abrasive cleaners or solvents.

6.2 Belt Lubrication

The walking belt requires lubrication with silicone oil approximately every three months, depending on usage. Refer to the specific instructions provided with your silicone oil for application.

- Turn off and unplug the treadmill.
- Lift the edge of the walking belt and apply a small amount of silicone oil evenly to the center of the deck.
- Run the treadmill at a low speed for a few minutes to distribute the lubricant.

6.3 Belt Alignment

If the walking belt shifts to one side during use, it may need adjustment. Consult the detailed instructions in the full user manual (PDF) for belt alignment procedures.

7. Troubleshooting

This section addresses common issues you might encounter with your WalkingPad P1.

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not properly connected; power outlet issue.	Ensure power cord is securely plugged into both the treadmill and a working outlet. Check circuit breaker.
Unusual noise during operation (especially at higher speeds).	Lack of lubrication; loose components; treadmill placed on an uneven surface or soft mat.	Apply silicone oil to the belt. Ensure all components are secure. Place treadmill on a hard, flat surface.
Walking belt shifts to one side.	Belt misalignment; uneven walking pressure.	Adjust the walking belt according to the full user manual. Try to walk evenly on the belt.
Static electricity or minor shocks.	Dry environment; friction from the belt.	Increase humidity in the room. Ensure proper grounding. Regular belt lubrication can help.
KS Fit App data issues (e.g., incorrect distance, data loss).	App synchronization issues; treadmill disconnected from power before data transfer.	Ensure the app is open and connected during/after your workout to sync data. Avoid unplugging the treadmill immediately after use if data hasn't synced.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact customer support.

8. Specifications

Feature	Detail
Brand	WALKINGPAD
Model Number	WPP1F

Feature	Detail
Color	Silver Grey
Product Dimensions (L x W x H)	143.2 x 54.7 x 12.9 cm
Folded Size	82.2 x 54.7 x 12.9 cm
Item Weight	28 Kilograms
Material	Acrylonitrile Butadiene Styrene (ABS), Alloy Steel Frame
Maximum Speed	6 Kilometers per hour
Minimum Speed	1 Kilometers per hour
Speed Range	0.5 - 6 km/h
Maximum Recommended Load	100 Kilograms
Maximum Power	2 Horsepower
Input Power	735.5 Watt
Display Type	LED or LCD
Deck Length	120 Centimeters
Deck Width	41.5 Centimeters
Special Features	Compact Design, Lightweight, Foldable, Portable

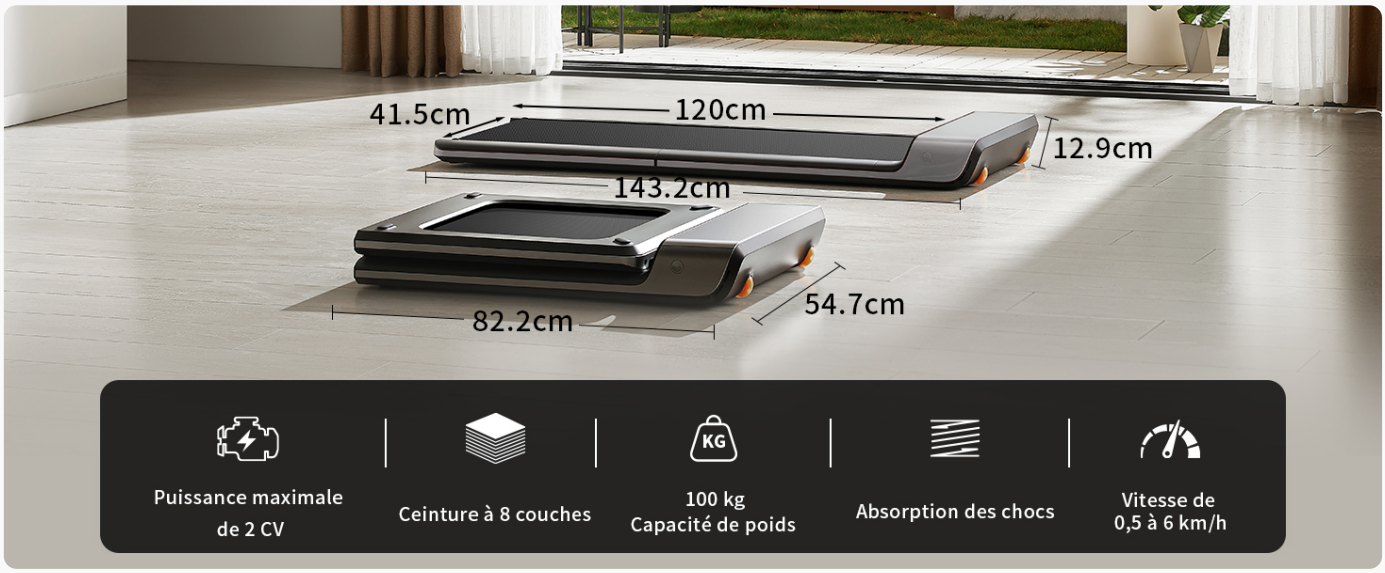


Image: Visual representation of the WalkingPad P1's dimensions in both folded and unfolded states, highlighting key specifications like motor power, shock absorption, and speed range.



Image: Diagram illustrating the eight layers of the shock-absorbing treadmill belt, including PVC, fabric, PET, EVA, polymer, MDF, rubber, and alloy support for enhanced comfort and joint protection.

9. Warranty and Support

9.1 Product Warranty

The WALKINGPAD P1 Foldable Walking Treadmill comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, neglect, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact WalkingPad customer support. Lifetime email support is provided for this product.

You can typically find contact information on the official WalkingPad website or through your retailer (e.g.,WalkingPad Official Store on Amazon).

When contacting support, please provide your product model (WPP1F) and a detailed description of the issue.

© 2026 WALKINGPAD. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09789DHP3

More documents and user manuals: **https://manuals.plus/**