Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MEAGEAL turntable-mini

MEAGEAL Mini Retro Bluetooth Speaker User Manual

Model: turntable-mini

1. Introduction

Thank you for choosing the MEAGEAL Mini Retro Bluetooth Speaker. This device combines vintage aesthetics with modern audio technology, offering a unique listening experience. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

2. Product Overview

2.1 Design and Features

The MEAGEAL Mini Retro Bluetooth Speaker features a classic phonograph design with a metallic finish. It is constructed with a high-quality anti-oxidation aluminum alloy base and a removable pure copper horn, making it a distinctive decorative piece. Despite its compact size, it delivers clear, crisp sound with enhanced bass through its bottom diaphragm design. Key features include:

- **Bluetooth 4.2 Connectivity:** For wireless audio streaming.
- **Multiple Playback Options:** Supports TF card, 3.5mm AUX input, and USB disk (requires a USB adapter).
- **Rechargeable Battery:** Built-in 3.7V 2000mA lithium battery for portable use.
- **Easy Controls:** Simple 3-button operation.



Image: Detailed view of the MEAGEAL Mini Retro Bluetooth Speaker, highlighting the antiqued delicate pattern, power & control button, vintage pure copper horn, and side ports including TF card slot, Micro USB, and Aux in.



Image: Illustration of the speaker's stereo sound capabilities, emphasizing deep bass from the bottom diaphragm.

2.2 Package Contents

Upon unboxing, please ensure all the following items are present:

- 1 x MEAGEAL Mini Retro Bluetooth Speaker
- 1 x User Manual (this document)
- 1 x 3.5mm AUX Cable
- 1 x Micro USB Charging Cable

3. Setup

3.1 Horn Installation

The pure copper horn is removable for packaging and transport. To install, align the nob on the horn's arm with the notch on the speaker's tone arm base. Gently push and twist until it is securely in place.



Image: Visual guide for installing the speaker's horn, illustrating the alignment of the nob and notch for a secure fit.

3.2 Charging the Speaker

Before first use, fully charge the speaker. Connect the included Micro USB charging cable to the speaker's Micro USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate. A full charge takes approximately 3 hours and provides about 6 hours of music playback.



Image: Information on the speaker's rechargeable battery, detailing approximately 3 hours for a full charge and 5-8 hours of playback time.

4. Operating Instructions

4.1 Power On/Off

Locate the power button on the speaker's control panel. Press and hold the button for a few seconds to power the speaker on or off. An audible prompt will indicate the power status.

4.2 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. The Bluetooth indicator light will flash, indicating it is

ready for pairing.

2. On your smartphone, tablet, or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Search for available devices and select "MEAGEAL Speaker" (or similar name) from the list.
4. Once connected, the Bluetooth indicator light will become solid, and an audible confirmation will be heard.



Image: Visual representation of a fast Bluetooth connection between a smartphone and the MEAGEAL speaker.

4.3 Music Playback Modes

The speaker supports four primary ways to play music:

- **Bluetooth:** Stream audio wirelessly from your paired device.
- **TF Card:** Insert a TF (MicroSD) card loaded with audio files into the TF card slot. The speaker will automatically detect and play music.
- **3.5mm AUX:** Connect an external audio source (e.g., MP3 player, laptop) using the included 3.5mm AUX cable.
- **USB Disk:** Connect a USB disk via a USB adapter (not included) to the USB port.

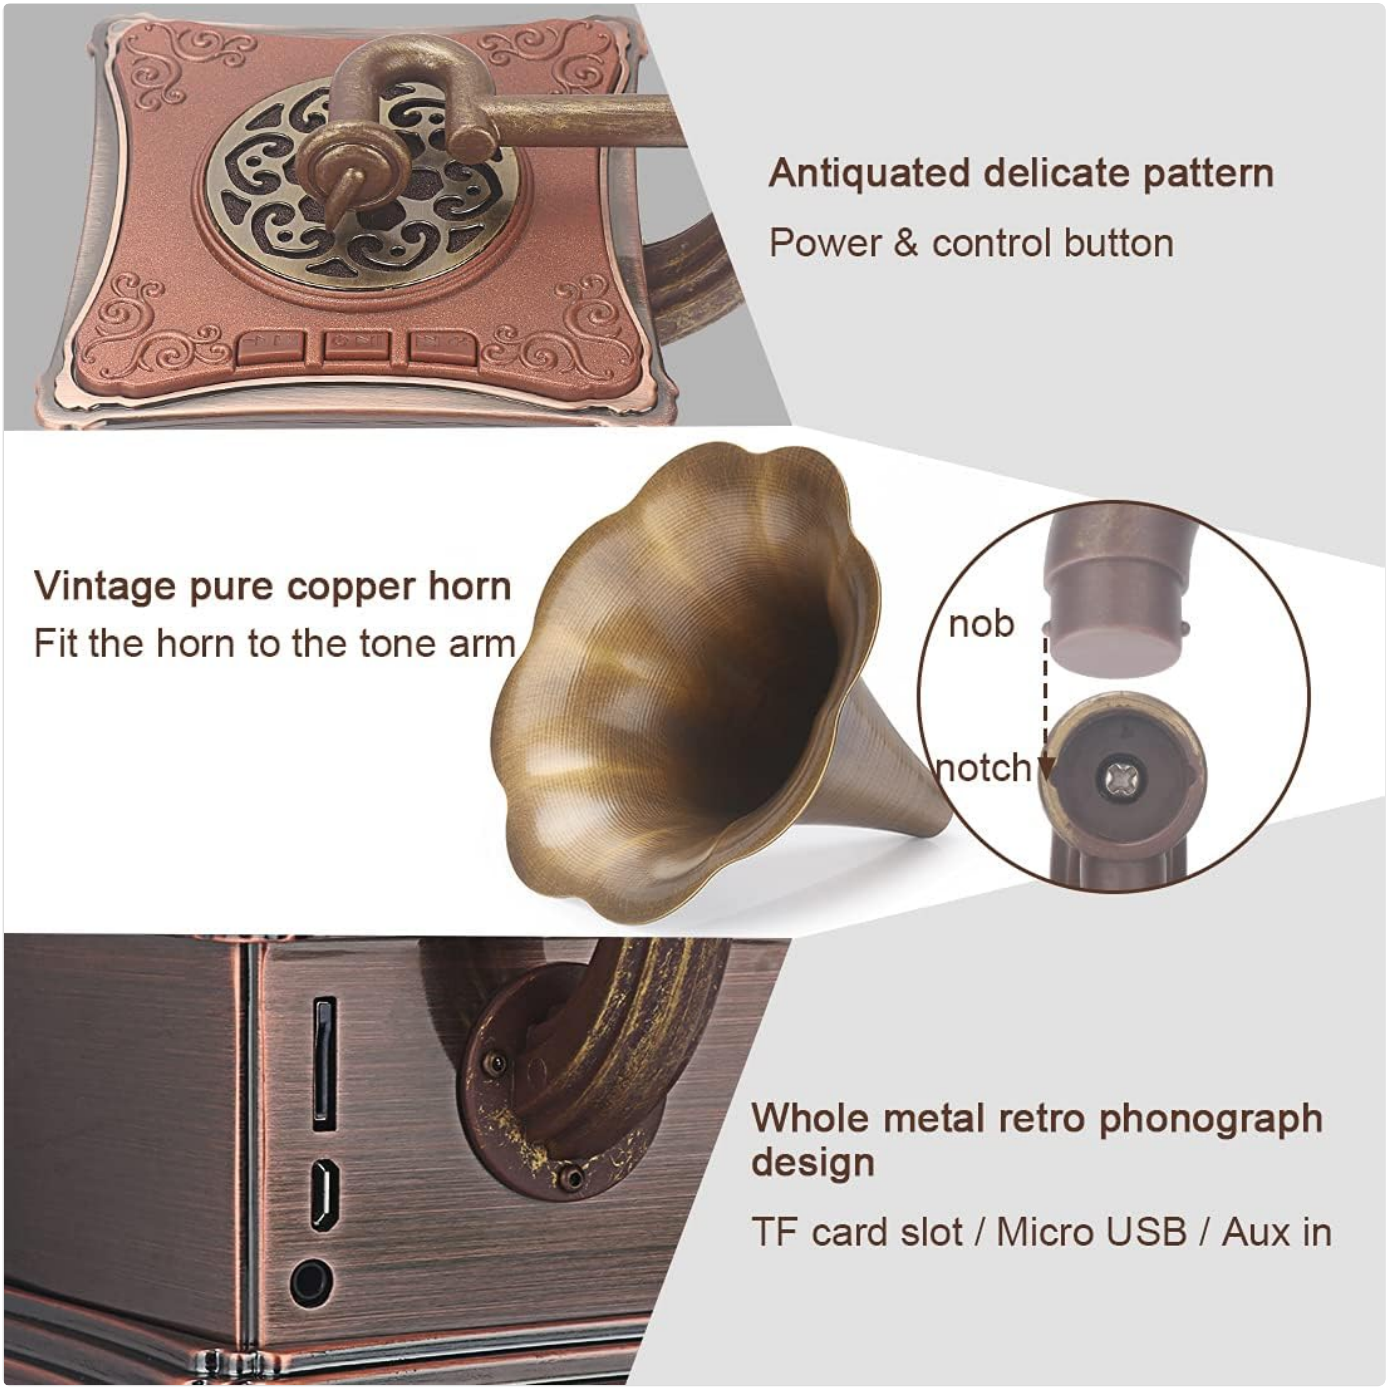


Image: An infographic illustrating the four versatile music playback options available on the speaker: 3.5mm AUX, USB (requiring an adapter), Bluetooth, and TF card.



Image: An infographic demonstrating the wide compatibility of the speaker with various devices and scenarios, including smartphones, tablets, cars, and computers.

4.4 Controls

The speaker features a simple 3-button control interface for managing playback and volume. Refer to the product diagram in Section 2.1 for button locations.

- **Power/Mode Button:** Press and hold to power on/off. Short press to switch between playback modes (Bluetooth, TF, AUX, USB).
- **Volume Up/Next Track Button:** Short press to increase volume. Long press to skip to the next track.
- **Volume Down/Previous Track Button:** Short press to decrease volume. Long press to go to the previous track.

Your browser does not support the video tag.

Video: A demonstration of the Vintage Mini Bluetooth Speaker, showcasing its design and basic functionality. This video provides a visual overview of the product in use.

5. Maintenance

To ensure the longevity and optimal performance of your MEAGEAL Mini Retro Bluetooth Speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the speaker with care to prevent drops or impacts, which could damage internal components or the delicate horn.
- **Moisture:** Keep the speaker away from water and high humidity. It is not waterproof.

6. Troubleshooting

If you encounter any issues with your speaker, please refer to the following common problems and solutions:

- **No Power:**
  - Ensure the speaker is fully charged. Connect it to a power source using the Micro USB cable.
  - Press and hold the power button for a few seconds to ensure it is properly turned on.
- **Cannot Pair via Bluetooth:**
  - Make sure the speaker is in Bluetooth pairing mode (indicator light flashing).
  - Ensure your device's Bluetooth is enabled and within range (typically 10 meters).
  - Try unpairing and re-pairing the device.
  - Restart both the speaker and your Bluetooth device.
- **No Sound:**
  - Check the volume levels on both the speaker and your connected device.
  - Ensure the correct playback mode (Bluetooth, TF, AUX, USB) is selected.
  - If using AUX, ensure the cable is fully inserted and not damaged.
  - If using a TF card or USB disk, ensure the audio files are in a compatible format and the storage device is properly inserted.
- **Poor Sound Quality:**
  - Move the speaker closer to your Bluetooth device to reduce interference.
  - Ensure there are no obstructions between the speaker and the Bluetooth device.
  - Check the audio source for quality issues.

If these steps do not resolve the issue, please contact customer support.

7. Specifications

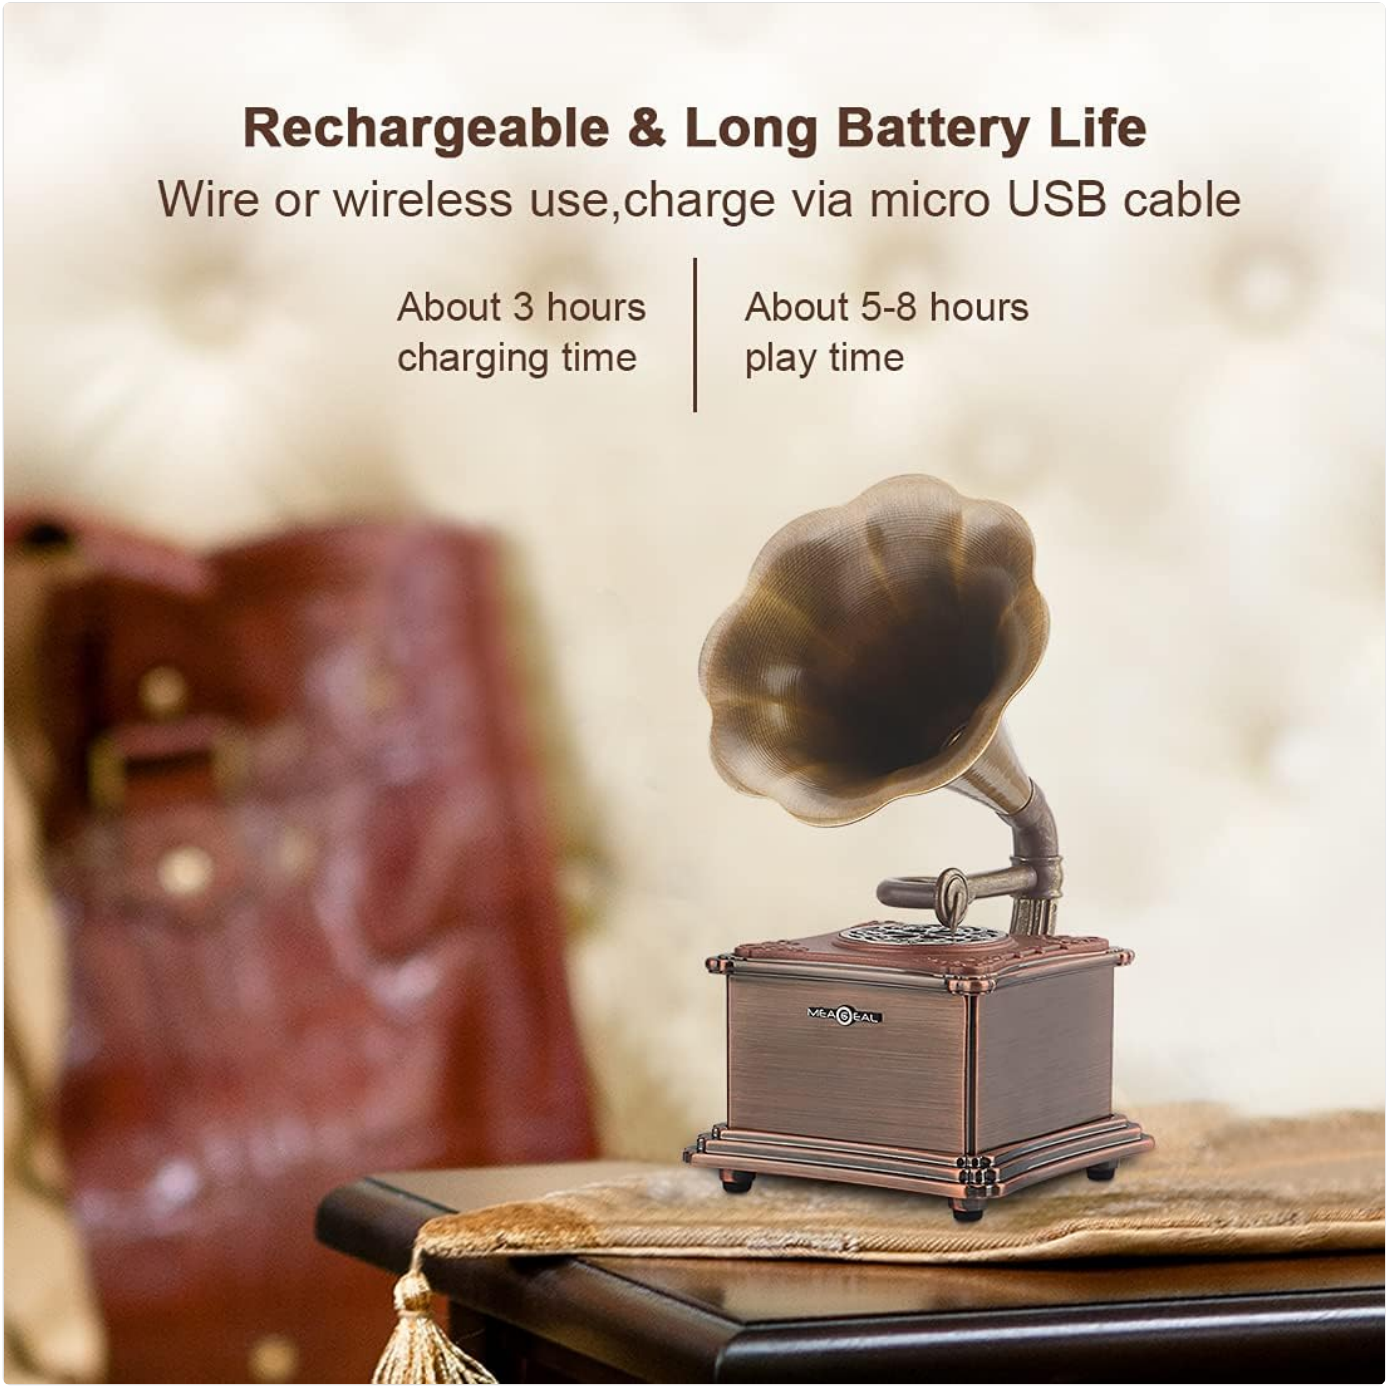


Image: Dimensions of the MEAGEAL Mini Retro Bluetooth Speaker, indicating a width of 129mm (5.08 inches) and a height of 236mm (9.3 inches).

Feature	Specification
Brand	MEAGEAL
Model Name	Mini Retro
Model Number	turntable-mini
Connectivity Technology	Bluetooth, Auxiliary, USB
Bluetooth Version	4.2
Power Source	Battery Powered
Battery Type	Lithium

Feature	Specification
Battery Capacity	3.7V 2000mA
Charging Time	Approx. 3 hours
Playback Time	Approx. 6 hours
Material (Visible)	Aluminum Alloy base, Pure Copper horn
Item Weight	1 kg
Compatible Devices	Smartphone, Tablet
UPC	737311309194

8. Warranty and Support

MEAGEAL is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or technical assistance regarding your Mini Retro Bluetooth Speaker, please contact MEAGEAL customer service. We offer 24/7 customer support to assist you.
Please refer to your purchase documentation for specific warranty details and contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0978LW2W4

More documents and user manuals: **https://manuals.plus/**