Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TIDEWE JP-199

Instruction Manual

TIDEWE Breathable Hunting Waders Heated 1200G Insulation with Removable Insulated Liner & Battery Pack

Model: JP-199

Product Overview

The TIDEWE Breathable Hunting Waders are designed for comfort and performance in various outdoor conditions. They feature a lightweight, breathable, and 100% waterproof nylon shell, integrated heating elements, and a removable insulated liner for adaptable warmth. The waders are equipped with durable boots and user-friendly design elements to enhance your hunting or fishing experience.



Figure 1: Complete TIDEWE Heated Hunting Waders with removable liner, power bank, waterproof phone pouch, and wader hanger.



Figure 2: Key features of the TIDEWE Waders, including adjustable padded shoulder straps, waterproof zippered front storage pocket, adjustable waist strap with shell holder, fleece-lined hand-warmer pockets, reinforced shin, knees, and seat area, and 1200G insulated boots with anti-slip sole and steel shank.



Figure 3: The 120-gram quilted insulated liner, which is removable for easy transport and storage, providing adaptable warmth.

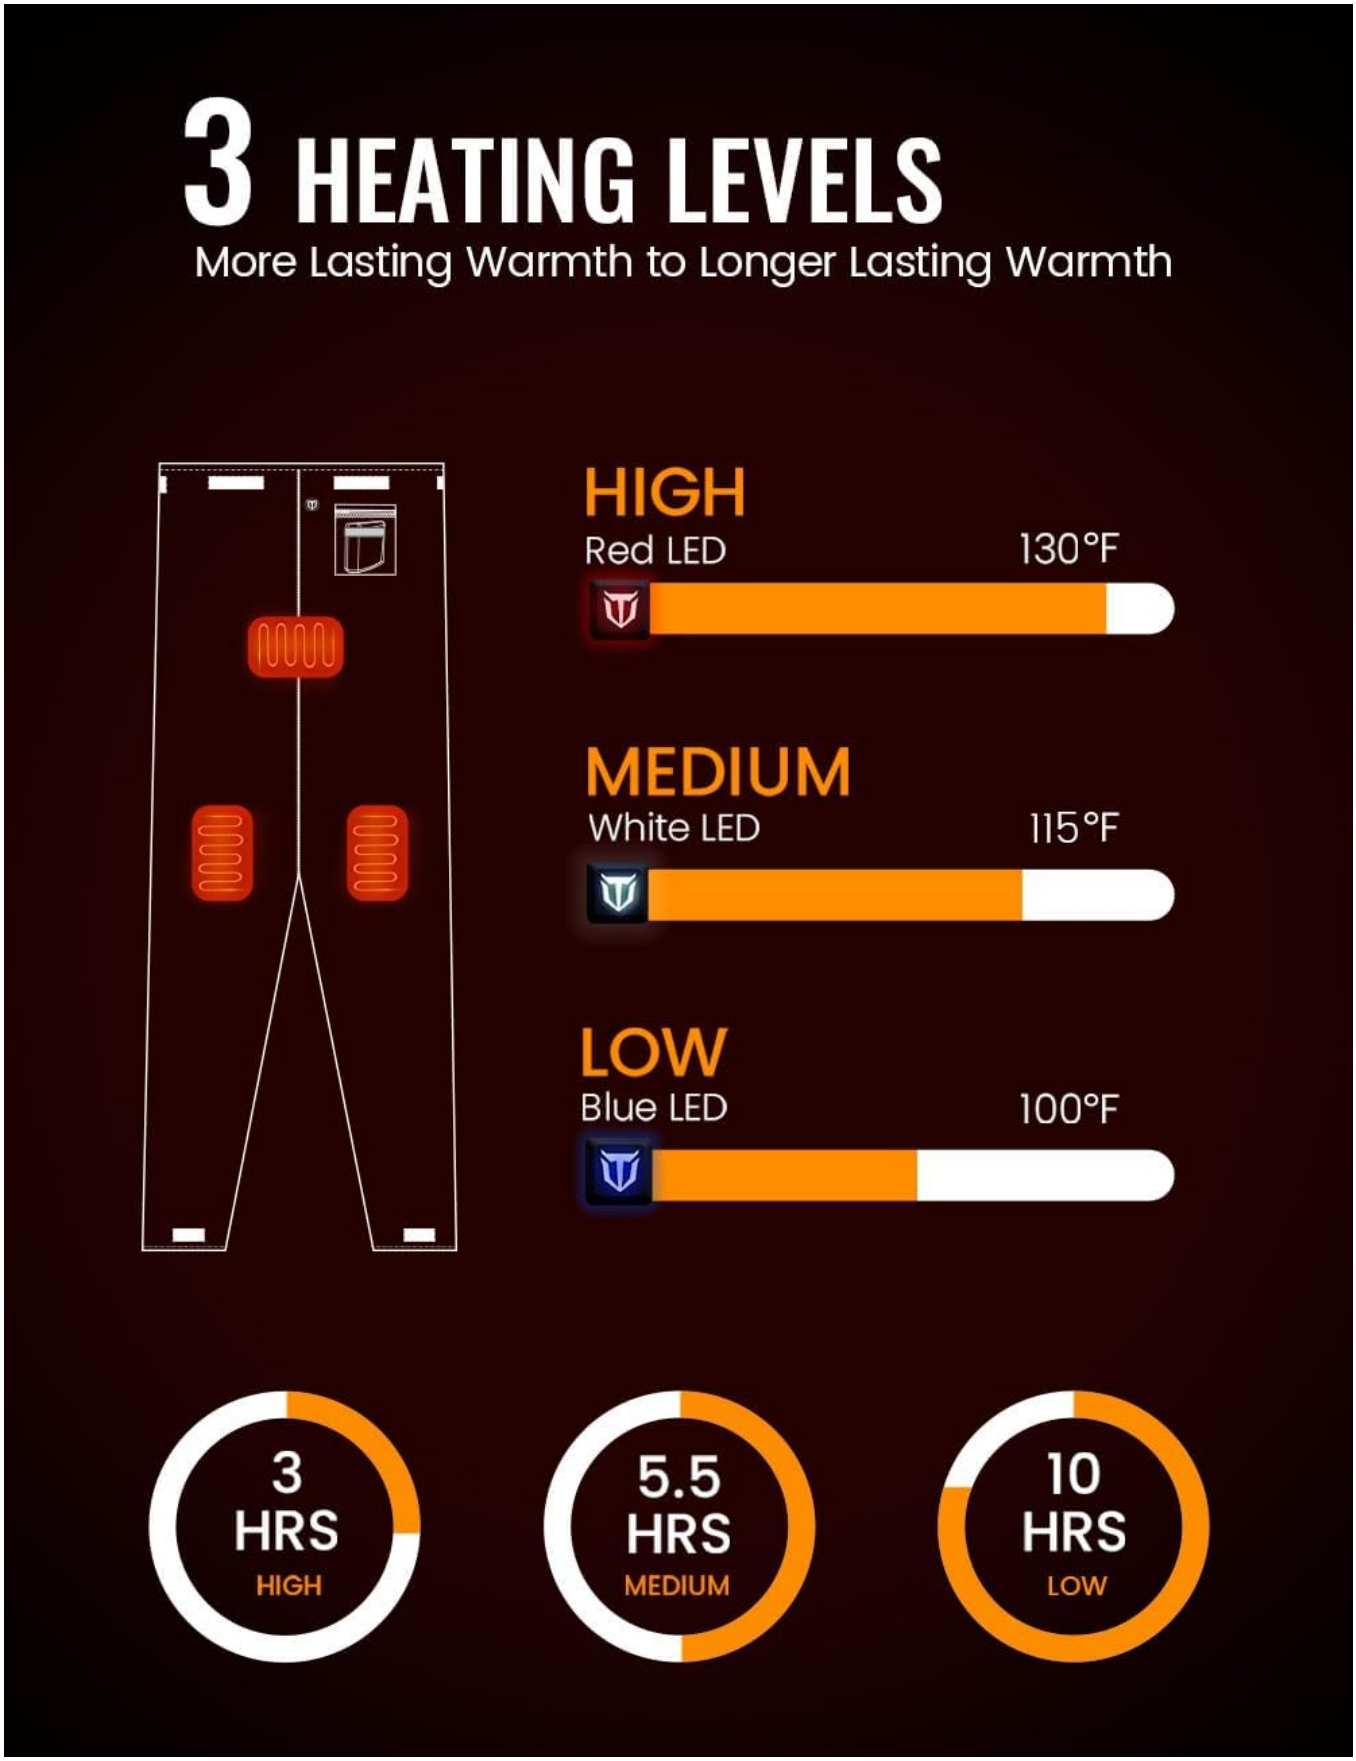


Figure 4: Diagram illustrating the three adjustable heating levels: Low (Blue LED, 100°F, up to 10 hours), Medium (White LED, 115°F, up to 5.5 hours), and High (Red LED, 130°F, up to 3 hours).

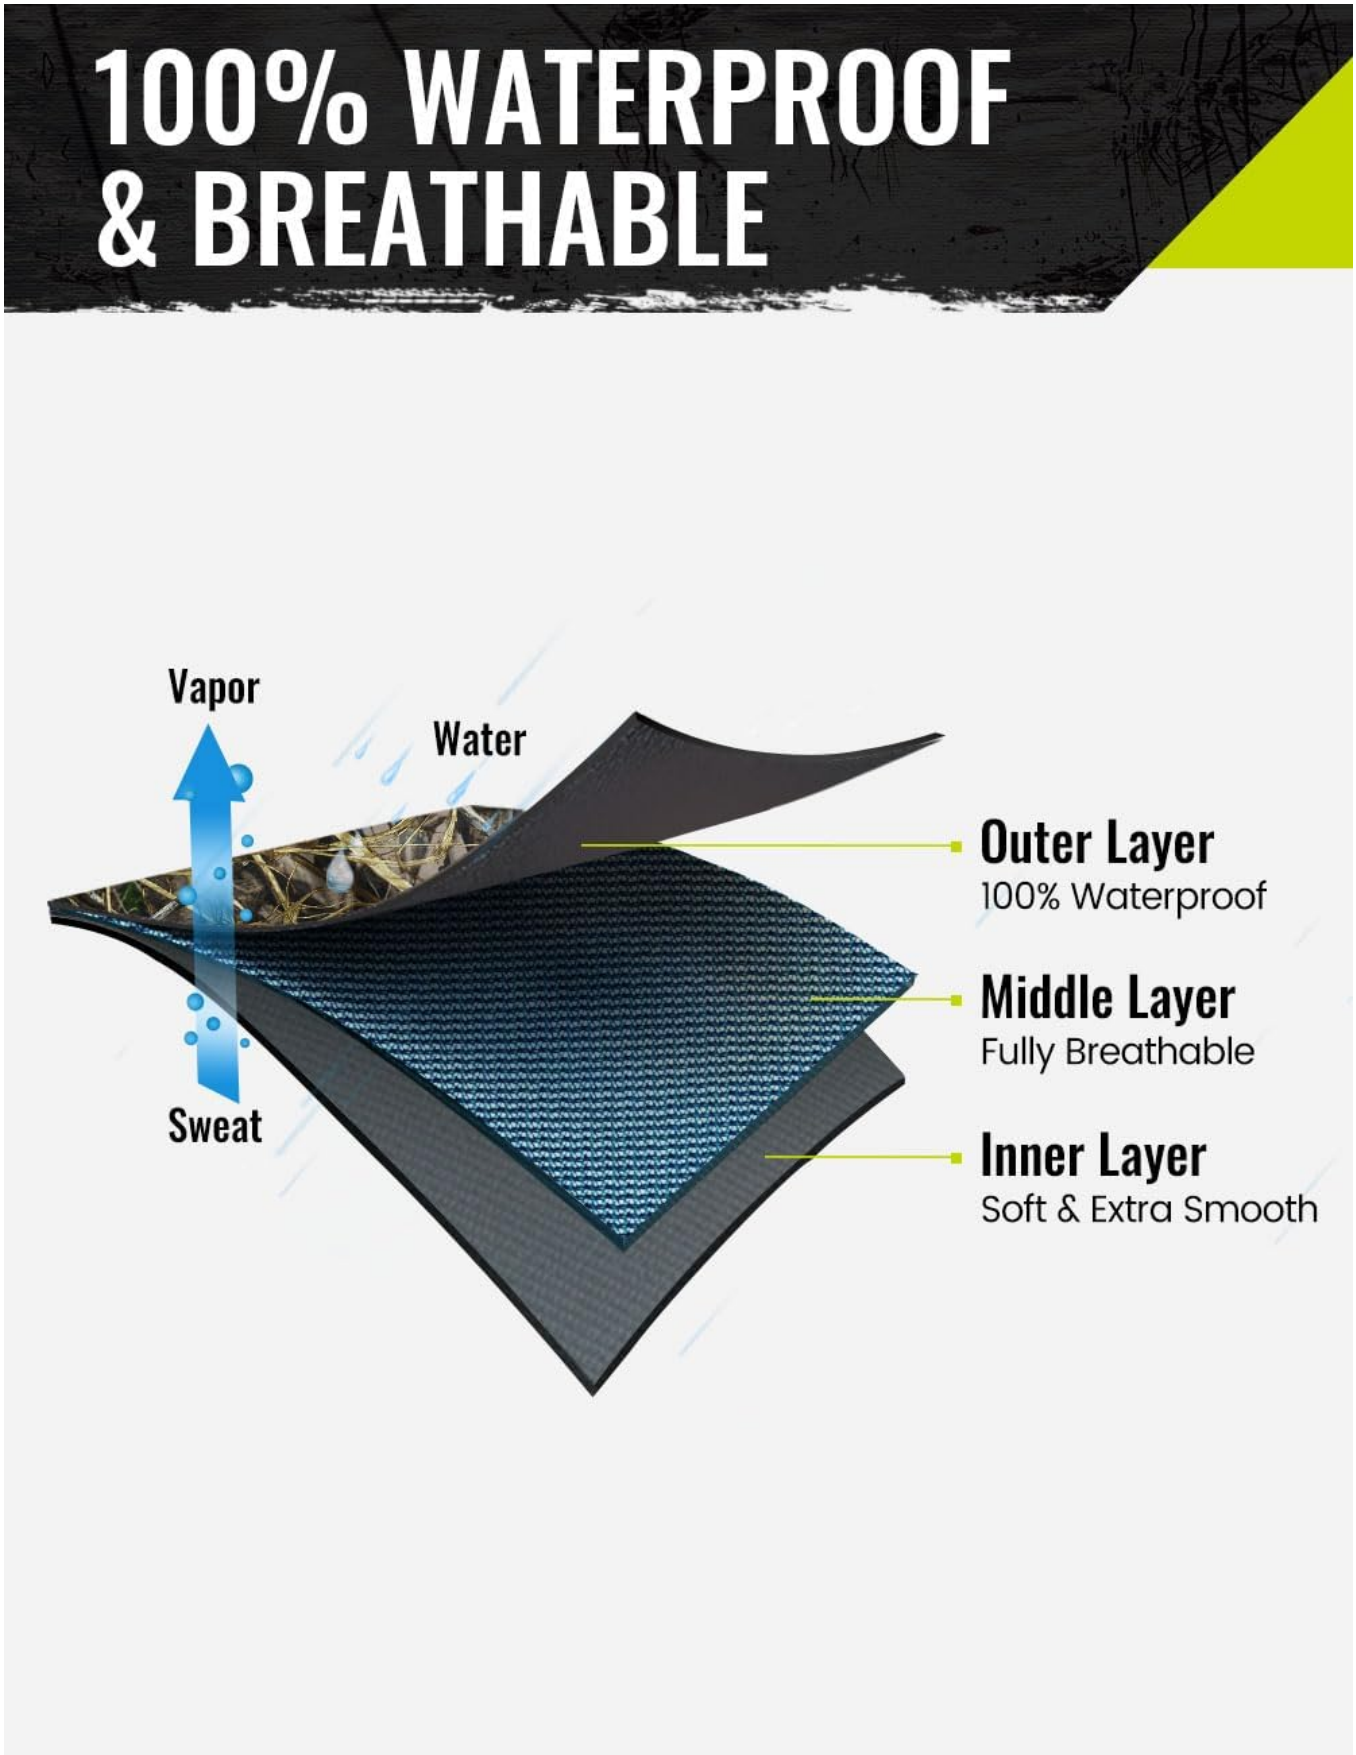


Figure 5: Cross-section view showing the three layers of the wader material: 100% waterproof outer layer, fully breathable middle layer, and soft, extra smooth inner layer, designed to manage moisture and keep you dry.



Figure 6: The certified battery pack includes FCC Certificate, Short-circuit Protection, Overcharge & Over-discharge Protection, Temperature Protection, and RoHS compliance, ensuring safe operation.

- **Breathable & 100% Waterproof:** Constructed with a lightweight nylon shell, double-stitched and sealed seams, and polyurethane-coated leggings for superior water resistance and breathability.
- **Smart Heating Design:** Features 3 adjustable heat settings (Low, Medium, High) powered by a certified 10000mAh power bank, offering up to 10 hours of warmth.

- **Portable & Warm:** Includes a removable 120g insulated liner and 1200 gram Thinsulate Insulated Boots for optimal warmth in cold conditions. The power bank also has 2 USB ports for charging other devices.
- **High Performance Boots:** Built-in rubber boots with reinforced vamp, steel shank, and rugged tread pattern for comfort, durability, and traction. A heel protrusion aids in easy removal.
- **User-Friendly Design:** Equipped with 600D Reinforced Shin in Knees and seat area, adjustable heavy-duty elastic suspenders, fleece-lined hand-warmer pockets, and a zippered front storage pocket.

Setup Guide

1. **Initial Inspection:**

   Upon receiving your TIDEWE waders, carefully inspect them for any signs of damage or missing components. Ensure all seams are intact and the material is free from punctures or tears.

2. **Attaching the Removable Insulated Liner:**

   The insulated liner is designed to be removable. Align the Velcro fasteners on the liner with the corresponding fasteners inside the waders. Start from the top and work your way down, ensuring a secure and flat attachment. Pay special attention to the boot area to prevent bunching. If the liner detaches during removal, re-align the Velcro points carefully.



Figure 7: Detail of the Velcro attachment points for the removable insulated liner.

3. **Charging the Battery Pack:**

   Before first use, fully charge the included 10000mAh power bank. Connect the power bank to a suitable USB power adapter using the provided charging cable. The display on the power bank will indicate the charging progress. A full charge typically takes 3-4 hours, with quick charge taking 2 hours.



Figure 8: The power bank features a digital display indicating charge level and multiple USB ports for charging and output.

4. **Connecting the Battery Pack to Waders:**

   Locate the USB cable inside the waders, typically within a designated pocket. Connect the charged power bank to this USB cable. Ensure the connection is secure. The power bank can be stored in the zippered front storage pocket for easy access.

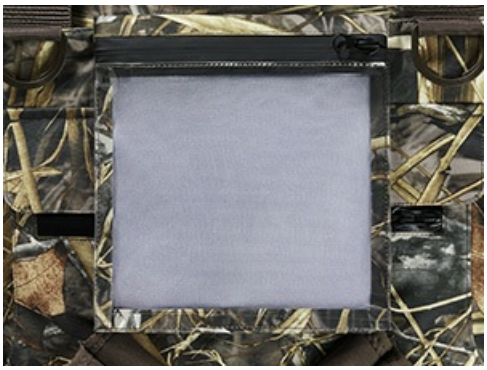


Figure 9: The waterproof zippered front storage pocket, ideal for securing the power bank and other essentials.

Operating Instructions

1. **Donning the Waders:**

   Step into the waders, ensuring your feet slide smoothly into the boots. Adjust the heavy-duty elastic suspenders for a comfortable and secure fit over your shoulders. Fasten and adjust the waist strap with the shell holder as needed.



Figure 10: The adjustable waist strap with integrated shell holder for convenience.

2. **Using the Heating System:**

   Once the power bank is connected, locate the power button for the heating system. This button is typically integrated into the waders near the heating elements. Press and hold the button for a few seconds to turn it on. Subsequent short presses will cycle through the three heat settings:

   - **Low (Blue LED):** Approximately 100°F, up to 10 hours of warmth.
   - **Medium (White LED):** Approximately 115°F, up to 5.5 hours of warmth.
   - **High (Red LED):** Approximately 130°F, up to 3 hours of warmth.

   To turn off the heating system, press and hold the button again until the LED indicator turns off.

3. **Utilizing Pockets:**

   The waders include fleece-lined hand-warmer pockets for comfort and a zippered front storage pocket for securing personal items like your phone (use the included waterproof pouch for added protection) or small gear.



Figure 11: The included waterproof phone pouch and wader hanger for convenience.

4. **Boot Features:**

The rugged boot tread pattern provides enhanced grip on wet and muddy surfaces. When removing the waders, use the protrusion at the rear of the boot's heel to assist in taking them off easily.



Figure 12: The heel protrusion designed for easy boot removal.



Figure 13: The rugged tread pattern on the boot sole for enhanced traction.

Maintenance

1. **Cleaning:**

   After each use, especially in muddy or dirty conditions, clean your waders. Rinse them thoroughly with clean water to remove dirt, mud, and debris. For stubborn stains, use a mild soap and a soft brush. Avoid harsh detergents or solvents as they can damage the waterproof coating and fabric.

2. **Drying:**

   Hang your waders upside down using the included wader hanger or a sturdy hanger in a well-ventilated area, away from direct sunlight or heat sources. Ensure they are completely dry inside and out before storing to prevent mildew and odor.

3. **Storing:**

   Store your waders in a cool, dry place. Avoid folding them tightly for extended periods, as this can create creases that may compromise the waterproof integrity over time. Hanging them is ideal. If the insulated liner is removed, store it separately in a clean, dry place.

4. **Battery Care:**

   To prolong the life of your power bank, avoid fully discharging it regularly. Recharge it after each use and store it with a partial charge (around 50-70%) if not used for extended periods. Keep the power bank away from extreme temperatures and moisture.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Heating system not working.	• Power bank not charged. • Loose connection between power bank and waders. • Power button not activated correctly.	• Ensure power bank is fully charged. • Check and secure the USB connection inside the waders. • Press and hold the power button for 3-5 seconds to activate.
Insulated liner bunches up or detaches.	• Velcro not fully engaged. • Improper donning technique.	• Re-align and firmly press all Velcro fasteners. • When putting on, pull the liner up as you insert your foot into the boot to prevent it from bunching.
Waders feel too tight or too loose.	• Incorrect size. • Suspenders or waist strap not adjusted.	• Refer to the size guide in the specifications section. • Adjust suspenders and waist strap for a comfortable fit.
Suspected leak.	• Puncture or seam damage. • Water entering from top opening.	• Inspect waders for visible damage. Contact customer support if a defect is found. • Ensure top opening is not submerged or water is not splashing over.

Specifications

Feature	Detail
Brand Name	TIDEWE
Model Name	JP-199
ASIN	B0CVVR6N6N
Color	Next Camo Evo
Material	Nylon
Insulation	120g Removable Insulated Liner, 1200g Thinsulate Insulated Boots
Heating System	3 adjustable heat settings (Low, Medium, High)
Power Bank	10000mAh, certified, with 2 USB ports
Boot Features	Built-in rubber, reinforced vamp, steel shank, rugged tread, heel protrusion
Additional Features	600D Reinforced Shin in Knees and seat area, adjustable elastic suspenders, fleece-lined hand-warmer pockets, zippered front storage pocket
Item Package Dimensions	18.42 x 14.84 x 9.33 inches
Package Weight	5.83 Kilograms
Date First Available	May 8, 2024

Size Guide (US Regular)

Brand Size	Hip (in)	Inseam (in)	Length (in)	Weight
8	48	35	55.5	8.8lb
9	51	36	57	9.5lb
10	53	37	58.5	10.3lb
11	55	38	60	10.8lb
12	58	39	61.5	11.6lb
13	62	40	63	12.4lb
14	66	41	64.5	13.1lb

Warranty and Support

TIDEWE is committed to providing quality products. For specific warranty information regarding your waders, please refer to the documentation included with your purchase or visit the official TIDEWE website.

For customer support, technical assistance, or warranty claims, please contact TIDEWE customer service through their official channels. You can find more information and contact details on the TIDEWE Store on Amazon.

Note: No official seller videos were found in the provided product data for embedding in this manual.

© 2024 TIDEWE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B097GNCQKD

More documents and user manuals: **https://manuals.plus/**