Fjords Fjords-Magnus-LRG-Power

Fjords Magnus Large Dual Motion Recliner Chair User Manual

Model: Fjords-Magnus-LRG-Power

Introduction

Thank you for choosing the Fjords Magnus Large Dual Motion Recliner Chair. This manual provides essential information for the safe and efficient use of your new recliner. The Magnus recliner offers a contemporary design with exceptional seating comfort, featuring a dual motorized system for independent control of the footrest and back position. Its base swivels, and it includes a manual release angle and height-adjustable headrest. This model is crafted with premium Soft Line Leather and a matte black base.

Please read this manual thoroughly before assembly and operation to ensure proper function and longevity of your product.



Image: The Fjords Magnus Large Dual Motion Recliner Chair in its upright position, showcasing the Hassel Premium Leather and matte black swivel base.

Important Safety Information

Please observe the following safety precautions to prevent injury or damage to your recliner.

- Ensure all components are securely assembled before use.
- Keep hands and feet clear of moving parts during operation to avoid pinching or crushing.
- Do not allow children or pets to play on or around the recliner, especially when it is in motion.
- Only use the provided power supply and battery pack. Do not attempt to modify the electrical components.
- Avoid placing heavy objects on the footrest or backrest when extended.
- Do not sit on the armrests.
- If the recliner malfunctions, disconnect it from the power source and contact customer support.
- Keep liquids away from electrical components.

Package Contents

Package Contents

Verify that all items are present before beginning assembly.

- Fjords Magnus Recliner Chair (Seat, Backrest, Base)
- Power Supply Unit
- Rechargeable Battery Pack (pre-installed or separate)
- User Manual (this document)

Setup and Assembly

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future transport or returns.
2. **Base Attachment:** Place the chair base on a level surface. Align the chair's main body with the base and securely attach it according to the visual guides. Ensure it clicks into place or is fastened as instructed.
3. **Backrest Installation:** Slide the backrest into the designated slots on the chair's seat frame. Apply gentle pressure until it locks securely.
4. **Power Connection:**
    - Locate the power input port on the chair, typically underneath the seat or near the back.
    - Connect the power supply unit to the chair.
    - If using the battery pack, ensure it is fully charged and properly connected to the chair's power system. The chair can operate wirelessly with the battery.
    - Plug the power supply into a standard electrical outlet (if not using battery power exclusively).
5. **Placement:** Position the recliner on a flat, stable surface, ensuring adequate clearance around the chair for reclining and swiveling.

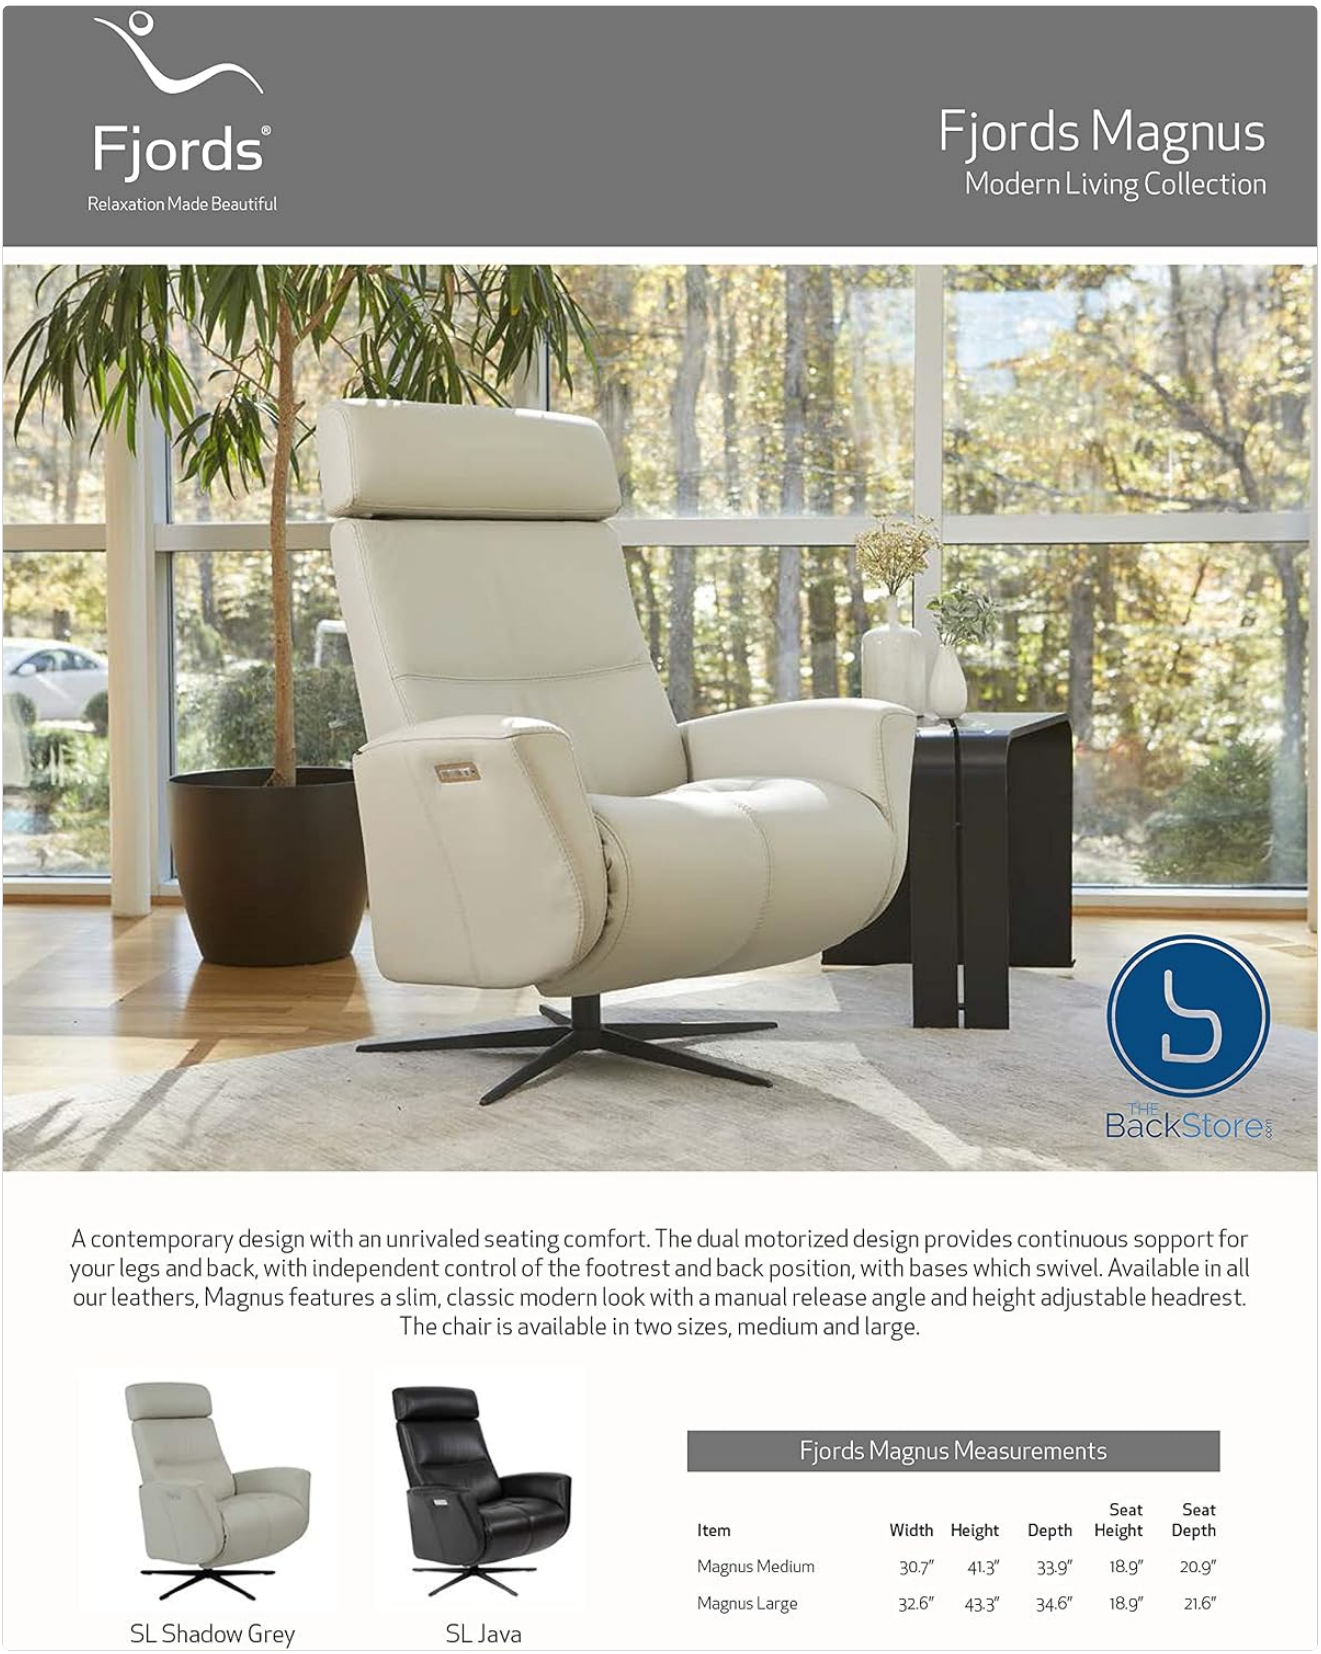


Image: The Fjords Magnus Recliner Chair positioned in a modern living space, demonstrating its aesthetic appeal and suitable placement.

Operating Instructions

The Fjords Magnus recliner features dual motorized controls for personalized comfort.

Reclining and Footrest Adjustment:

1. **Locate Controls:** The control panel is typically located on the inner side of the armrest. It features buttons for adjusting the backrest and footrest independently.

2. **Extend Footrest:** Press and hold the designated button to extend the footrest. Release the button when the desired position is reached.
3. **Recline Backrest:** Press and hold the designated button to recline the backrest. Release the button when the desired angle is achieved.
4. **Return to Upright:** Press and hold the corresponding buttons to retract the footrest and return the backrest to its upright position.

Headrest Adjustment:

The headrest is manually adjustable for angle and height. Gently pull or push the headrest to adjust its position to your preference.

Swivel Function:

The chair base allows for a 170-degree swivel motion. Simply rotate the chair to your desired orientation.

Battery Operation:

The integrated battery pack allows for wireless operation. When the battery level is low, connect the power supply unit to recharge. An indicator light may signal low battery status.



Image: A side view of the Fjords Magnus Recliner Chair, demonstrating a partially reclined position with the footrest extended.

Care and Maintenance

Leather Care:

- Regularly dust the leather with a soft, dry cloth.

- For spills, immediately blot with a clean, absorbent cloth. Do not rub.
- Use a specialized leather cleaner and conditioner recommended by Fjords or a reputable leather care professional. Test on an inconspicuous area first.
- Avoid direct sunlight and heat sources, which can dry out and fade the leather.
- Do not use harsh chemicals, abrasive cleaners, or household detergents.

General Maintenance:

- Periodically check all connections and fasteners to ensure they are tight.
- Keep the area around the moving parts free from obstructions.
- If the chair develops any unusual noises or movements, discontinue use and consult the troubleshooting section or contact support.



Image: A chart displaying various color options for Fjords Soft Line Leather, including Hassel, along with care information.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline or footrest does not extend.	◦ Power cord not securely plugged in. ◦ Battery pack is depleted or not connected. ◦ Power outlet is not functioning. ◦ Loose connection within the chair.	◦ Check all power connections, ensuring they are firm. ◦ Charge the battery pack or connect the chair directly to the power supply. ◦ Test the outlet with another appliance. ◦ Inspect visible wiring for disconnections. If problem persists, contact support.
Unusual noises during operation.	◦ Loose fasteners. ◦ Obstruction in moving parts. ◦ Motor issue.	◦ Check and tighten any loose screws or bolts. ◦ Ensure no objects are caught in the mechanism. ◦ If noise persists, discontinue use and contact customer support.
Headrest does not adjust smoothly.	◦ Mechanism obstruction. ◦ Wear and tear.	◦ Check for any foreign objects. ◦ Apply a silicone-based lubricant to the mechanism if accessible and recommended by manufacturer. Otherwise, contact support.

Specifications

Model Name:	Fjords-Magnus-LRG-Power
Brand:	Fjords
Dimensions (Upright):	37"D x 33"W x 44"H
Seat Height:	18.5 Inches
Item Weight:	145 pounds
Material:	Premium Soft Line Leather
Base Type:	Matte Black Swivel Base
Special Features:	Dual Motorized Recline, Concealed Footrest, Adjustable Headrest, 170-degree Swivel, Battery Backup
Power Source:	AC Power Adapter, Rechargeable Battery Pack



Image: A detailed diagram showing the dimensions of the Fjords Magnus Recliner Chair in both Medium and Large sizes.

Warranty and Customer Support

Fjords products are manufactured to high standards and come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and what is covered.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Fjords customer

support.

- **Online Support:** Visit the official Fjords website for FAQs and support resources.
- **Contact Information:** Refer to your purchase documentation or the Fjords website for current contact details (phone, email).

When contacting support, please have your model name (Fjords-Magnus-LRG-Power) and purchase date available.