Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TUREWELL FC1592

TUREWELL Water Flosser Cordless User Manual

Model: FC1592

Introduction

Thank you for choosing the TUREWELL Cordless Water Flosser. This device is designed to provide effective and comfortable oral hygiene by removing food debris and plaque from hard-to-reach areas. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image: The TUREWELL Cordless Water Flosser, its retail packaging, and included jet tips and USB charging cable.

Safety Information

For your safety and to ensure the longevity of the device, please observe the following precautions:

- Do not aim the water stream directly at the throat or eyes.
- It is recommended to close your mouth partially during use to prevent water from spraying out.
- For hygienic reasons and optimal performance, replace the jet tips every 3 months.
- Ensure the base cover is securely closed before use to maintain IPX7 waterproof integrity.
- The device features a 2-minute auto shut-off timer to prevent dry burning of the motor and conserve power.

Package Contents

Verify that all items are present in the package:

- 1 x TUREWELL Portable Water Dental Flosser
- 2 x Standard Jet Tips
- 1 x Plaque Brush Tip
- 1 x USB Charging Cable
- 1 x User Manual (this document)

Product Overview

Familiarize yourself with the components of your TUREWELL Water Flosser:



Image: An exploded view diagram of the water flosser, highlighting key components such as the 360° rotatable nozzle, jet tips lock, power button, water pressure adjustment button, water pressure indicating light, charging indicating light, and 250ML water tank.

- **360° Rotatable Nozzle:** Allows for easy access to all areas of the mouth.
- **Jet Tips Lock:** Secures the nozzle in place.
- **Power Button:** Turns the device on and off.

- **Water Pressure Adjustment Button:** Adjusts the intensity of the water stream.
- **Water Pressure Indicating Light:** Displays the current water pressure setting.
- **Charging Indicating Light:** Shows battery status during charging and operation.
- **250ML Water Tank:** Detachable for easy filling and cleaning.
- **Anti-Slip Ergonomic Design:** Provides a secure grip during use.

Setup

1. **Charge the Device:** Before first use, fully charge the water flosser using the provided USB cable. The charging indicator light will show the charging status. A full charge provides approximately 20-25 days of standby time (based on 2 minutes of use per day).



Image: Close-up of the water flosser showing the USB charging port and the anti-slip texture on the back.



Image: Diagram illustrating the battery indicator lights: red for 0-15% charge, green for 15-59%, and blue for 60-100%.

2. **Fill the Water Tank:** Detach the 250ML water tank by twisting or pulling it gently. Fill the tank with lukewarm water. Reattach the tank securely to the main unit.
3. **Attach a Nozzle:** Insert your desired jet tip into the opening at the top of the device until it clicks into place. Ensure it is firmly seated.

Operating Instructions

Power On/Off

Press and hold the power button for 3 seconds to turn the device on. Press and hold the power button again for 3 seconds to turn it off.

DIY Mode & Memory Function

The DIY mode allows you to customize the water pressure from 30 PSI to 120 PSI to suit your comfort and oral needs. The device will remember your last chosen pressure setting for future use.

1. Turn on the device by pressing the power button for 3 seconds.
2. Long press the DIY button. The water pressure will gradually increase from the lowest to the highest setting.
3. Release the DIY button when you reach your desired water pressure. The device will save this setting for subsequent uses in DIY mode.



Image: A three-step visual guide demonstrating how to activate and set the DIY mode by pressing the power button, then long-pressing the DIY button to adjust pressure, and releasing to save the setting.

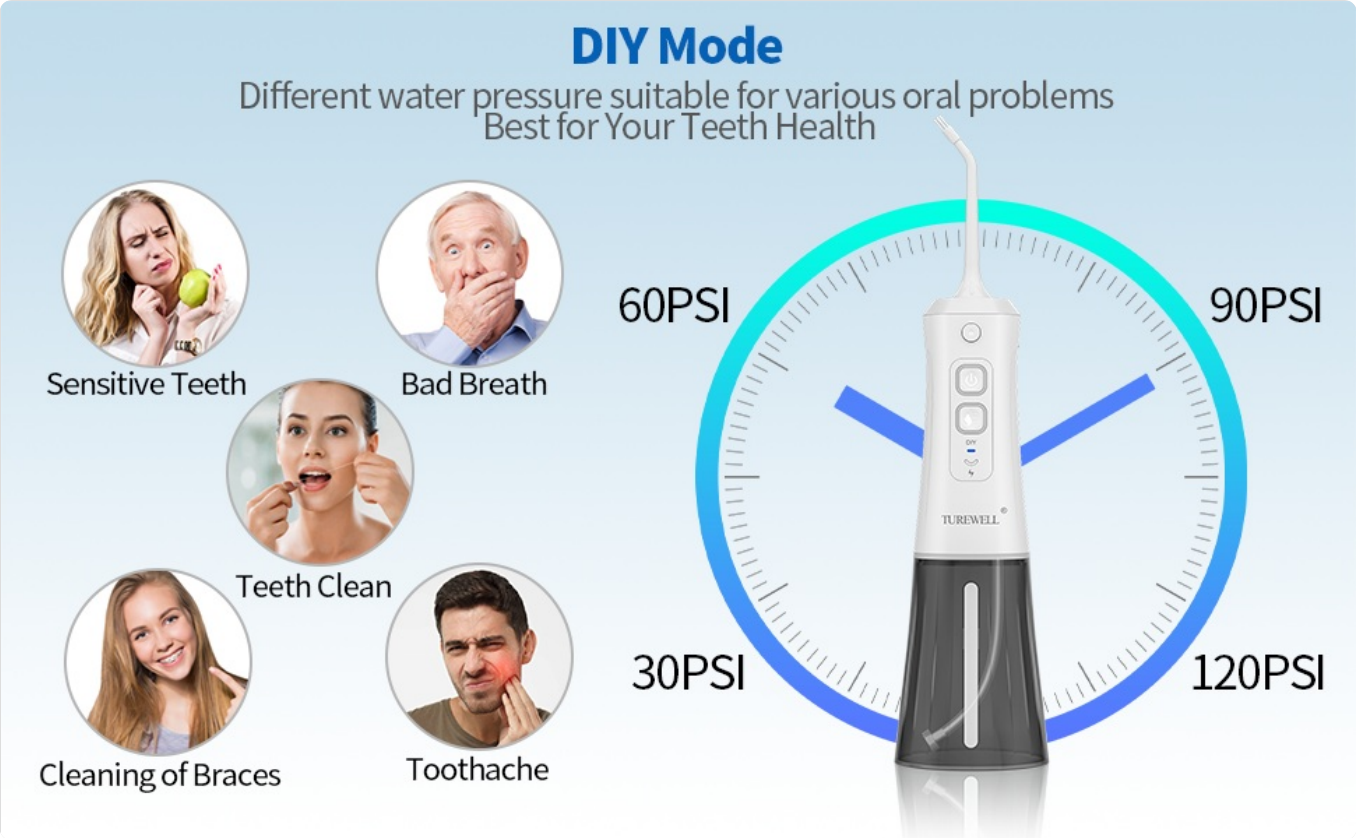


Image: A circular diagram illustrating the DIY mode's adjustable pressure range from 30 PSI to 120 PSI, with common settings like 60 PSI and 90 PSI marked.

Using Different Nozzles

The TUREWELL Water Flosser comes with various jet tips designed for specific oral care needs:

- **Standard Tip:** Ideal for daily general cleaning and removing food residue.
- **Plaque Brush Tip:** Designed to remove detailed plaque and food debris in hard-to-reach areas.
- **Orthodontic Tip:** Specifically designed to clean around braces and orthodontic appliances.
- **Periodontal Tip:** Used for rinsing and massaging deep below the gumline.



Image: Visual representation of the Standard Tip and Plaque Brush Tip, with an illustration showing their use in the mouth.

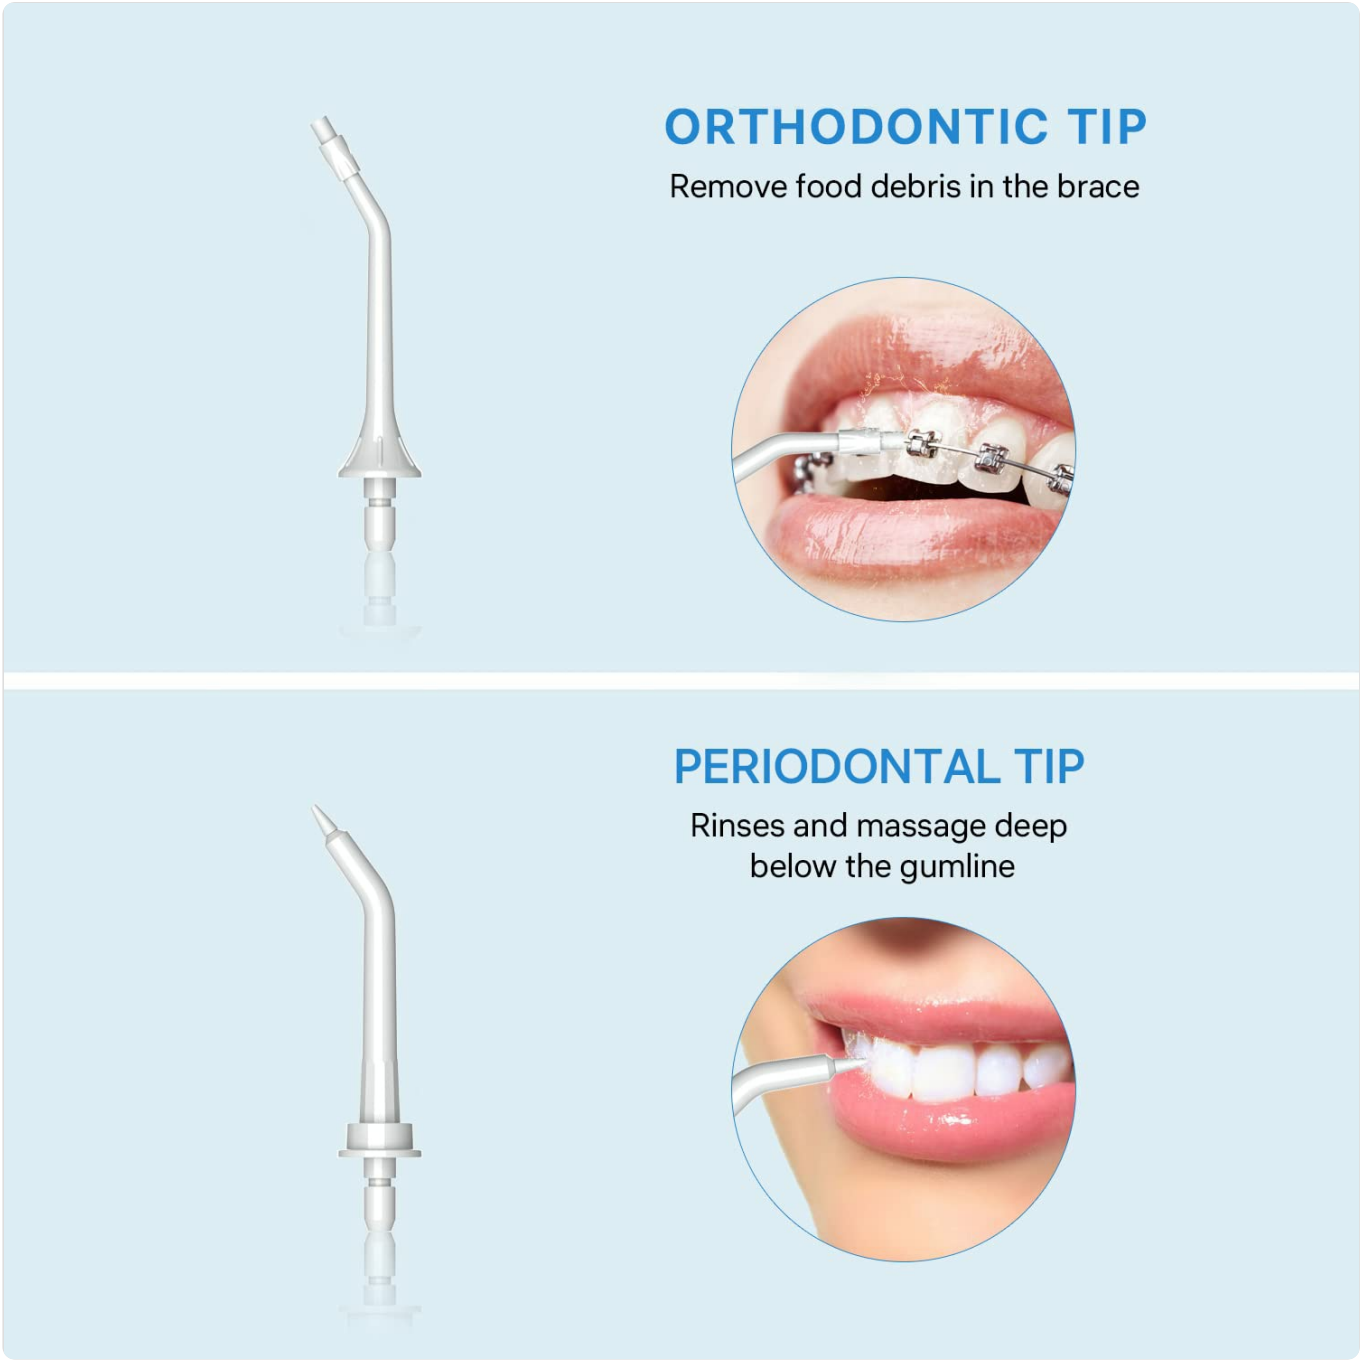


Image: Visual representation of the Orthodontic Tip and Periodontal Tip, with an illustration showing their use in the mouth.



Image: Close-up of the water flosser's top, illustrating the 360-degree rotation capability of the nozzle for comprehensive cleaning.

Auto Shut-off Timer

The TUREWELL Water Flosser is equipped with a 2-minute auto shut-off timer. This feature automatically turns off the device after 2 minutes of continuous operation, helping to conserve battery life and prevent motor damage from dry running.

Maintenance

Proper maintenance ensures the longevity and hygiene of your water flosser.

- **Cleaning the Water Tank:** The 250ML water tank is detachable for easy cleaning. After each use, empty any remaining water. It can be directly washed with water. Ensure it is thoroughly dried before reattaching or storing.
- **Cleaning the Main Unit:** The entire body of the water flosser is IPX7 waterproof, allowing for direct washing. Wipe the exterior with a soft, damp cloth. Do not immerse the charging port in water.
- **Replacing Nozzles:** For optimal hygiene and performance, replace your jet tips every 3 months.



Image: Illustration demonstrating the IPX7 waterproof capability, showing the device being washed under running water, and highlighting the detachable water tank for easy cleaning.

Troubleshooting

If you encounter any issues with your TUREWELL Water Flosser, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully. Ensure the power button is pressed and held for 3 seconds.
Weak water pressure.	Low battery, insufficient water in tank, or nozzle blockage.	Recharge the device. Refill the water tank. Remove and clean the jet tip, ensuring no blockages. Adjust to a higher pressure setting using DIY mode.
Water leakage.	Water tank not securely attached or base cover not closed.	Ensure the water tank is firmly attached and the base cover is securely closed.
Nozzle detaches easily.	Nozzle not fully inserted.	Push the nozzle firmly into the opening until it clicks into place.

Specifications

Feature	Detail
Model Number	FC1592
Product Dimensions	2.76 x 3.15 x 7.87 inches
Item Weight	11.99 ounces
Water Tank Capacity	250ML
Water Pressure Range	30-120 PSI (DIY Mode)
Battery Type	1 Lithium Ion battery (included)
Charging Time	Approximately 4 hours for full charge
Operating Time	Up to 20-25 days standby (2 mins/day)
Waterproof Rating	IPX7
Auto Shut-off	2 minutes



Image: A visual representation of the product's battery life, indicating up to 21 days of use on a 4-hour charge, and highlighting the intelligent 2-minute power-off protection.

Warranty and Support

TUREWELL is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or support needs regarding your water flosser, please contact TUREWELL customer service through the platform where you purchased the product. Please have your model number (FC1592) and purchase details ready when contacting support.

© 2024 TUREWELL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B097XRYPKN

More documents and user manuals: **https://manuals.plus/**