MEEDEN AF-6023-YM

MEEDEN Wood Easel Stand

Model: AF-6023-YM

Instruction Manual

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your MEEDEN Wood Easel Stand, Model AF-6023-YM. This tripod display easel is crafted from durable beech wood, designed for stability and ease of use in various display settings.

The easel is suitable for displaying paintings, matted artwork, framed photographs, office presentations, exhibition materials, trade show signage, wedding events, and store signs. Its lightweight design and simple assembly make it a versatile tool for both private and public scenarios.

Package Contents

Before assembly, ensure all components are present:

- Three structural wooden strips (top section)
- Three wooden legs (main support)
- Tray with chain and screws
- Rust-proof galvanized fly nuts and chain
- Ballast hook (if included)



Image: All components of the easel laid out, showing the wooden strips, legs, tray, and hardware. The image indicates 'Only 3 steps to tool-free assembly'.

Setup Instructions

The MEEDEN Wood Easel Stand is designed for quick and simplified installation. Follow these steps for assembly:

1. **Step 1: Join the Legs of the Top Section.**Connect the three structural wooden strips to form the upper part of the easel. Ensure the leg is installed under the rod (not above it) so the hole remains unobstructed.
2. **Step 2: Attach the Leg Extensions.** Install the three wooden legs to the top section. These form the main support structure.
3. **Step 3: Attach Tray, Ballast Hook, and Tray Stabilizer.**Secure the display tray to the easel.
4. **Step 4: Secure Chain.** Attach the chain to the eyelet screws located on the center leg and the tray stabilizer. This chain provides stability and allows for height adjustment of the display tray.

Note: The maximum load for the easel is 2.5kg (5.5 lbs). For outdoor use or windy conditions, use proper ballast to ensure stability.

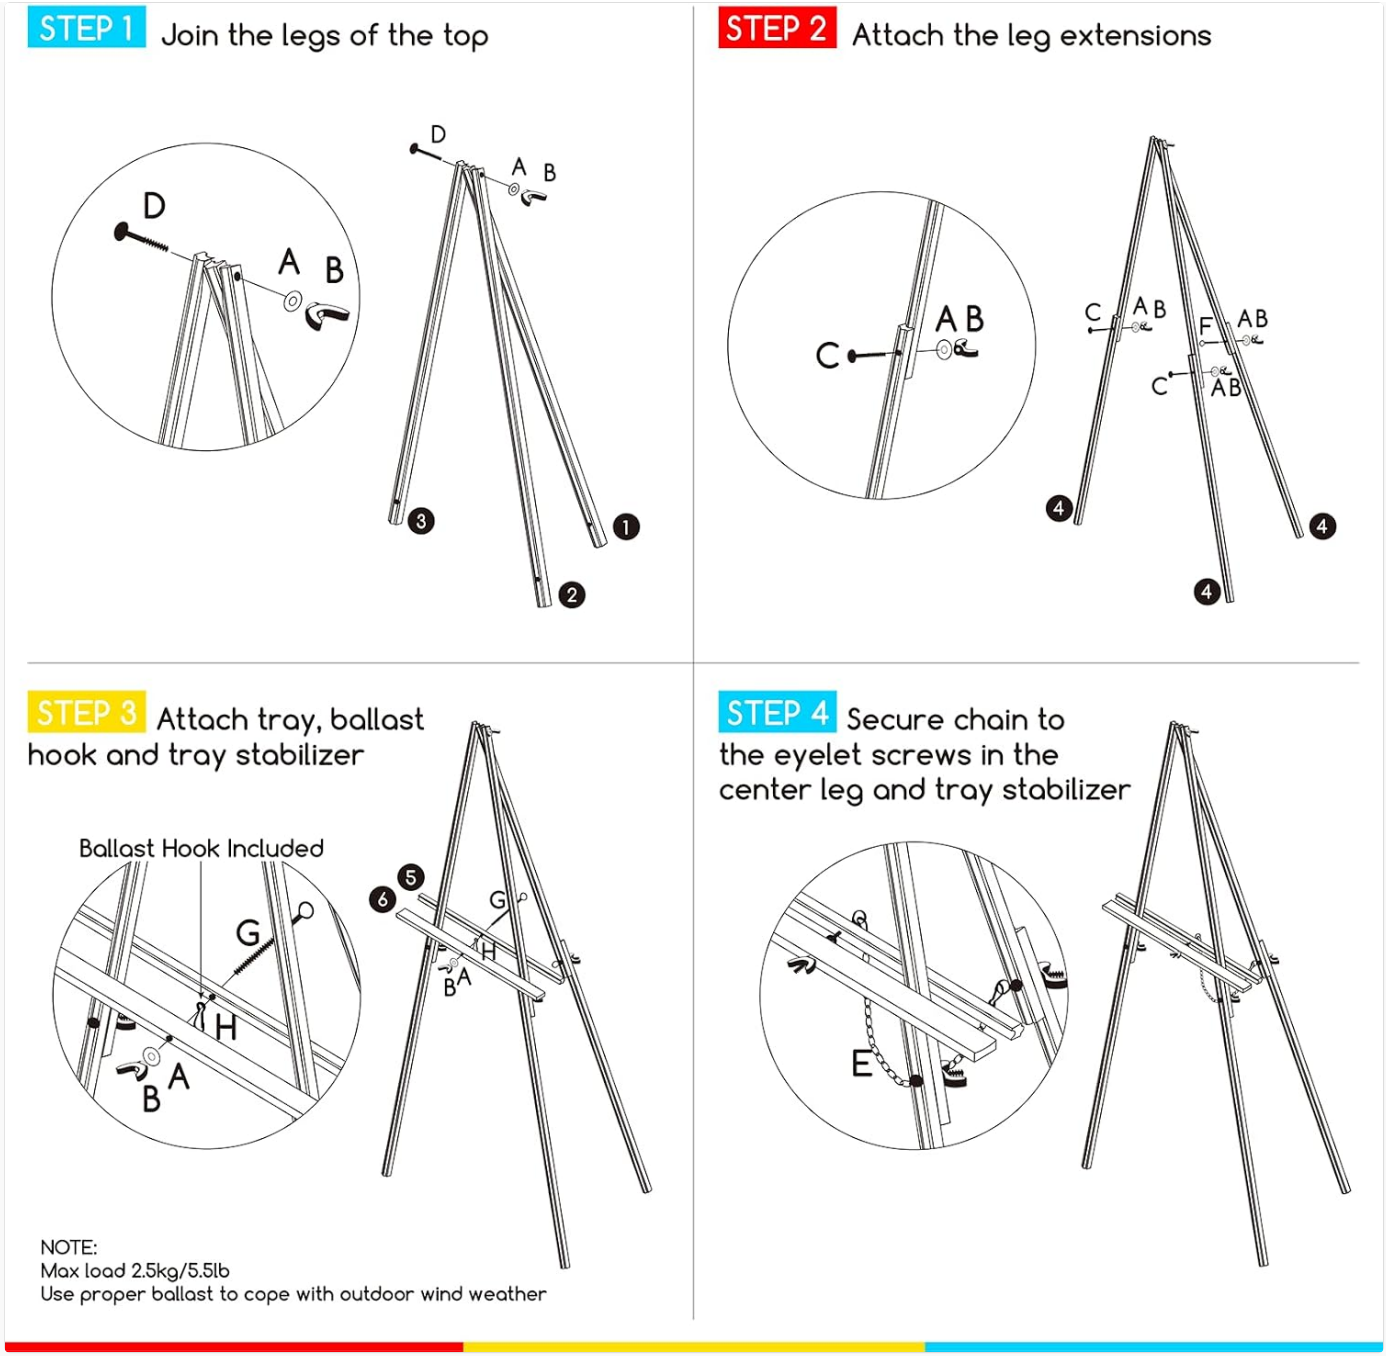


Image: A visual guide showing four steps for assembling the easel, including joining legs, attaching extensions, securing the tray, and fastening the chain.

Assembly Video Guide

Your browser does not support the video tag.

Video: An official MEEDEN ART video demonstrating the assembly process and various uses of the wood display easel stand for signs, posters, and weddings. Duration: 1 minute, 10 seconds.

Operating Instructions

Once assembled, the MEEDEN Wood Easel Stand is ready for use. Its design allows for flexible display options:

- **Adjusting Display Height:** The display tray can be adjusted along the easel legs to accommodate different sizes of artwork or signs. Use the chain and eyelet screws to secure the tray at the desired height. The easel can hold a maximum canvas height of 40 inches.
- **Placement:** Position the easel on a flat, stable surface. For outdoor use, consider adding weight to the base or using the ballast hook to enhance stability against wind.
- **Display Items:** Place your artwork, sign, or board securely on the display tray. Ensure the item is centered and

balanced to prevent tipping.



Image: The easel displaying a 'Welcome' sign with floral arrangements at an outdoor wedding setting.



Image: A collage showing the easel used in a grocery store for a 'Sale' sign and in a cafe for a menu, demonstrating its versatility.

Product Overview Video

Your browser does not support the video tag.

Video: An official MEEDEN ART video showcasing the MEEDEN Wooden Easel for Display in various settings and highlighting its features. Duration: 45 seconds.

Maintenance

To ensure the longevity and appearance of your MEEDEN Wood Easel Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the wooden surfaces with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the easel in a dry environment away from direct sunlight or extreme temperature fluctuations to prevent warping or cracking of the wood. The easel can be folded for compact storage.
- **Hardware:** Periodically check all screws and connections to ensure they are tight. Tighten any loose hardware as needed.

Troubleshooting

If you encounter any issues with your easel, consider the following:

- **Easel Instability:** Ensure all legs are fully extended and locked into place. Verify that the display tray is securely attached and the chain is properly tensioned. Place the easel on a level surface. For outdoor use, add ballast to the base.
- **Difficulty Assembling:** Refer to the detailed assembly steps and the provided video guide. Ensure all components are oriented correctly before tightening.
- **Damaged Components:** If any part of the easel is damaged upon arrival or during normal use, please contact MEEDEN customer support for assistance.

Specifications

Feature	Detail
Brand	MEEDEN
Model Name	AFE-6023-YM Display Easel
Model Number	AF-6023-YM
Color	Natural
Material	Beech Wood
Assembled Height	64 inches (163 cm)
Product Dimensions (D x W x H)	29"D x 26"W x 29"H
Item Weight	1.36 kg (2.9 lbs)
Max Canvas Height	40 inches
Load Bearing Capacity	Up to 2.5 kg (5.5 lbs)

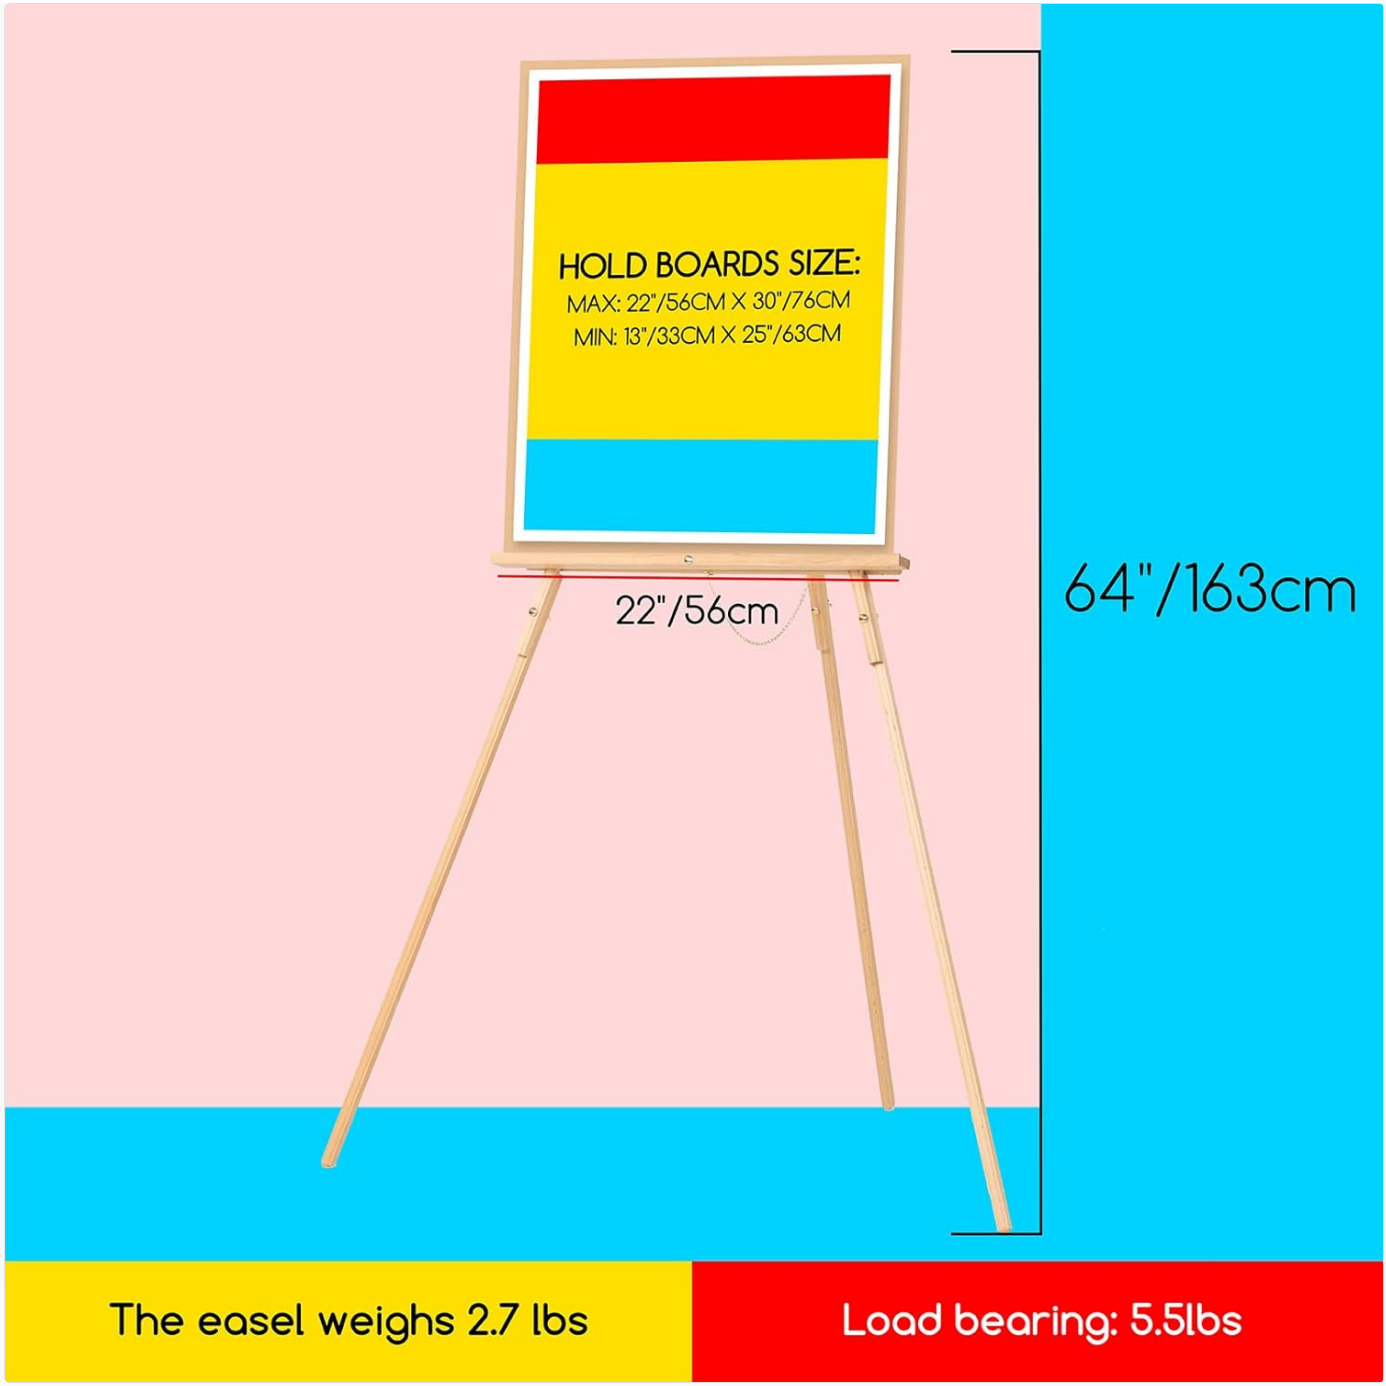


Image: A diagram illustrating the easel's height (64 inches/163 cm), board size capacity (max 22"x30"/56cmx76cm, min 13"x25"/33cmx63cm), weight (2.7 lbs), and load bearing (5.5 lbs).



Image: A detailed view of the easel's construction, highlighting the solid Germany beech wood with natural texture and the rust-proof galvanized fly nut and chain.

Warranty and Support

MEEDEN is committed to providing high-quality art supplies and customer satisfaction. If you have any questions, concerns, or require assistance with your product, please contact MEEDEN customer support. We are dedicated to helping you with your artistic endeavors and ensuring a positive experience with our products.

For support, please refer to the contact information provided with your purchase or visit the official MEEDEN website.

© 2026 MEEDEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question