EIH P1001

EIH Large Baby Playpen Instruction Manual

Model: P1001

Brand: EIH

Introduction

Thank you for choosing the EIH Large Baby Playpen. This playpen is designed to provide a safe, spacious, and engaging environment for babies and toddlers aged 1 to 6 years old. With its generous dimensions of 79 inches by 59 inches, it offers ample room for play and activity, both indoors and outdoors. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience for your child.



Figure 1: EIH Large Baby Playpen with included ball pit and colorful balls.

Safety Information

Your child's safety is our top priority. Please read and follow all safety instructions carefully before assembling and using the playpen.

- Always supervise your child while they are in the playpen.
- Ensure all parts are securely assembled before placing your child inside.
- Do not leave children unattended.
- Keep the playpen away from open flames, heaters, and other heat sources.
- Do not use the playpen if any parts are damaged or missing. Contact customer support for replacement parts.
- The playpen is designed for children aged 1 to 6 years old and has a maximum weight recommendation of 100 pounds.
- The materials used are non-toxic, CPC qualified, and BPA-free, including 300D Oxford fabric, alloy steel, and PP plastic connectors.

- Ensure the playpen is placed on a flat, stable surface. The suction cups on the base are designed for marble and wood floors, but may not adhere to carpet or cement floors.



Figure 2: Material safety and certification details.

Components List

Before assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, please contact EIH customer support.

Component	Quantity	Description
Alloy Steel Tubes	Varies by size	Main frame components for structure.
PP Plastic Connectors	Varies by size	Connectors for assembling the frame.
300D Oxford Fabric Cover	1	Main fabric enclosure with mesh sides and zipper doors.

Component	Quantity	Description
Ocean Ball Pit	1	Foldable ball pit for additional play.
Colorful Balls	100 PCS	Plastic balls for the ball pit.
Pull-up Handles	4 (approx.)	Handles for children to assist with standing.
Carry Bag	1	For convenient storage and transport.

Setup Instructions

Follow these steps to assemble your EIH Large Baby Playpen. Assembly is best performed by two adults.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to ensure all components listed above are present.
2. **Assemble the Base Frame:** Connect the shorter alloy steel tubes to the plastic corner connectors to form the rectangular base of the playpen. Ensure each tube clicks securely into place within the connectors.
3. **Attach Side Tubes:** Insert the vertical alloy steel tubes into the base connectors. Then, connect the horizontal tubes to form the upper frame, using the appropriate plastic connectors. Ensure all connections are firm and stable.
4. **Install Fabric Cover:** Slide the 300D Oxford fabric cover over the assembled frame. Ensure the corner protectors and velcro fasteners are aligned with the frame. Secure the fabric to the frame using the integrated velcro straps and zippers. The fabric should fit snugly around the frame.
5. **Secure Suction Cups:** Press down firmly on each corner of the playpen to engage the suction cups on the base with the floor. This provides additional stability on smooth surfaces like marble or wood.
6. **Attach Pull-up Handles:** Clip the colorful pull-up handles onto the top rails of the playpen at desired locations. These are designed to assist your child with standing.
7. **Set up Ball Pit:** Unfold the ocean ball pit and place it inside the playpen. Pour the included colorful balls into the pit.



Figure 3: Illustration of the sturdy frame and connectors.



Figure 4: Details of the safe and soft playpen features, including corner protection and velcro fastening.

Operating Instructions

The EIH Large Baby Playpen is designed for ease of use and maximum safety for your child.

- **Entry and Exit:** The playpen features two zippered doors for easy entry and exit for both children and adults. Ensure zippers are fully closed when the child is inside to prevent unsupervised exit.
- **Play Area:** The large interior space allows your child to crawl, walk, and play freely. You can add additional toys or a play mat (not included) for enhanced comfort and engagement.
- **Ball Pit Use:** The included ocean ball pit provides an additional fun activity. Ensure the balls are clean and free from damage before use.
- **Parental Interaction:** The spacious design allows parents to comfortably enter the playpen and interact with their child, fostering bonding and supervised play.



Figure 5: Playpen in use, demonstrating ample space for a child and ball pit.

Maintenance

Regular maintenance will extend the life of your EIH Large Baby Playpen and ensure a hygienic environment for your child.

- **Cleaning the Fabric:** The 300D Oxford fabric can be spot cleaned with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before folding or storing.
- **Cleaning the Frame:** Wipe down the alloy steel tubes and plastic connectors with a damp cloth. Dry thoroughly to prevent rust or mildew.
- **Ball Pit Cleaning:** The ocean ball pit can be wiped clean with a damp cloth. The colorful balls can be washed with mild soap and water, then air dried.
- **Storage:** When not in use, disassemble the playpen and store it in the provided carry bag in a cool, dry place away from direct sunlight.

Troubleshooting

If you encounter any issues with your EIH Large Baby Playpen, please refer to the following common solutions:

Problem	Possible Cause	Solution
Playpen feels unstable or wobbly.	Tubes not fully connected; suction cups not engaged; uneven surface.	Ensure all alloy steel tubes are fully inserted into the plastic connectors until they click. Press down on the corners to engage suction cups on smooth floors. Move the playpen to a flat, level surface.
Fabric cover does not fit properly.	Incorrect orientation; not fully stretched.	Verify the fabric cover is oriented correctly. Ensure all velcro fasteners and zippers are properly aligned and secured around the frame. Stretch the fabric gently to fit.
Missing or damaged parts upon arrival.	Packaging error or transit damage.	Do not attempt to use the playpen. Contact EIH customer support immediately with your purchase details for assistance and replacement parts.
Suction cups not adhering to the floor.	Floor surface is carpeted, textured, or dirty.	Suction cups work best on smooth, clean surfaces like wood or tile. They may not adhere to carpet or rough cement. Clean the floor surface if dirty.

Specifications

Attribute	Detail
Brand	EIH
Model Number	P1001
Package Dimensions	40 x 11.25 x 8.75 inches
Item Weight	17.71 pounds
Maximum Weight Recommendation	100 Pounds
Material Type	Alloy Steel, Plastic
Material Composition	Iron Tube, PP Plastic connector, 300D Oxford fabric
Color	Light Grey
Floor Area	32.36 Square Feet
Age Range (Description)	Kid (Suitable for 1-6 Years Olds)



Figure 6: Detailed dimensions of the EIH Large Baby Playpen.

Warranty and Support

For any warranty claims, product support, or inquiries regarding your EIH Large Baby Playpen, please contact the seller directly through the platform where you made your purchase. Provide your order number and a detailed description of the issue for prompt assistance.

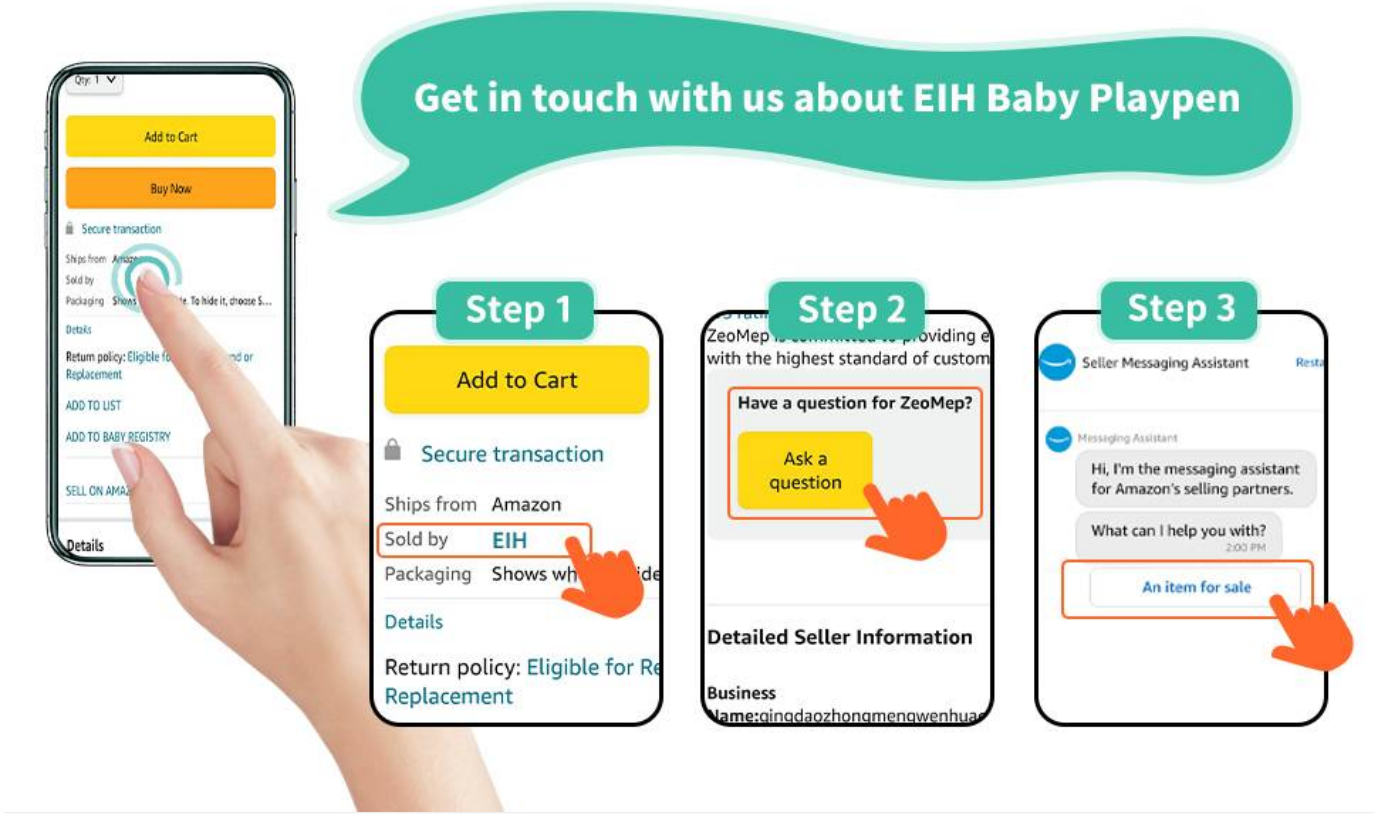


Figure 7: Guide on contacting the seller for support.

© 2023 EIH. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question