Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit DV7200

ZdalaMit Replacement Remote Control Instruction Manual

For Furrion Entertainment System Model DV7200

Introduction

This manual provides detailed instructions for the ZdalaMit Replacement Remote Control, designed for seamless operation with the Furrion Entertainment System DV7200 and DV 7200 models. This remote control requires no programming and is ready for use upon battery installation.

Package Contents

- 1X ZdalaMit Replacement Remote Control

Note: AAA batteries are required and not included.

Setup

Battery Installation


1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into position until it clicks securely.

First Use

Once batteries are installed, the remote control is ready for immediate use. No additional programming or pairing is required for the Furrion Entertainment System DV7200.

Operating Instructions

This section details the functions of the buttons on your ZdalaMit Replacement Remote Control. Refer to the image below for visual identification of each button.

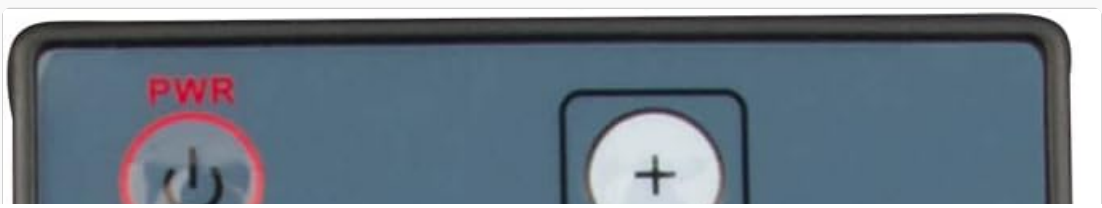


APS
SEL
SCAN
CLOCK
MODE
BAND
LOC
LOUD
HITOP
INT
RPT
RDM
1
2
3
4
5
6
7
8
9
0
*
#
CLEAR
MUTE
CALL LOG
ALARM
ZONE1
ZONE2
DV7200



Figure 1: ZdalaMit Replacement Remote Control for Furrion DV7200. This image displays the full layout of the remote control, featuring various buttons for power, navigation, numeric input, and specific functions for the Furrion Entertainment System.

Button Functions

- **PWR (Power):** Turns the entertainment system on or off.
- **APS:** Likely for Auto Program Scan or similar function.
- **SCAN:** Initiates a scan function, possibly for radio stations or media files.
- **CLOCK:** Accesses or sets the system clock.
- **+ / - (Volume/Navigation):** Increases or decreases volume. Also used for navigation in menus.
- **Left/Right Arrows (Previous/Next Track):** Navigates to the previous or next track/chapter.
- **SEL (Select):** Confirms a selection in menus.
- **MODE (HITOP):** Cycles through different operating modes (e.g., Radio, CD, USB, AUX).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B098RVX7MF

More documents and user manuals: **https://manuals.plus/**