Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tefal EY501D50

T-fal Easy Fry and Grill Air Fryer Instruction Manual

Model: EY501D50

Introduction

Welcome to the world of convenient and healthy cooking with your new T-fal Easy Fry and Grill Air Fryer. This innovative 2-in-1 appliance combines the power of an air fryer with the authentic taste of grilling, allowing you to prepare a wide variety of delicious meals with less added fat. Designed for ease of use and efficiency, this manual will guide you through the setup, operation, and maintenance of your appliance to ensure optimal performance and longevity.

Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.


- **Keep away from naked flame or direct heat sources.**
- Do not immerse the appliance, cord, or plug in water or other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm (4 inches) free space on the back and sides and 10 cm (4 inches) free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Hot air is released through the air outlet opening during air frying. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.

Product Overview

The T-fal Easy Fry and Grill Air Fryer is designed for versatile cooking. Below are key components and features.



Overall View: The T-fal Easy Fry and Grill Air Fryer, showcasing its sleek stainless steel and black design, accompanied by the removable grill plate.

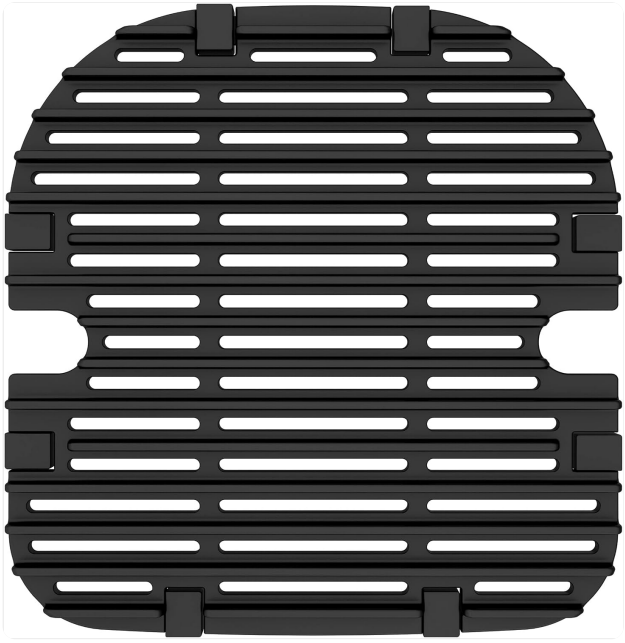

Die-Cast Aluminum Sizzling Grill Plate: This unique grill plate is designed to provide authentic grill marks and juicy results for your food.



Control Dial: The central dial allows for full manual control of temperature and time settings, ranging from 80°C to 200°C.



Extra Large Capacity: The 4.2L / 4.4Qt capacity basket is suitable for preparing meals for up to 6 people.

Setup and First Use

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain the packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, clean the removable parts (basket, grill plate) with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the appliance on a stable, horizontal, heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 10 cm / 4 inches clearance on all sides).
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Pre-heating (Optional First Run):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

Operating Instructions

General Operation

1. **Prepare Food:** Place your ingredients into the cooking basket or onto the grill plate. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit.
3. **Set Temperature and Time:** Use the control dial to select the desired temperature (80°C-200°C) and cooking time (up to 60 minutes).
4. **Start Cooking:** The appliance will begin heating automatically once settings are selected.
5. **Shaking/Flipping (Optional):** For even cooking, especially with smaller items like fries, shake the basket or flip the food halfway through the cooking time.
6. **Automatic Shut-off:** The appliance will automatically shut off when the timer reaches zero. A bell sound will indicate completion.
7. **Remove Food:** Carefully pull out the basket and remove the cooked food using tongs or a heat-resistant utensil.

Cooking Modes and Technologies

- **Air Frying (Extra Crisp Technology):** This technology optimizes hot air flow for an incomparable crispiness on the outside while keeping the inside tender. It uses 99% less added fat compared to traditional deep frying.



Extra Crisp Technology: Illustrates the optimized hot air flow for crispy results.

- **Grilling (Die-Cast Aluminum Sizzling Grill Plate):** Use the included grill plate to achieve barbecue-style searing and flavor indoors. This is ideal for meats, fish, and vegetables.



Grilling Function: Shows a perfectly grilled steak on the die-cast aluminum plate.

- **Faster Cooking:** This appliance can prepare a wide variety of meals up to 49% faster than a conventional oven, saving time and energy.



Efficiency: Highlighting the speed and energy-saving benefits of the air fryer.

Cleaning and Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your T-fal Easy Fry and Grill Air Fryer.

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The cooking basket and grill plate are dishwasher safe. Alternatively, they can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in warm soapy water for 10-15 minutes.
3. **Non-Stick Coating:** The basket has a non-stick coating. Avoid using metal utensils or abrasive cleaning materials that could damage the coating.
4. **Main Unit:** Wipe the exterior of the appliance with a damp cloth. Never immerse the main unit in water or any other liquid.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

Troubleshooting

If you encounter any issues with your appliance, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
The appliance does not work.	The appliance is not plugged in. The timer is not set.	Plug the main plug into a grounded wall socket. Turn the timer knob to the desired cooking time.
Food is not cooked evenly.	Too much food in the basket. Food was not shaken/flipped.	Reduce the amount of food per batch. Shake or flip food halfway through cooking.
Air fried snacks are not crispy.	Incorrect temperature or cooking time. Certain types of food require oil.	Adjust temperature and time according to recipe. Lightly brush or spray oil on food for crispier results.
White smoke comes out of the appliance.	Fat residue from previous use. Too much oil used.	Clean the basket and grill plate thoroughly after each use. Drain excess oil from food before air frying.

Specifications

Feature	Detail
Brand	Tefal
Model Name	Electric Air Fryers (Model: EY501D50)
Capacity	4.2 Liters / 4.4 Quarts (1.2kg food)
Color	Black / Stainless Steel
Material	Aluminum (Inner Material)
Wattage	1400 watts (Output Wattage: 648 Watts)
Voltage	120V
Control Method	Touch / Manual Dial
Special Feature	Manual, Programmable, Die-Cast Grill Plate, Extra Crisp Technology
Recommended Uses	Roast, Bake, Reheat, Air Fry, Grill
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket, Grill Plate)
Item Weight	11.9 Pounds
Product Dimensions (LxWxH)	15.75 x 14.96 x 11.81 inches

Warranty and Support

T-fal products are manufactured to high quality standards. For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official T-fal website.
For customer support, service, or to purchase replacement parts, please contact T-fal customer service through their official website or the contact information provided in your product packaging.
You can also visit the T-fal Brand Store on Amazon for more product information and support resources.

© 2024 T-fal. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B099NX8TNJ

More documents and user manuals: **https://manuals.plus/**