Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Crosley CR8017B-TA

Crosley Voyager CR8017B-TA Portable Bluetooth Vinyl Record Player Instruction Manual

Model: CR8017B-TA | Brand: Crosley

Introduction

The Crosley Voyager Record Player is designed to blend vintage aesthetics with modern audio technology. This portable turntable supports 33 1/3, 45, and 78 RPM records, delivering audio through its integrated stereo speakers. It features built-in Bluetooth for streaming digital music to the turntable or connecting to external wireless speakers. An adjustable pitch control knob allows for fine-tuning playback speed. The Voyager offers a versatile listening experience for both new and experienced vinyl enthusiasts.

What's in the Box

- CR8017B-TA Turntable
- 45 RPM Adapter
- Power Adaptor

Product Features

- **Three-Speed Belt-Drive Turntable:** Plays 33 1/3, 45, and 78 RPM records. Includes a cueing lever to gently lower the needle and adjustable pitch control for precise playback speed.
- **Bluetooth Connectivity:** Allows streaming of digital audio from a device to the turntable's built-in speakers, or streaming vinyl audio from the turntable to external Bluetooth-enabled speakers.
- **Quality Sound & Connection Options:** Features dynamic full-range stereo speakers and an auxiliary input. RCA output is available for connecting to an external stereo system, and a headphone jack for private listening.
- **Convenience and Portability:** Designed for easy setup and immediate use. Its portable suitcase design with a carry handle makes it convenient to transport.

Setup

1. **Unpack the Unit:** Carefully remove the turntable and all accessories from the packaging. Retain packaging for

future transport or storage.

2. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, or excessive vibration.
3. **Power Connection:** Connect the power adaptor to the DC input jack on the back of the unit, then plug the adaptor into a standard wall outlet.
4. **Remove Stylus Protector:** Gently remove the clear plastic stylus protector from the needle assembly.

Operating Instructions

Playing a Vinyl Record

1. **Power On:** Turn the POWER/VOLUME knob clockwise to power on the unit.
2. **Select Mode:** Set the FUNCTION switch to PHONO mode.
3. **Place Record:** Place a vinyl record on the turntable platter. If playing a 45 RPM single, use the included 45 RPM adapter.
4. **Select Speed:** Set the SPEED switch to the appropriate speed (33 1/3, 45, or 78 RPM) for your record.
5. **Lift Tonearm:** Lift the cueing lever to raise the tonearm. Manually move the tonearm over the desired starting track of the record.
6. **Lower Tonearm:** Gently lower the cueing lever to slowly drop the tonearm onto the record. The record will begin playing.
7. **Adjust Volume:** Adjust the volume using the POWER/VOLUME knob.
8. **Adjust Pitch:** Use the PITCH control knob to fine-tune the playback speed if needed.
9. **Auto-Stop:** The turntable features an auto-stop function. When the record finishes, the platter will stop spinning. To disable auto-stop, set the AUTO STOP switch to OFF.

Bluetooth Input (Streaming to Turntable)

1. **Select Mode:** Set the FUNCTION switch to BT (Bluetooth) mode. The Bluetooth indicator light will flash.
2. **Pair Device:** On your Bluetooth-enabled device (e.g., smartphone, tablet), search for "Crosley Voyager" in the Bluetooth settings and pair. The indicator light will become solid when connected.
3. **Play Music:** Start playing music on your device. The audio will stream through the turntable's built-in speakers.
4. **Adjust Volume:** Control the volume using both your device and the turntable's POWER/VOLUME knob.

Bluetooth Output (Streaming from Turntable)

1. **Select Mode:** Set the FUNCTION switch to PHONO mode.
2. **Activate Bluetooth Out:** Press and hold the Bluetooth Out button (usually indicated by a Bluetooth icon) for a few seconds until the indicator light flashes.
3. **Pair External Speaker:** Put your external Bluetooth speaker into pairing mode. The turntable will automatically search for and connect to the nearest discoverable Bluetooth speaker. The indicator light will become solid when connected.
4. **Play Record:** Play a vinyl record as described above. The audio will now stream to your external Bluetooth speaker.

Using Headphone Jack

Plug 3.5mm headphones into the HEADPHONE jack on the front of the unit for private listening. The built-in speakers will

be muted.

Using RCA Output

Connect RCA cables (not included) from the RCA OUTPUT jacks on the back of the turntable to the corresponding audio input jacks on your stereo system or powered speakers. Ensure the correct input is selected on your external audio system.

Maintenance

Cleaning the Unit

- Wipe the exterior with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Keep the dust cover closed when not in use to prevent dust accumulation on the platter and stylus.

Stylus Care

- Handle the stylus gently. Avoid touching the needle with your fingers.
- Clean the stylus periodically with a soft brush, brushing from back to front.
- Replace the stylus approximately every 200-300 hours of playback for optimal sound quality and to prevent damage to your records.

Record Care

- Always hold records by their edges or the center label.
- Store records in their sleeves in a vertical position to prevent warping.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and debris.

Troubleshooting

- **No Power:** Ensure the power adaptor is securely connected to the unit and a working wall outlet. Check if the POWER/VOLUME knob is turned on.
- **No Sound:** Verify the volume is turned up on the turntable and any connected external devices. Ensure the correct function mode (PHONO or BT) is selected. If using RCA output, check connections and input selection on your external audio system. If using headphones, ensure they are fully plugged in.
- **Record Skipping:** Ensure the turntable is on a stable, level surface. Clean the record and the stylus. Check the stylus for damage or wear.
- **Incorrect Playback Speed:** Verify the SPEED switch is set to the correct RPM for the record. Adjust the PITCH control knob if necessary.
- **Bluetooth Pairing Issues:** Ensure the turntable is in Bluetooth pairing mode (flashing indicator). Make sure your device's Bluetooth is enabled and within range. Try unpairing and re-pairing the device.

Specifications


Product Dimensions	12 x 14.5 x 6 inches
Item Weight	7.25 pounds
Model Number	CR8017B-TA
Brand	Crosley

Maximum Rotational Speed	78 RPM
Material	Plastic
Color	Tan
Special Feature	Portable
Compatible Devices	Headphone, Speaker

Warranty and Support

For warranty information, technical support, or service inquiries, please refer to the documentation included with your product or visit the official Crosley website. Keep your purchase receipt as proof of purchase for warranty claims.


Visual Guide

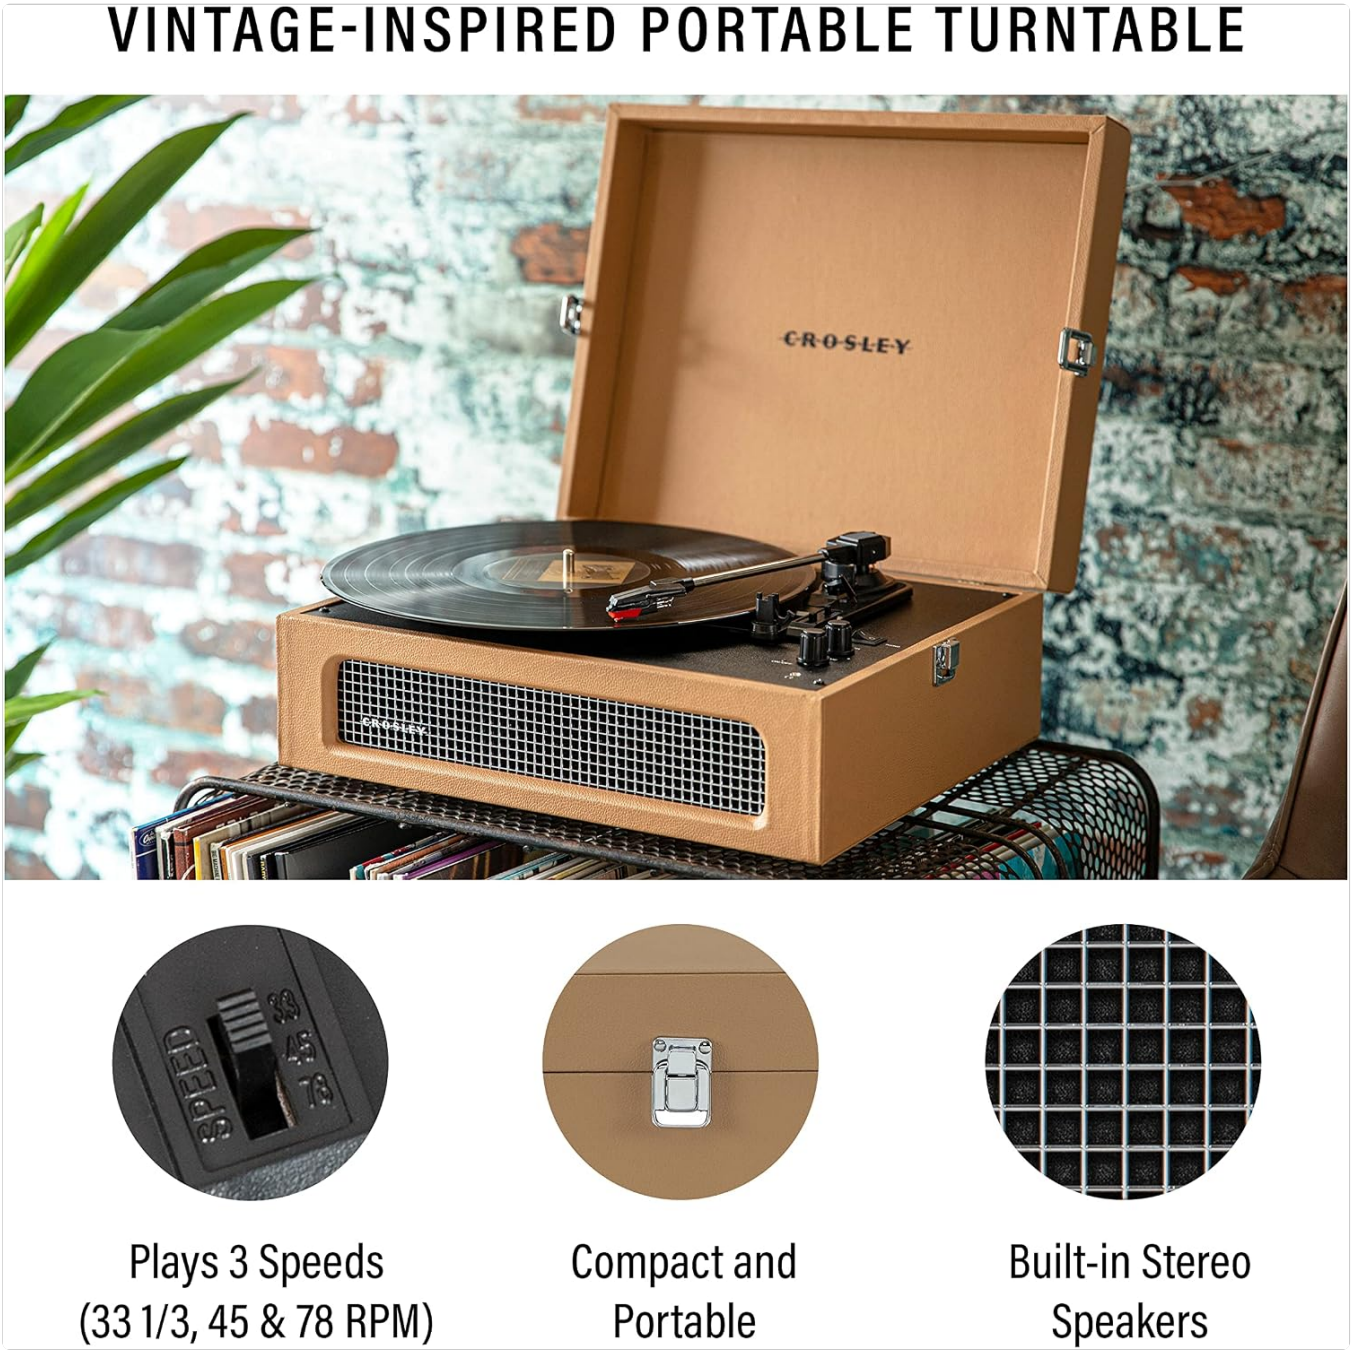

The Crosley Voyager turntable in Tan, shown open with a vinyl record on the platter, ready for playback.



A detailed top view of the turntable, highlighting the platter, tonearm, and control knobs for power, volume, pitch, and function selection.

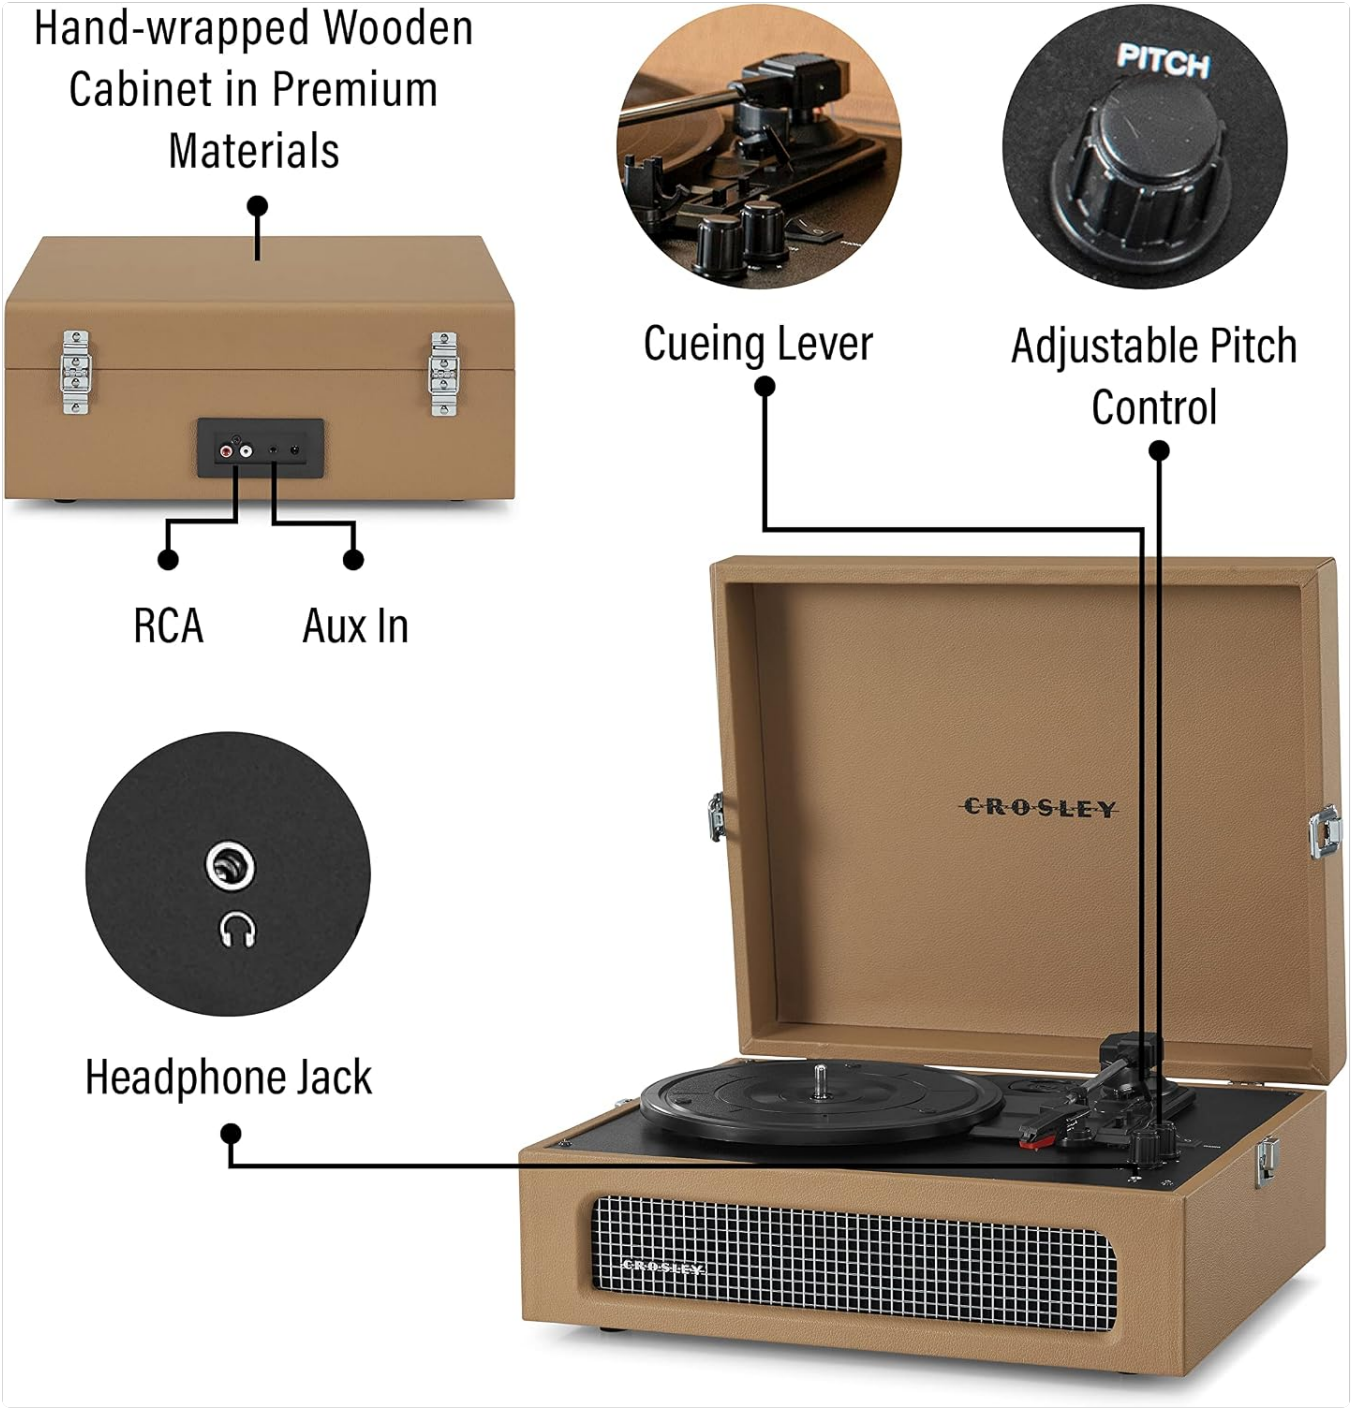

The rear panel of the turntable, showing the RCA output jacks, auxiliary input, and power input for external connections.



The Crosley Voyager in its closed, portable suitcase form, showcasing its compact design and carry handle for easy transport.



A close-up view of the speed selection switch, allowing users to choose between 33 1/3, 45, and 78 RPM.



A detailed shot of the RCA output, auxiliary input, and headphone jack, providing various connectivity options.

Product Videos

CR8017B-TA Voyager Vintage Portable Turntable: This video provides a brief overview of the Crosley Voyager turntable, showcasing its design and basic functionality.

WATCH THIS BEFORE BUYING | Crosley CR8017B-DU Voyager Vintage Portable Vinyl Record Player Turntable: A detailed review video covering various aspects of the Crosley Voyager, offering insights before purchase.

Great sound and love the Bluetooth: This video highlights the sound quality of the turntable and demonstrates its Bluetooth capabilities for a modern listening experience.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09B177GJ5

More documents and user manuals: **https://manuals.plus/**