Norifon NP-45-W

Norifon NP-45 Wall Charger Instruction Manual

Model: NP-45-W

Introduction

Thank you for purchasing the Norifon NP-45 Wall Charger. This manual provides essential information for the safe and efficient use of your charger. Please read it thoroughly before operation and retain it for future reference.
This charger is designed for use with Fujifilm NP-45 series batteries, including NP-45, NP-45A, NP-45B, and NP-45S. It features a foldable plug for portability and an LED indicator to show charging status.

Important Safety Information

- **WARNING:** To prevent fire or moisture exposure, do not expose the charger to rain or excessive humidity.
- **WARNING:** To reduce the risk of electric shock, do not remove the cover or back plate. No user-serviceable parts are inside. Refer servicing to qualified service personnel.
- **CAUTION:** Do not disassemble the unit.
- Use in dry locations only.
- Ensure the battery model printed on your battery (not camera) matches the compatible models (NP-45, NP-45A, NP-45B, or NP-45S).





Image: Back of the Norifon NP-45 Wall Charger showing input/output specifications and safety warnings. Input: AC 100V~240V 50/60Hz, Max 150mA. Output: DC 4.2V/8.4V 600mA.

Setup

1. Identify Your Battery Model

Before using the charger, verify that your battery is compatible. The compatible battery models are NP-45, NP-45A, NP-45B, or NP-45S. This information is typically printed on the battery label itself, not on your camera.



Image: Example of a battery label indicating the battery code (P/N) such as "FUJ.NP-45". Ensure your battery's code matches NP-45, NP-45A, NP-45B, or NP-45S.

2. Unfold the Plug

The Norifon NP-45 Wall Charger features a foldable plug for compact storage and travel. Gently pull out the prongs until they lock into place, ready for insertion into a power outlet.

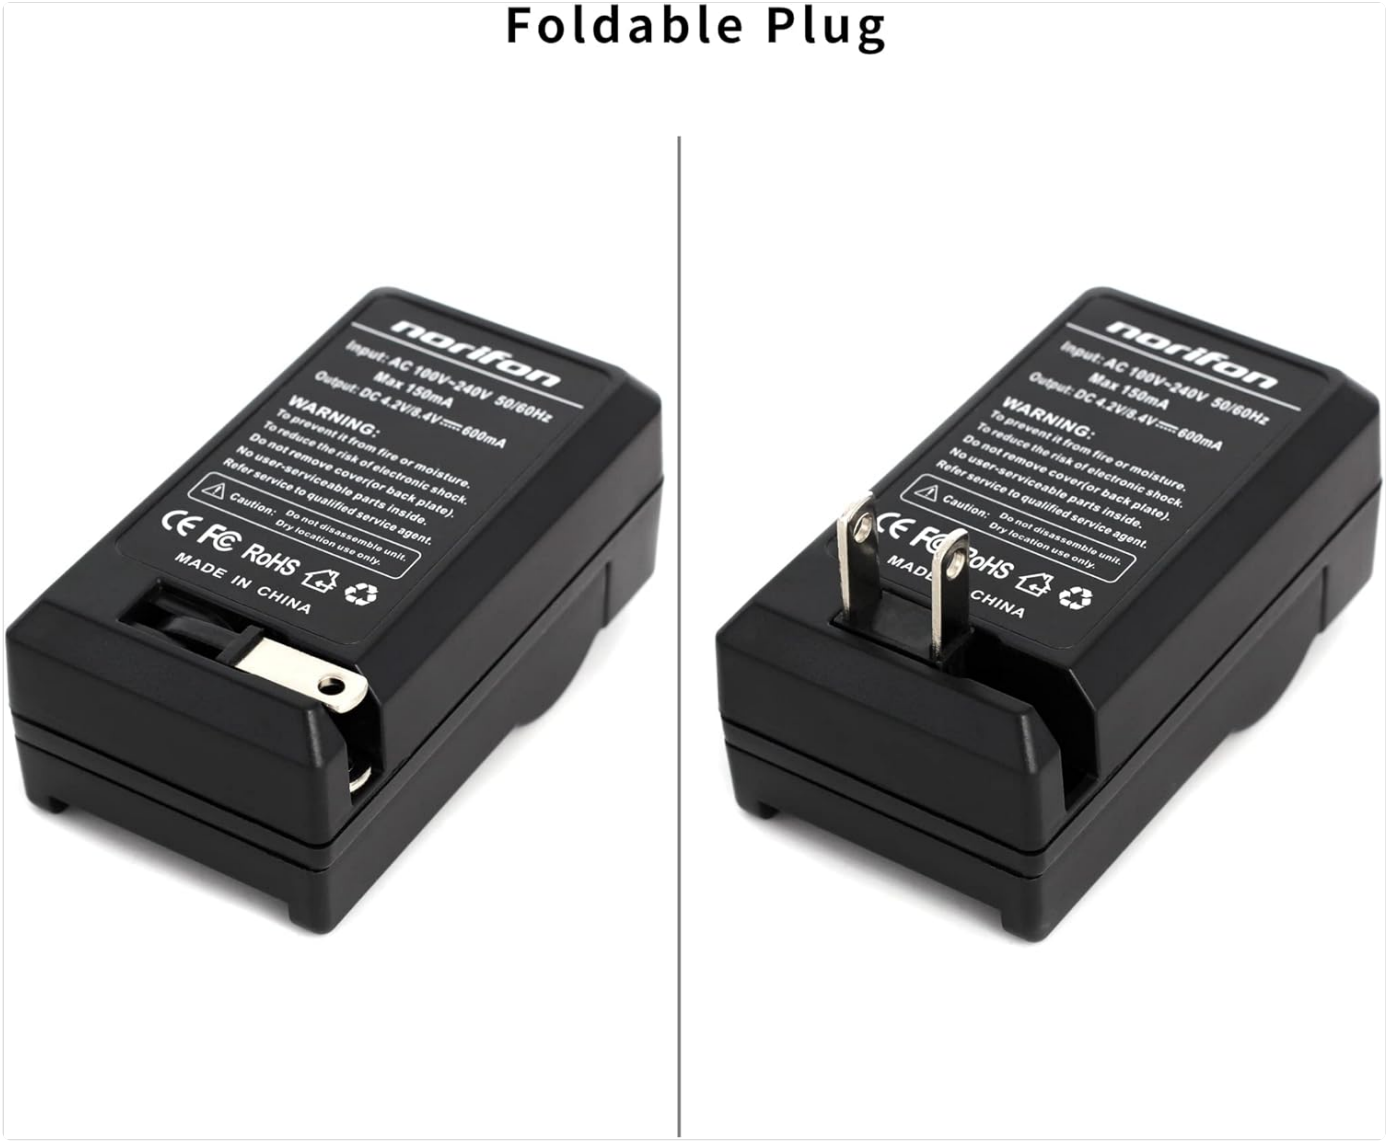


Image: The Norifon NP-45 Wall Charger shown with its foldable plug in both retracted and extended positions, highlighting its compact design.

Operating Instructions

Charging Your Battery

1. **Insert the Battery:** Carefully align the battery's positive (+) and negative (-) terminals with the corresponding contacts on the charger. Gently push the battery into the charging slot until it is securely seated.
2. **Connect to Power:** Plug the charger into a standard AC power outlet (100V-240V, 50/60Hz). The charger is designed for worldwide use.
3. **Monitor Charging Status:** The LED indicator on the charger will illuminate to show the charging status:
    - **Green (No Load):** The charger is plugged in but no battery is inserted, or the battery is fully charged.
    - **Red:** The battery is currently charging.
    - **Green (Solid):** The battery is fully charged.
4. **Remove Battery:** Once the LED indicator turns solid green, the battery is fully charged. Unplug the charger from the power outlet and carefully remove the battery.

Your browser does not support the video tag.

Video: This video demonstrates how to correctly choose and use the NP-45 charger. It shows how to identify the correct battery model and

the proper insertion of the battery into the charger, followed by plugging it into a power source and observing the LED indicator for charging status.

Maintenance

- Keep the charger clean and dry. Use a soft, dry cloth to wipe any dust or debris.
- Avoid exposing the charger to extreme temperatures, direct sunlight, or high humidity.
- Store the charger in a cool, dry place when not in use.
- Do not attempt to repair or modify the charger yourself. Contact qualified service personnel if issues arise.

Troubleshooting

Problem	Possible Cause	Solution
LED indicator does not light up.	Charger not plugged in correctly. Power outlet is not active. Battery not inserted correctly or is incompatible.	Ensure the charger is firmly plugged into a working outlet. Test the outlet with another device. Verify battery compatibility (NP-45, NP-45A, NP-45B, NP-45S) and re-insert it, ensuring correct polarity.
LED indicator remains green when battery is inserted.	Battery is already fully charged. Battery is not making proper contact with charger terminals.	Remove the battery and check if it powers your device. Re-insert the battery, ensuring good contact with the charger terminals.
Battery does not charge or charges slowly.	Battery is faulty or at the end of its lifespan. Charger is faulty.	Try charging a different, known-good compatible battery. If other batteries also fail to charge, the charger may be faulty. Contact customer support.

Specifications

Feature	Detail
Brand	Norifon
Model Number	NP-45-W
Input Voltage	AC 100V-240V, 50/60Hz (Max 150mA)
Output Voltage	DC 4.2V/8.4V
Output Current	600mA
Compatible Batteries	Fujifilm NP-45, NP-45A, NP-45B, NP-45S
Plug Type	Foldable US Plug

Feature	Detail
LED Indicator	Red (Charging), Green (No Load/Fully Charged)

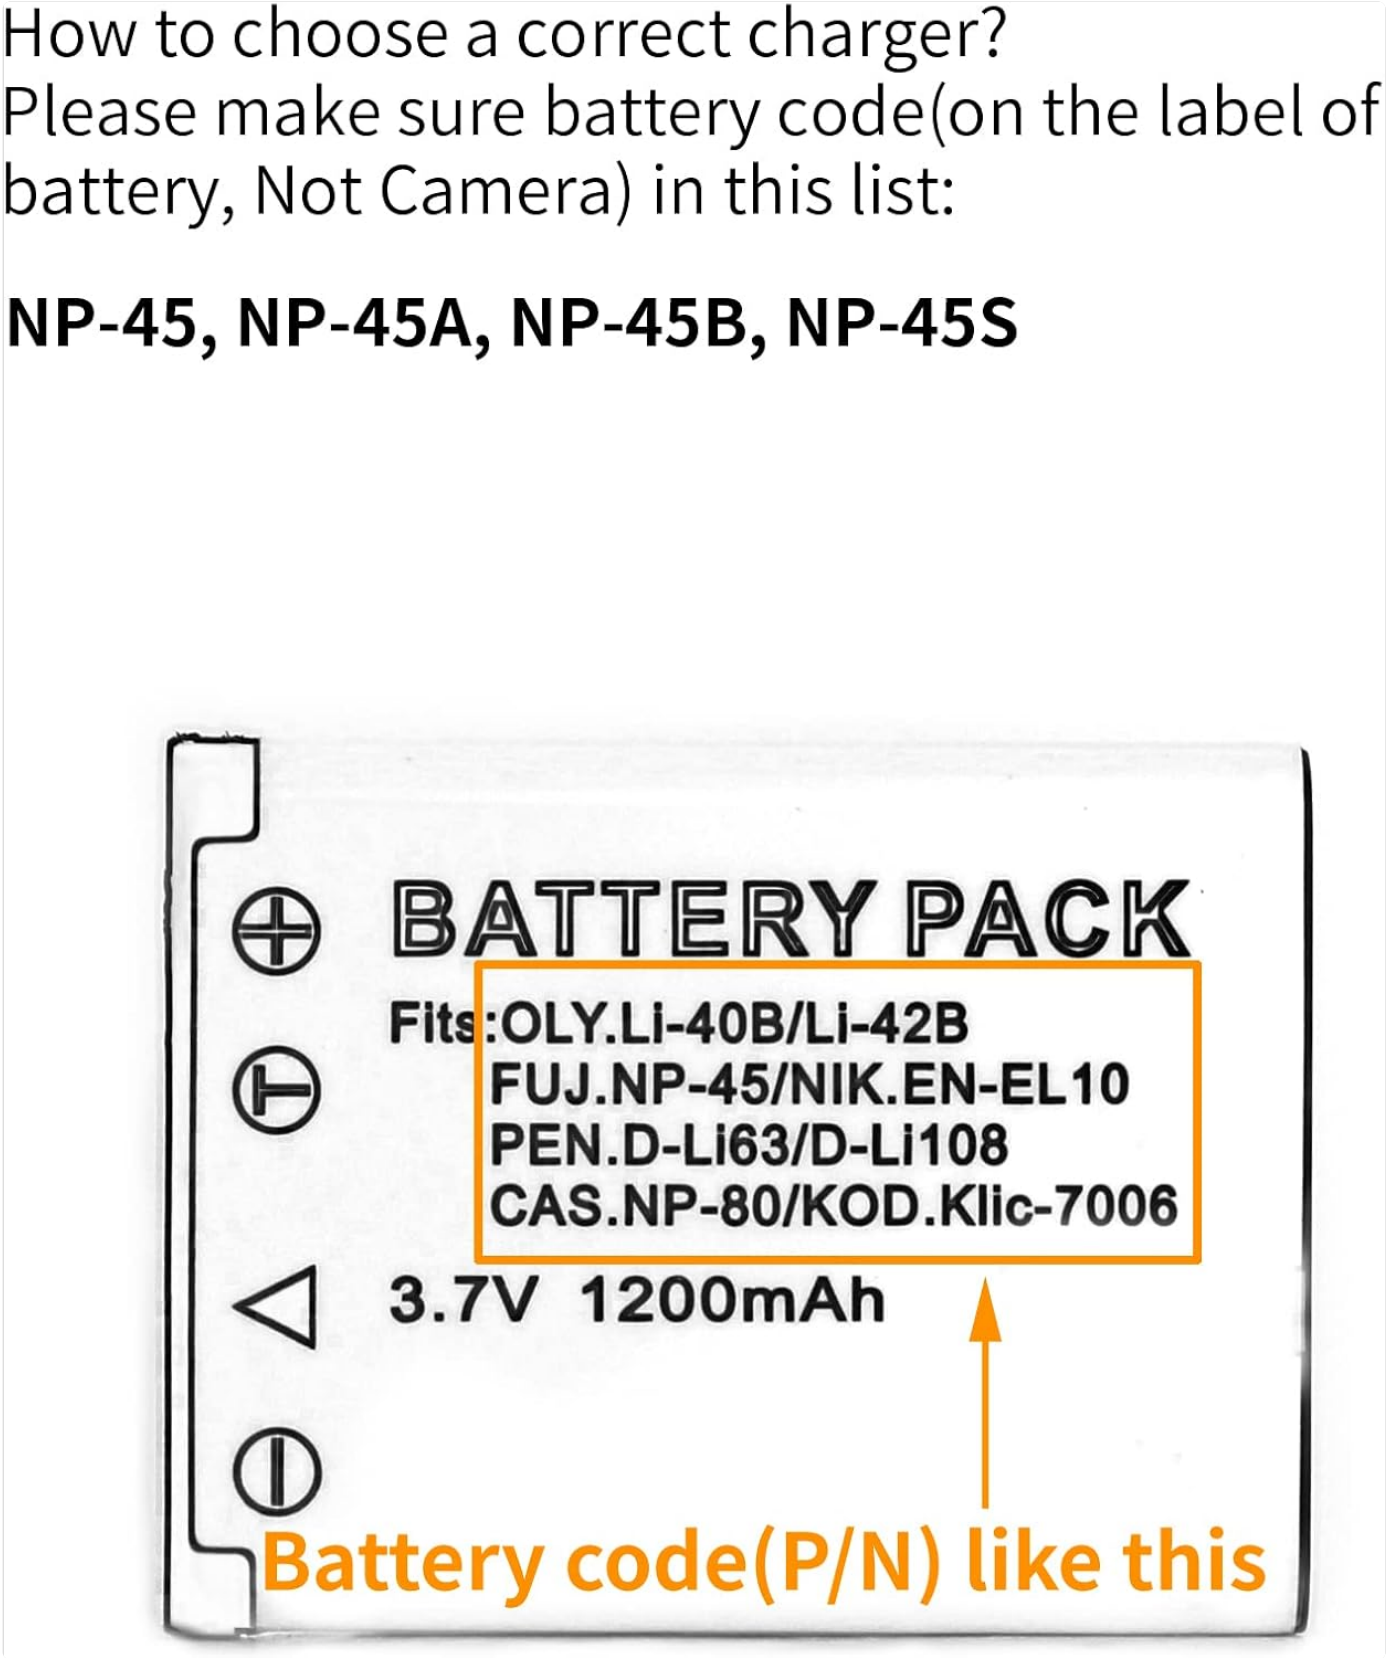


Image: Front and side views of the Norifon NP-45 Wall Charger with dimensions: 3.35 inches (8.5cm) height, 1.85 inches (4.7cm) width, and 1.38 inches (3.5cm) depth.

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Norifon customer service directly. Keep your purchase receipt for warranty claims.

Manufacturer: Norifon

© 2026 Norifon. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question