Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JYCXR B09BB6LXHR

JYCXR Rechargeable Electric Manicure Pedicure Set

MODEL: B09BB6LXHR

Introduction

Thank you for choosing the JYCXR Rechargeable Electric Manicure Pedicure Set. This cordless nail drill kit is designed for comprehensive foot and hand nail care, offering convenience and versatility. It features a built-in 2000mAh lithium battery, 5 adjustable speeds, and a low-heat motor for efficient and comfortable use. This manual provides essential information for safe operation, maintenance, and optimal performance of your device.



Image: The JYCXR electric nail file device shown with its five interchangeable drill bits and a dust cover.

Safety Information

Please read all safety instructions before using the device to prevent injury or damage.

- Always wear safety glasses when operating the nail drill to protect your eyes from flying debris or dust.
- Exercise caution with the rotating bit and motor to avoid skin burns or injury.
- Utilize the provided dust cover to minimize the spread of nail dust during use.
- Keep the nail drill and its accessories out of reach of children and pets when not in use.
- Do not immerse the device in water or use it in wet conditions.
- Ensure the device is fully charged before first use and avoid overcharging.
- If the device shows signs of damage or malfunction, discontinue use immediately and contact customer support.

Product Components

The JYCXR Manicure Pedicure Set includes the following components:

- Rechargeable Electric Nail File Device
- USB Charging Cable
- **5 High-Quality Drill Bits:**
  - Sapphire Cone: For eliminating dead skin and thick calluses.
  - Cylindrical Milling Cutter: For removing cuticles and ingrown nails.
  - Sapphire Callus Sander: For removing calluses on the soles of the feet.
  - Sapphire Wheel: For smoothing the edges of the nails.
  - Felt Cone: For cleaning and buffing the surface of the nails.
- Removable Dust Cover



Image: A close-up of the six included attachments, each labeled with its name and function.

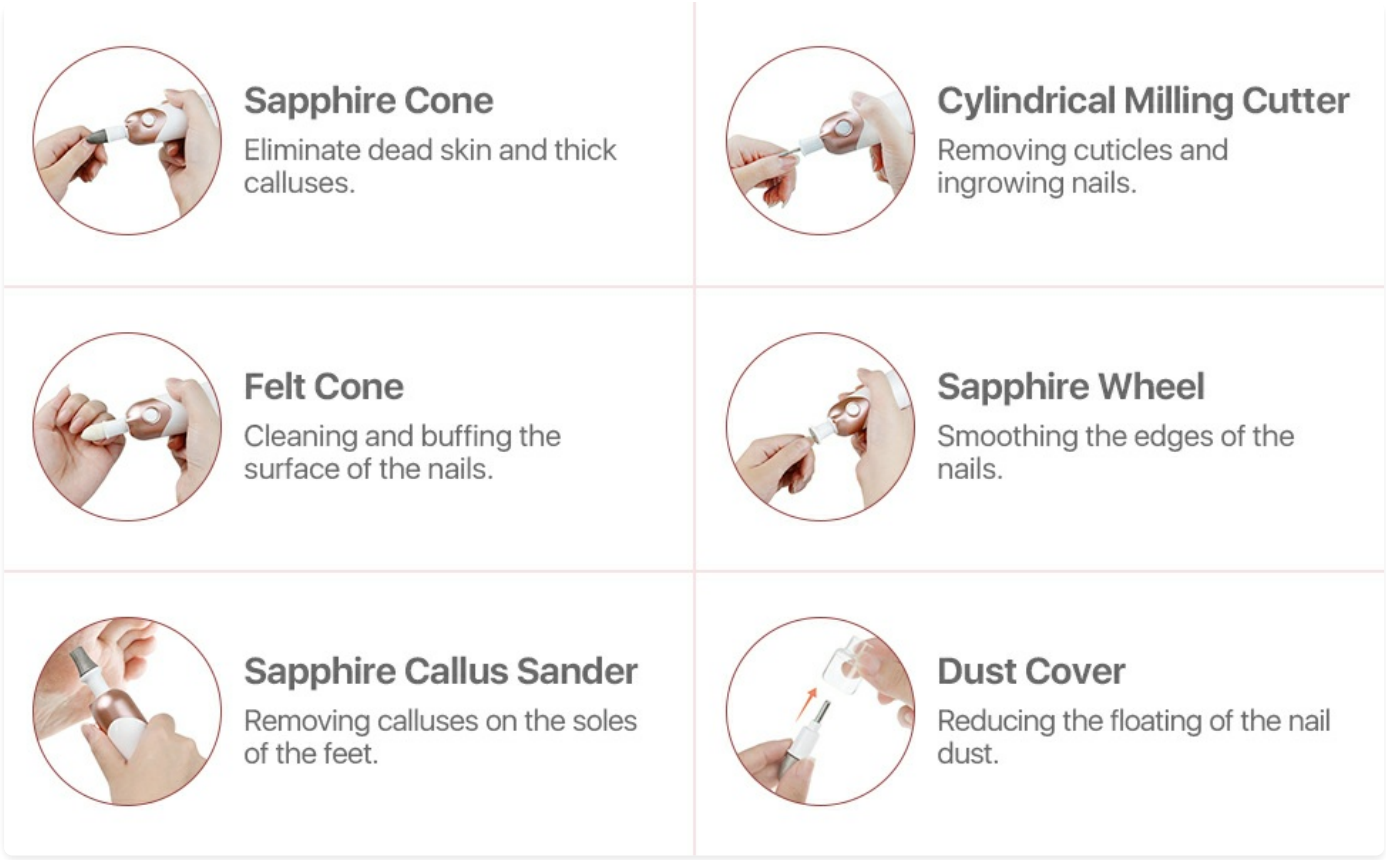


Image: Visual guide detailing the specific use for each of the six nail drill attachments.

Setup and Charging

Initial Charging

Before first use, fully charge the device. The built-in 2000mAh lithium battery provides approximately 2 hours of continuous operation on a full charge.

1. Connect the provided USB charging cable to the charging port on the device.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., laptop, power bank, or a USB wall adapter).
3. The charging indicator light will illuminate during charging and typically change color or turn off when fully charged.



Image: The device connected via USB cable to a power source, illustrating its cordless design once charged.



Image: Various charging methods for the device, including laptop, power bank, and wall adapter.

Attaching Drill Bits

To attach or change a drill bit:

1. Ensure the device is turned off.
2. Gently insert the desired drill bit into the opening at the top of the device until it clicks securely into place.
3. To remove, gently pull the drill bit straight out.



Image: An exploded view of a drill bit, illustrating its components for secure attachment and smooth operation.

Operating Instructions

Power On/Off and Speed Adjustment

The device features 5 adjustable speeds to suit various nail care needs.

1. Press the power button once to turn the device on. It will start at the lowest speed setting.
2. Press the power button repeatedly to cycle through the 5 speed settings (Baby, Adult, Medium, Fast, Strong). The indicator lights will show the current speed.

3. To turn off the device, continue pressing the power button until it cycles past the highest speed, or press and hold the power button for a few seconds.

Rotation Direction

The JYCXR electric nail drill supports both clockwise and anti-clockwise rotation, allowing for comfortable use with either hand or at different angles.

- Locate the rotation direction button (often indicated by arrows).
- Press this button to switch between clockwise and anti-clockwise rotation.



Image: An illustration highlighting the LED light, internal motor, and the two-direction rotation feature of the device.

Using Attachments

Select the appropriate drill bit for your specific nail care task:

- **Shaping and Filing:** Use the Sapphire Cone or Sapphire Wheel for precise shaping and filing of nails.
- **Cuticle Care:** The Cylindrical Milling Cutter is ideal for gently pushing back and removing excess cuticles.
- **Callus and Thick Nail Removal:** The Sapphire Callus Sander and Sapphire Cone are effective for reducing calluses and thinning thick nails.
- **Buffing and Polishing:** Finish your nail care routine with the Felt Cone to buff and polish the nail surface for a smooth, shiny finish.
- **Dust Control:** Always use the removable Dust Cover to contain nail dust during operation.



Image: Visual examples of the device's applications, such as polishing nails, removing calluses, treating thick nails, and shaping acrylic nails.

Maintenance

Cleaning the Device and Attachments

Regular cleaning ensures hygiene and extends the lifespan of your device.

1. Ensure the device is turned off and disconnected from any power source before cleaning.
2. Remove the drill bit and dust cover.
3. Wipe the main device body with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
4. Clean the drill bits and dust cover with a small brush to remove any nail dust or debris. They can also be gently wiped with an alcohol swab for disinfection.
5. Allow all parts to dry completely before reassembling or storing.

Storage

Store the device and its accessories in a cool, dry place, away from direct sunlight and moisture. Keep it in its original packaging or a protective case to prevent damage.

Troubleshooting

If you encounter any issues with your JYCXR Manicure Pedicure Set, please refer to the following common solutions:

- **Device Not Turning On:**
  - Ensure the device is fully charged. Connect it to a power source and allow sufficient charging time.
  - Verify that the power button is being pressed correctly.
- **Device Not Charging:**
  - Check the USB cable for any damage and ensure it is securely connected to both the device and the power source.
  - Try a different USB cable or power adapter to rule out a faulty accessory.
  - Ensure the power source is active and providing power.
- **Attachments Not Working Effectively:**
  - Ensure the correct attachment is being used for the specific task.
  - Verify that the attachment is securely inserted into the device.
  - Clean the attachment to remove any accumulated debris that might hinder its performance.
  - Adjust the speed setting to a higher level if more power is needed for tougher tasks like thick nails or calluses.
- **Excessive Vibration or Noise:**
  - Ensure the drill bit is properly seated and not bent or damaged.
  - Check if the device is clean and free from debris that might interfere with its operation.

If these steps do not resolve the issue, please contact JYCXR customer support for further assistance.

Specifications

Brand	JYCXR
Model	B09BB6LXHR
UPC	749102608560
Power Source	Battery Powered (Cordless)
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2000mAh (approx. 2 hours continuous operation)
Material	Acrylonitrile Butadiene Styrene (ABS)
Package Dimensions	9.45 x 5.39 x 1.85 inches
Item Weight	15.84 ounces

Warranty and Support

JYCXR provides a one-year warranty service for this product. If you encounter any problems or require assistance with your JYCXR Manicure Pedicure Kit, please do not hesitate to contact us. We are committed to providing a satisfactory solution within 24 hours.

For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official JYCXR website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question