Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VIKTOR JURGEN D005

VIKTOR JURGEN Back Massager Neck Massager with Heat

INSTRUCTION MANUAL

Model: D005

Introduction

Thank you for choosing the VIKTOR JURGEN Back Massager Neck Massager with Heat. This device is designed to provide deep kneading shiatsu massage with optional heat, offering relaxation and relief for tired muscles. It is versatile and can be used on various body parts, including the neck, back, and shoulders. This manual provides essential information for safe and effective use of your massager.



Image: The VIKTOR JURGEN Back Massager Neck Massager with Heat, showcasing its compact black design with illuminated red massage nodes.

What's in the Box

- VIKTOR JURGEN Massager with Heat
- Wall Adapter (100-240V)
- Car Adapter (12V)
- 1-Year Warranty Information

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Power Connection:** Connect the appropriate power adapter (wall or car) to the massager's power input.
3. **Placement:** Utilize the integrated strapping system on the back of the massager to secure it to an office chair or car seat, or simply position it on the desired body area.



Image: The massager shown in a car seat, demonstrating the use of the 12V DC adapter for on-the-go massage.

Operating Instructions

The VIKTOR JURGEN massager features a simple two-button control panel for ease of use.



Image: Close-up view of the two control buttons on the massager: Power and Reverse Direction.

Power Button (On/Off/Heat Control):

- Press once: Starts massage with heat.
- Press twice: Continues massage without heat.
- Press a third time: Turns off the massager.

Reverse Function Button:

- Press this button to change the direction of the shiatsu massage nodes. The nodes automatically change directions every 60 seconds, but this button allows manual reversal.

Usage Tips:

- **Deep Kneading Massage:** The four powerful Shiatsu nodes provide deep kneading action. Position the massager to target specific areas of pain or tightness.
- **Soothing Heat:** The optional heat function helps to melt away aches and pains and accelerate muscle recovery. Use it for added comfort and relaxation.
- **Versatile Application:** Use the massager on your neck, upper back, lower back, hamstrings, calves, or feet.

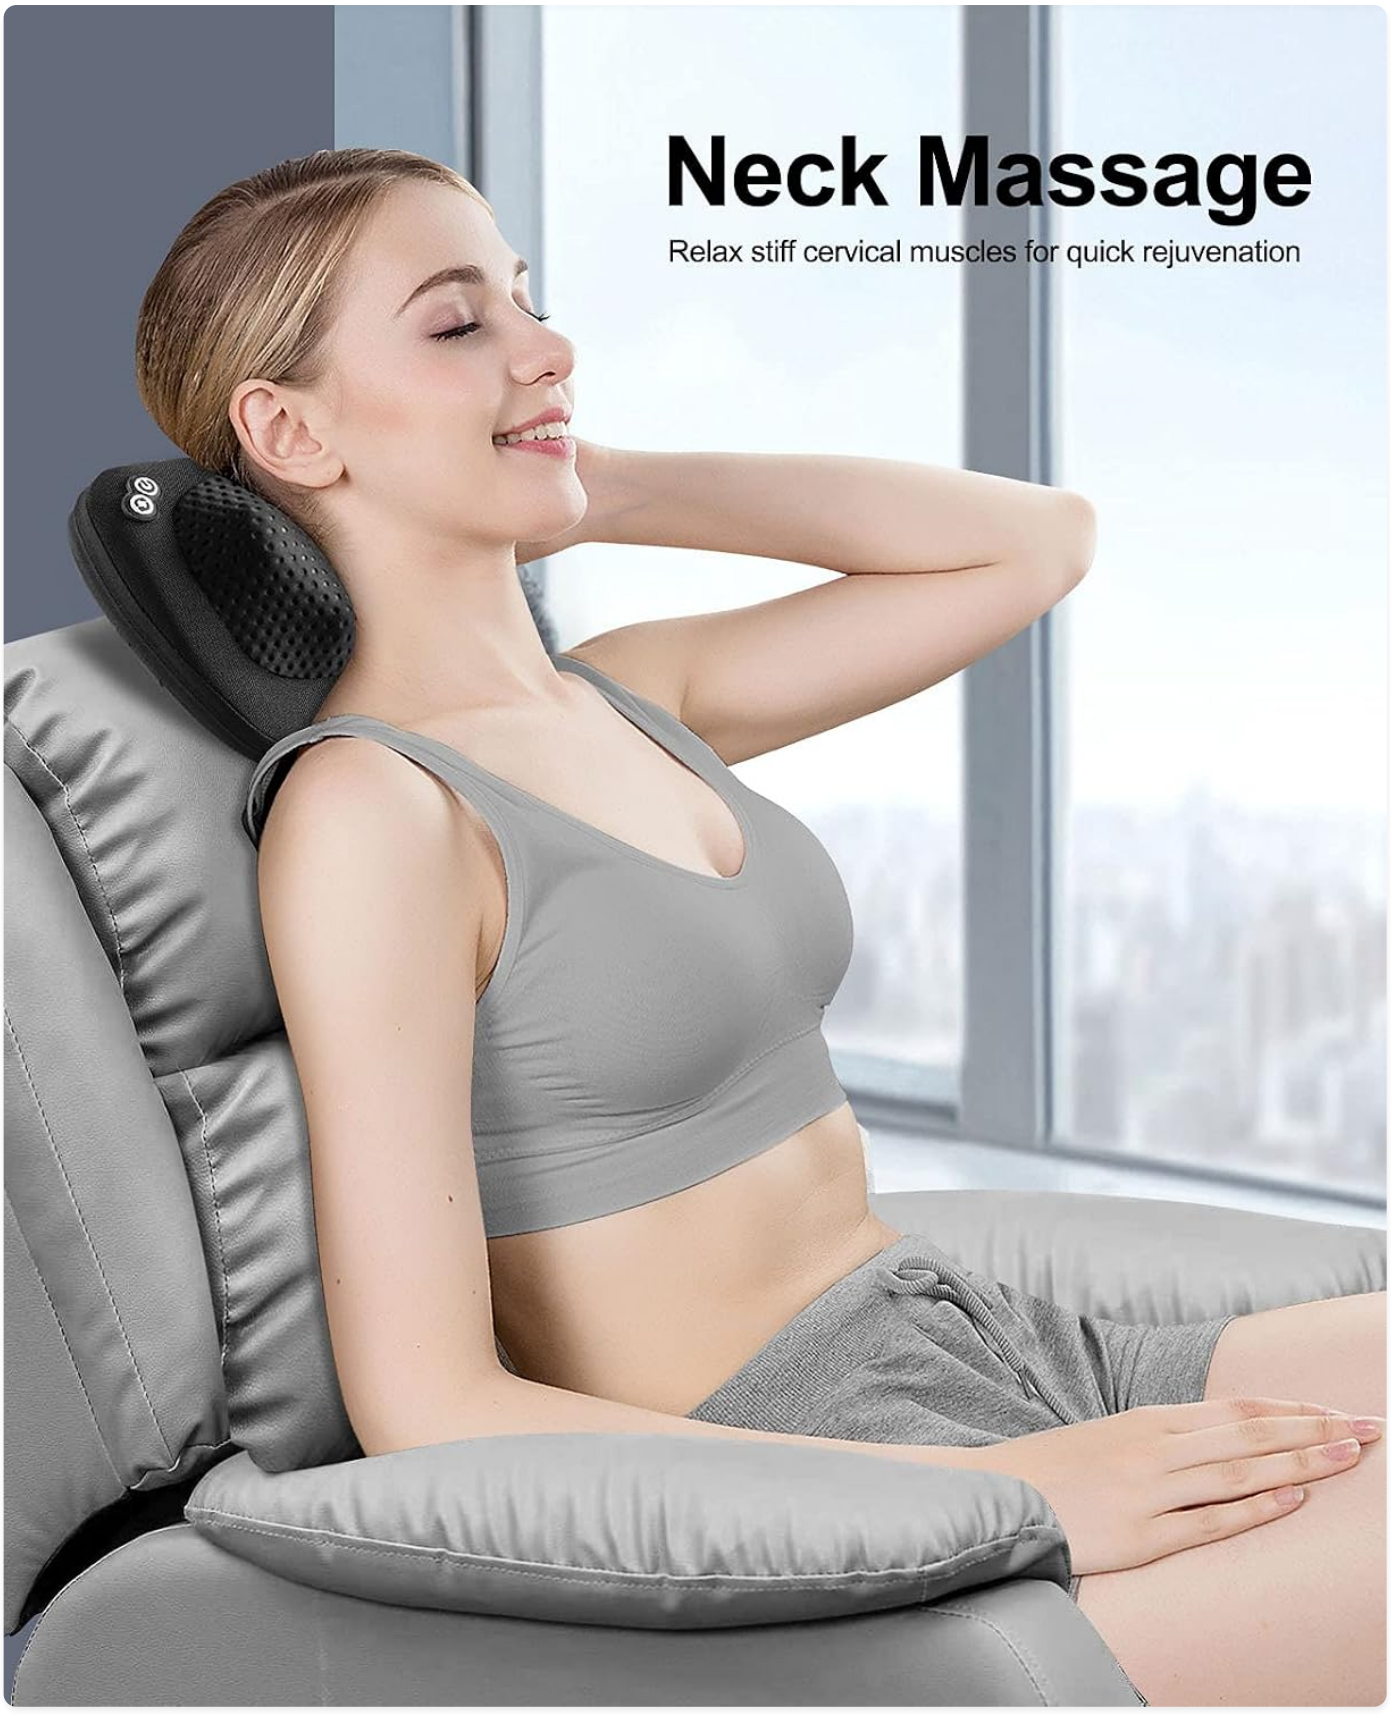


Image: A woman relaxing while using the massager for neck relief.



Image: A woman using the massager for deep tissue relief on her lower back.

Maintenance

- **Cleaning:** Disconnect the massager from the power source before cleaning. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the massager in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the massager.

- **Material Care:** The massager is made with wear-resistant cotton and linen fabric and breathable mesh. Handle with care to ensure longevity.



Image: Detailed view of the massager's materials, including breathable mesh, imported Velcro, and 1200D Oxford Cloth.

Troubleshooting

- **Massager not turning on:**
  - Ensure the power adapter is securely plugged into both the massager and a working electrical outlet.
  - Check if the power outlet is functional by plugging in another device.

- **No heat or insufficient heat:**
  - Confirm that the massager is in the heat mode (first press of the power button).
  - Allow a few minutes for the heat function to warm up.
- **Massage feels too intense:**
  - Adjust your body position relative to the massager to reduce direct pressure.
  - Use a thin cloth or towel between your body and the massager to soften the intensity.

Specifications

Product Dimensions	17 x 5 x 14 inches
Item Weight	3 Pounds
Item Model Number	D005
Power Source	Corded Electric (Wall Adapter 100-240V, Car Adapter 12V)
Material	Wear-resistant cotton and linen fabric + breathable mesh
Manufacturer	VIKTOR JURGEN

Safety Information

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Always consult with a healthcare professional before using any massage device, especially if you have pre-existing medical conditions, are pregnant, or have sensitive skin. Do not use the massager for prolonged periods on a single area, as this may cause discomfort or bruising. Discontinue use if you experience pain or discomfort.

Warranty and Support

Your VIKTOR JURGEN Massager comes with a **1-Year Warranty**. We are committed to providing high-quality products and customer satisfaction. If you encounter any issues or are not entirely happy with your purchase, please refer to your massager's instruction booklet for detailed warranty information and contact our customer support for assistance.

For further support, please visit the official VIKTOR JURGEN store or contact their customer service as per the details provided in your product packaging.

© 2025 VIKTOR JURGEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09BBZQNGC

More documents and user manuals: **https://manuals.plus/**