Gevi A082T

Gevi 5-Cup Programmable Coffee Maker User Manual

Model: A082T

Introduction

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Gevi 5-Cup Programmable Coffee Maker. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The Gevi 5-Cup Programmable Coffee Maker (Model A082T) is designed for home and office use, featuring a 750ml capacity, a programmable timer for delayed brewing, a 2-hour keep warm function, and an auto shut-off for safety. It includes a reusable filter for convenience and an auto-pause feature for pouring a cup during the brew cycle.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycles.

Product Components

Familiarize yourself with the parts of your Gevi Coffee Maker:

- Water Reservoir with Easy View Water Window
- Control Panel with LCD Display (Time, Program, Auto, Warm, Power, Brew, Hour, Min buttons)
- Brew Basket
- Reusable Coffee Filter
- Borosilicate Glass Carafe
- Warming Plate
- Anti-Leaking Hole (overflow protection)
- 6-Hole Showerhead for even water distribution



Image: The Gevi 5-Cup Programmable Coffee Maker, showing the main unit, glass carafe, control panel, and separate reusable filter and funnel components.

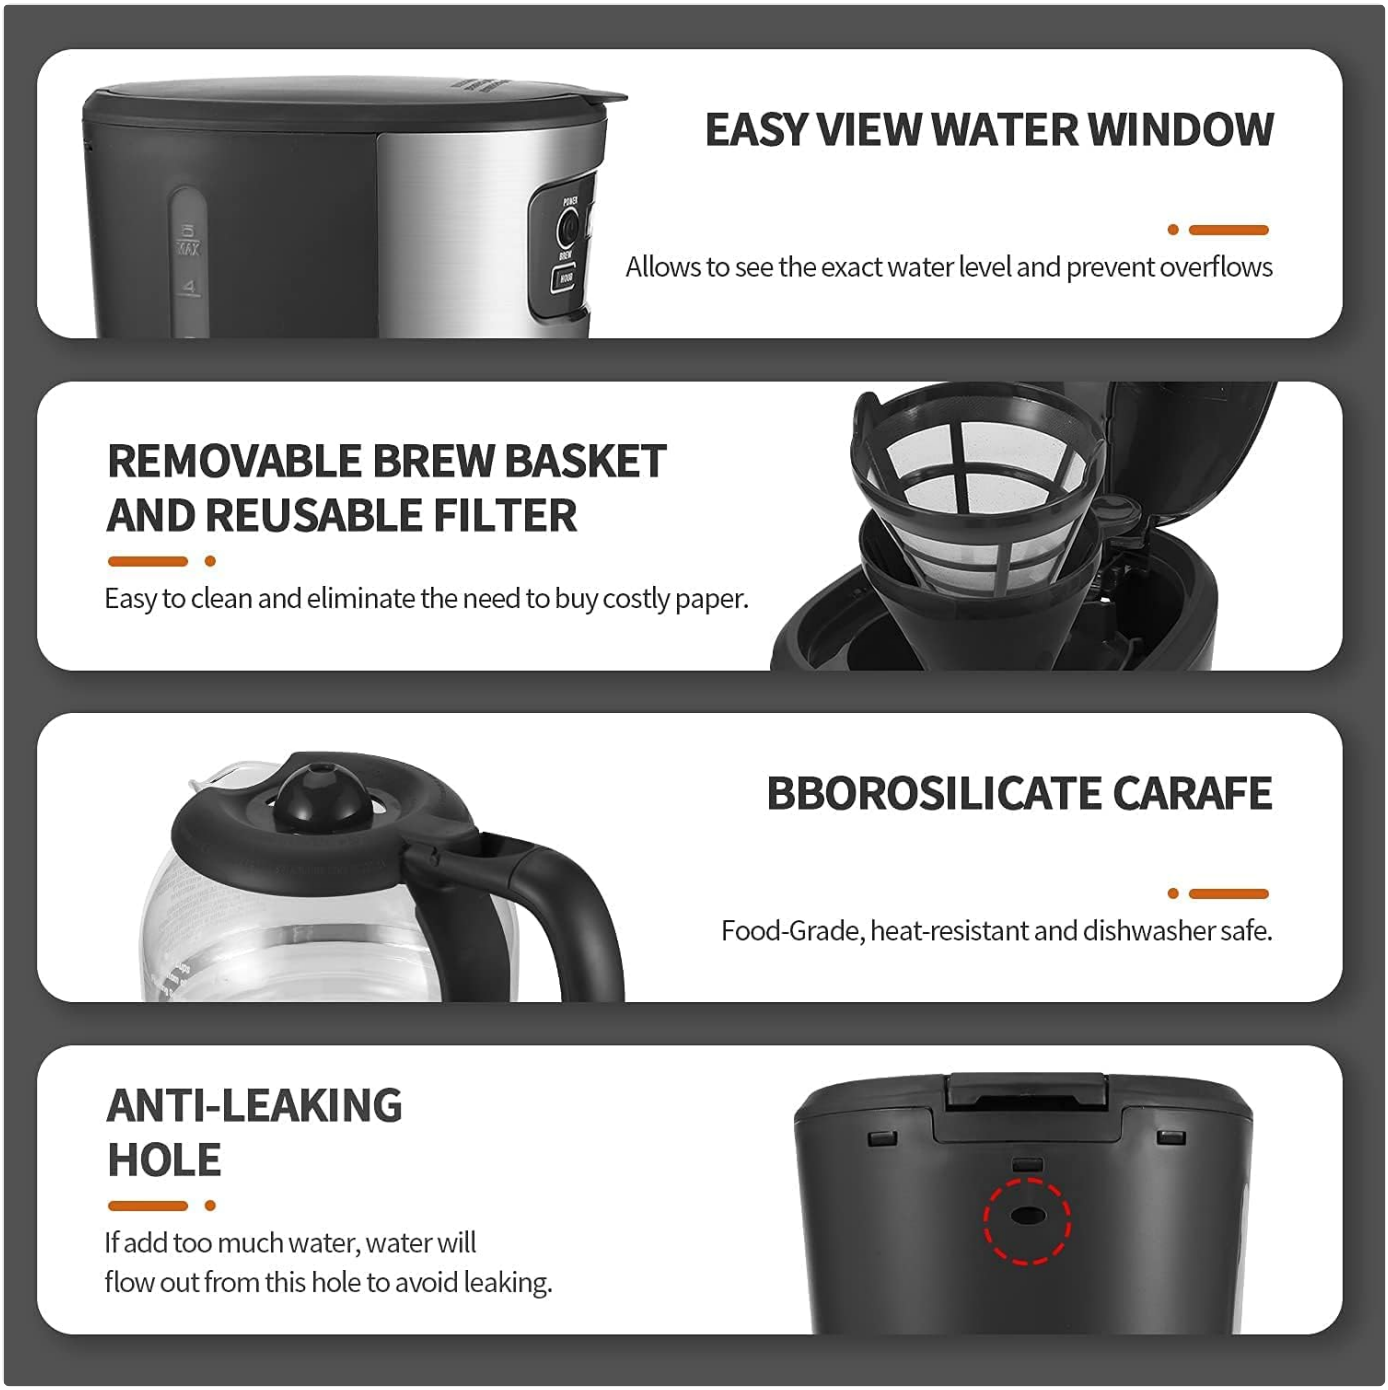


Image: Close-up views highlighting key features: the easy view water window, removable brew basket with reusable filter, the borosilicate glass carafe, and the anti-leaking overflow hole.

Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and dispose of them properly.
2. **Initial Cleaning:** Before first use, wash the carafe, reusable filter, and brew basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
4. **First Brew Cycle (Cleaning):**
    - Fill the water reservoir with clean water up to the 5-cup mark.

- Place the empty reusable filter into the brew basket, and then insert the brew basket into its position.
- Place the empty carafe on the warming plate.
- Plug the coffee maker into a standard electrical outlet.
- Press the "POWER" button to start a brewing cycle with only water. This helps to clean the internal components.
- Once the cycle is complete, discard the water from the carafe.



Image: The removable brew basket and reusable filter, ready for cleaning or coffee grounds.



Image: Demonstrating how to fill the water reservoir, showing the clear water level indicator.

Operating Instructions

Setting the Clock

1. Plug in the coffee maker. The LCD display will show "12:00" and flash.
2. Press the "HOUR" button to set the hour. The time will advance. Note the AM/PM indicator.
3. Press the "MIN" button to set the minutes.
4. Once the desired time is set, the display will stop flashing after a few seconds, indicating the time is saved.

Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water to the desired level using the water level indicator. Do not exceed the "MAX" fill line (750ml / 5 cups).
2. **Add Coffee Grounds:** Place the reusable filter into the brew basket. Add the desired amount of ground coffee into

the filter. A general guideline is one level tablespoon of coffee grounds per cup (5 oz). Adjust to taste.

3. **Position Carafe:** Ensure the glass carafe is placed correctly on the warming plate.
4. **Start Brewing:** Press the "POWER" button. The indicator light will illuminate, and brewing will begin.
5. **Auto Pause:** The coffee maker features a 30-second auto-pause function, allowing you to temporarily remove the carafe to pour a cup before the brewing cycle is complete. Replace the carafe within 30 seconds to prevent overflow.
6. **Keep Warm Function:** After brewing is complete, the warming plate will keep the coffee warm for 2 hours. The "WARM" indicator light will be on.
7. **Auto Shut-Off:** After 2 hours, the coffee maker will automatically shut off for safety and energy saving.



Image: The Gevi coffee maker's control panel, highlighting the 24-hour delay brew and 2-hour keep warm functions.

Using the Programmable Timer (Delay Brew)

The programmable timer allows you to set the coffee maker to start brewing at a specific time within a 24-hour period.

1. Prepare the coffee maker for brewing as described above (fill water, add coffee grounds, place carafe).

2. Press the "PROG" button. The LCD display will show "PROG" and flash.
3. Press the "HOUR" and "MIN" buttons to set the desired delay brew time.
4. Once the desired time is set, press the "PROG" button again to confirm. The "AUTO" indicator light will illuminate, indicating the delay brew function is activated.
5. The coffee maker will automatically start brewing at the set time. The "AUTO" light will turn off, and the "POWER" light will illuminate when brewing begins.



Image: A visual guide demonstrating the four steps to program the coffee maker for a delayed brew, including setting the time and activating the program.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker before cleaning and allow it to cool completely.

- Remove the reusable filter and brew basket. Discard used coffee grounds.
- Wash the reusable filter, brew basket, and glass carafe in warm, soapy water. Rinse thoroughly. These parts are also dishwasher safe (top rack recommended).
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit, cord, or plug in water or any other liquid.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descale your coffee maker every 2-4 weeks, or more frequently if you have hard water.

1. Prepare a descaling solution: Mix 1 part white vinegar with 2 parts cold water. For example, 1 cup vinegar to 2 cups water.
2. Pour the solution into the water reservoir.
3. Place the empty reusable filter and brew basket into position, and the empty carafe on the warming plate.
4. Press the "POWER" button to start a brewing cycle with the descaling solution.
5. After about half of the solution has brewed through, press the "POWER" button to turn off the coffee maker and let it soak for at least 15 minutes.
6. Press the "POWER" button again to complete the brewing cycle.
7. Discard the solution from the carafe.
8. Run 2-3 full cycles with clean, cold water to rinse out any remaining vinegar smell or taste.

Troubleshooting

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in. Power button not pressed. Delay brew function activated.	Ensure the coffee maker is securely plugged into a working outlet. Press the "POWER" button. Check if the "AUTO" light is on. If so, the unit is set for a delayed brew. Cancel by pressing "POWER" or wait for the programmed time.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine.	Adjust the amount of coffee grounds to your preference. Use medium-grind coffee for optimal extraction.
Water overflows from the brew basket.	Too much coffee grounds. Filter clogged. Carafe not properly placed.	Do not overfill the filter with coffee grounds. Clean the reusable filter thoroughly. Descale the unit if mineral buildup is suspected. Ensure the carafe is fully seated on the warming plate, activating the drip-stop mechanism.

Problem	Possible Cause	Solution
Coffee tastes bad.	Unit needs cleaning/descaling. Stale coffee grounds. Poor water quality.	Clean the coffee maker and descale as per maintenance instructions. Use fresh, high-quality coffee grounds. Use filtered water.

Specifications

Feature	Detail
Brand	Gevi
Model Number	A082T
Capacity	5 Cups (750ml)
Power/Wattage	800 watts
Voltage	133 Volts (DC)
Material	Plastic, Borosilicate Glass (Carafe)
Special Features	Programmable Timer, Keep Warm Function, Auto Shut-Off, Reusable Filter, Auto Pause
Product Dimensions	20.98 x 14.48 x 26.09 cm
Item Weight	1.74 kg



Image: Dimensions of the Gevi 5-Cup Coffee Maker, illustrating its compact design suitable for various spaces.

Warranty and Support

Gevi products are manufactured to high-quality standards. For specific warranty information regarding your Gevi 5-Cup Programmable Coffee Maker (Model A082T), please refer to the warranty card included with your purchase or visit the official Gevi website.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Gevi Customer Service. Contact information can typically be found on the Gevi official website or on the product packaging.

You can visit the Gevi Store on Amazon for more information:Gevi Store

© 2023 Gevi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question