Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Muzen MW-P1I

MUZEN Button Bluetooth Speaker MW-P1I User Manual

Model: MW-P1I

Introduction

Thank you for purchasing the MUZEN Button Bluetooth Speaker MW-P1I. This ultra-compact, retro-style portable speaker delivers high-quality sound and seamless wireless connectivity. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

The MUZEN Button speaker is designed for portability and ease of use, offering a powerful audio experience from a surprisingly small form factor. Its durable metal construction and intuitive controls make it an ideal companion for music on the go.

Package Contents

- MUZEN Button Bluetooth Speaker MW-P1I
- USB Charging Cable
- Strap
- User Manual (this document)



Image: MUZEN Button Speaker in its gift packaging, showing the speaker and accessories.

Product Overview

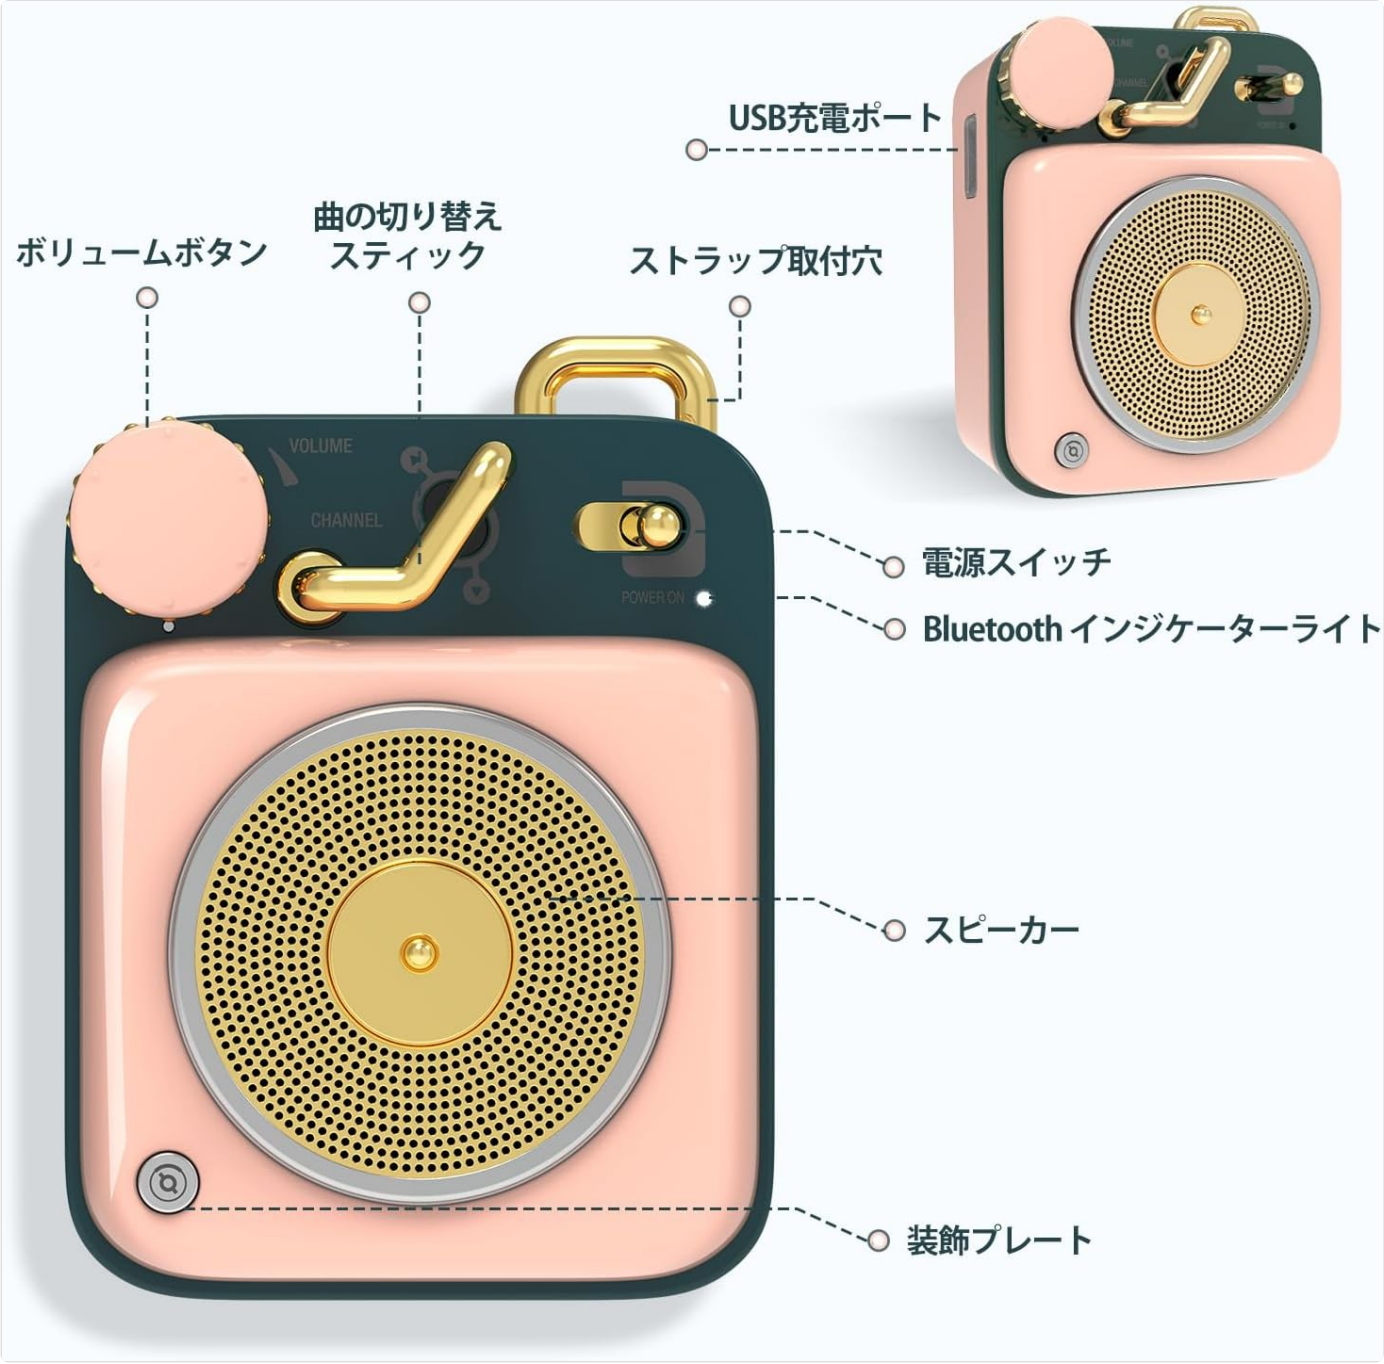


Image: Diagram illustrating the various parts of the MUZEN Button Speaker, including the volume button, track skip stick, USB charging port, strap attachment hole, power switch, Bluetooth indicator light, speaker, and decorative plate.

Components:

- **Volume Button:** Rotate to adjust volume.
- **Track Skip Stick:** Push to skip tracks.
- **USB Charging Port:** For charging the device.
- **Strap Attachment Hole:** For attaching the included strap.
- **Power Switch:** To turn the speaker on or off.
- **Bluetooth Indicator Light:** Shows Bluetooth connection status.
- **Speaker:** Audio output.
- **Decorative Plate:** Aesthetic element.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker.

1. Connect the supplied USB charging cable to the USB charging port on the speaker.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (e.g., red for charging, off when fully charged).
4. A full charge takes approximately 1.5 hours.



Image: A hand holding the MUZEN Button Speaker, with icons indicating USB charging, 400mAh battery, 1.5 hours for full charge, and 8 hours playback.

2. Powering On/Off

- To power on, slide the Power Switch to the "ON" position.
- To power off, slide the Power Switch to the "OFF" position.

Operating Instructions

1. Bluetooth Pairing

The MUZEN Button speaker is compatible with most Bluetooth-enabled devices, including Android phones, iPhones, iPads, and notebook PCs.

1. Ensure the speaker is powered on and the Bluetooth indicator light is blinking, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings and enable Bluetooth.
3. Search for available devices. You should see "Muzen Button" in the list.
4. Select "Muzen Button" to connect. The Bluetooth indicator light on the speaker will become solid when successfully paired.

5. After the initial pairing, the speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is enabled and within range (up to 10 meters).



Image: The MUZEN Button Speaker placed next to a notebook, showing a smartphone screen with "Muzen Button" listed as a connected Bluetooth device.



Image: A MUZEN Button Speaker on a wooden table, with a tablet and laptop in the background, illustrating high-speed Bluetooth connection up to 10 meters.

2. Audio Playback

- **Volume Control:** Rotate the Volume Button (refer to Product Overview) clockwise to increase volume and counter-clockwise to decrease volume.
- **Track Skipping:** Use the Track Skip Stick (refer to Product Overview) to navigate between songs.
- Playback controls (play/pause) are typically managed directly from your connected device.



Image: An exploded view of the MUZEN Button Speaker, highlighting its internal components and demonstrating 360-degree stereo sound capability.

Maintenance

- Keep the speaker dry. Do not expose it to water or excessive moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid extreme temperatures.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Do not attempt to disassemble or repair the speaker yourself, as this will void the warranty.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No sound from speaker	◦ Speaker is off. ◦ Low battery. ◦ Volume is too low. ◦ Not connected via Bluetooth. ◦ Device volume is too low.	◦ Turn on the speaker. ◦ Charge the speaker. ◦ Increase speaker volume. ◦ Pair the speaker with your device. ◦ Increase volume on your connected device.
Cannot connect via Bluetooth	◦ Speaker is not in pairing mode. ◦ Device Bluetooth is off. ◦ Speaker is too far from device. ◦ Interference.	◦ Ensure speaker is on and indicator is blinking. ◦ Enable Bluetooth on your device. ◦ Move speaker closer to your device (within 10m). ◦ Turn off other Bluetooth devices nearby.
Short battery life	◦ Playing at maximum volume. ◦ Battery degradation over time.	◦ Reduce volume for longer playback. ◦ Ensure full charge before use.

SPECIFICATIONS

Brand	Muzen
Model Number	MW-P1I
Speaker Max Output	3 Watts
Frequency Response	20 KHz *(Note: This value typically represents the upper limit of a frequency range.)*
Connectivity Technology	Bluetooth
Audio Output Mode	Monaural
Speaker Type	Portable
Recommended Use	Music Player
Driver Diameter	3 mm
Color	Sakura Pink
Waterproof	No
Max Range	10 meters
Control Method	Button/Dial Controls
Dimensions (D x W x H)	30 x 47 x 63 mm
Battery Average Life	8 hours (at 50% volume)
Charging Time	1.5 hours
Audio Driver Type	Dynamic Driver
S/N Ratio	70 dB

Power Source	Battery
Number of Batteries	1 Lithium Ion battery (included)

Warranty and Support

Warranty Information

The MUZEN Button Bluetooth Speaker MW-P1I comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical assistance, warranty claims, or any questions regarding your MUZEN Button speaker, please contact MUZEN customer support. Refer to the product packaging or the official MUZEN website for the most up-to-date contact information.
Visit the official MUZEN Store on Amazon

© 2024 MUZEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09BMC5G5Y

More documents and user manuals: **https://manuals.plus/**