Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JJC Lmpyf

JJC Wireless Bluetooth Remote Control

Instruction Manual

Introduction

The JJC Wireless Bluetooth Remote Control is designed to provide convenient and reliable remote operation for compatible Nikon cameras. Utilizing Bluetooth Low Energy technology, this remote allows you to control various camera functions from a distance, enhancing your photography and videography experience. It is an ideal replacement for the Nikon ML-L7 remote control.

Safety Information

- Keep the remote control away from water and moisture.
- Do not expose the remote to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the remote to strong impacts.
- Keep out of reach of children.
- Dispose of batteries properly according to local regulations.

Package Contents

Please check that all items are present in your package:

- 1 x JJC Wireless Bluetooth Remote Control
- 1 x CR2032 Battery (pre-installed or included separately)

Parts Identification

Familiarize yourself with the different parts of your remote control:



Figure 1: Front and back view of the remote control with labeled parts.

- **Indicator Lamp:** Shows status (e.g., pairing, operation).
- **Shutter Release Button:** For taking still photos.
- **Video Recording Button:** For starting and stopping video recording.
- **Zoom Buttons (+/-):** For zooming in and out (camera dependent).
- **Multi Selector:** Navigation buttons (up, down, left, right).
- **OK Button:** Confirmation button.
- **Fn1 Button:** Customizable function button (camera dependent).
- **Fn2 Button:** Customizable function button (camera dependent).
- **Power/Pairing Button:** Turns the remote on/off and initiates pairing.
- **Battery Compartment:** Holds the CR2032 battery.

Setup

1. Battery Installation

The remote control is powered by one CR2032 battery. If the battery is not pre-installed, or needs replacement:

1. Locate the battery compartment on the back of the remote.
2. Use a coin or small tool to twist the battery cover counter-clockwise to open.
3. Insert the CR2032 battery with the positive (+) side facing up.
4. Replace the battery cover and twist clockwise to secure it.

2. Pairing with Your Camera

To use the remote control, it must first be paired with your compatible Nikon camera. Refer to your camera's instruction manual for specific Bluetooth pairing steps, as these may vary by model. General steps are as follows:

1. Ensure your camera's Bluetooth function is enabled.
2. On the remote control, slide the Power/Pairing button to the 'ON' position.
3. Press and hold the Power/Pairing button until the indicator lamp on the remote starts blinking, indicating it is in pairing mode.
4. On your camera, navigate to the Bluetooth settings and select to add a new device. The remote control should appear in the list of discoverable devices.
5. Select the remote control from the camera's list to complete the pairing process. The indicator lamp on the remote will stop blinking and remain solid for a few seconds, confirming successful pairing.

Note: For Nikon Z6II and Z7II cameras, ensure their firmware is updated to version 1.40 or later for full compatibility.

Operating Instructions

Once paired, the remote control can be used to operate your camera wirelessly from a distance of approximately 10 meters (32.8 feet) in any direction.

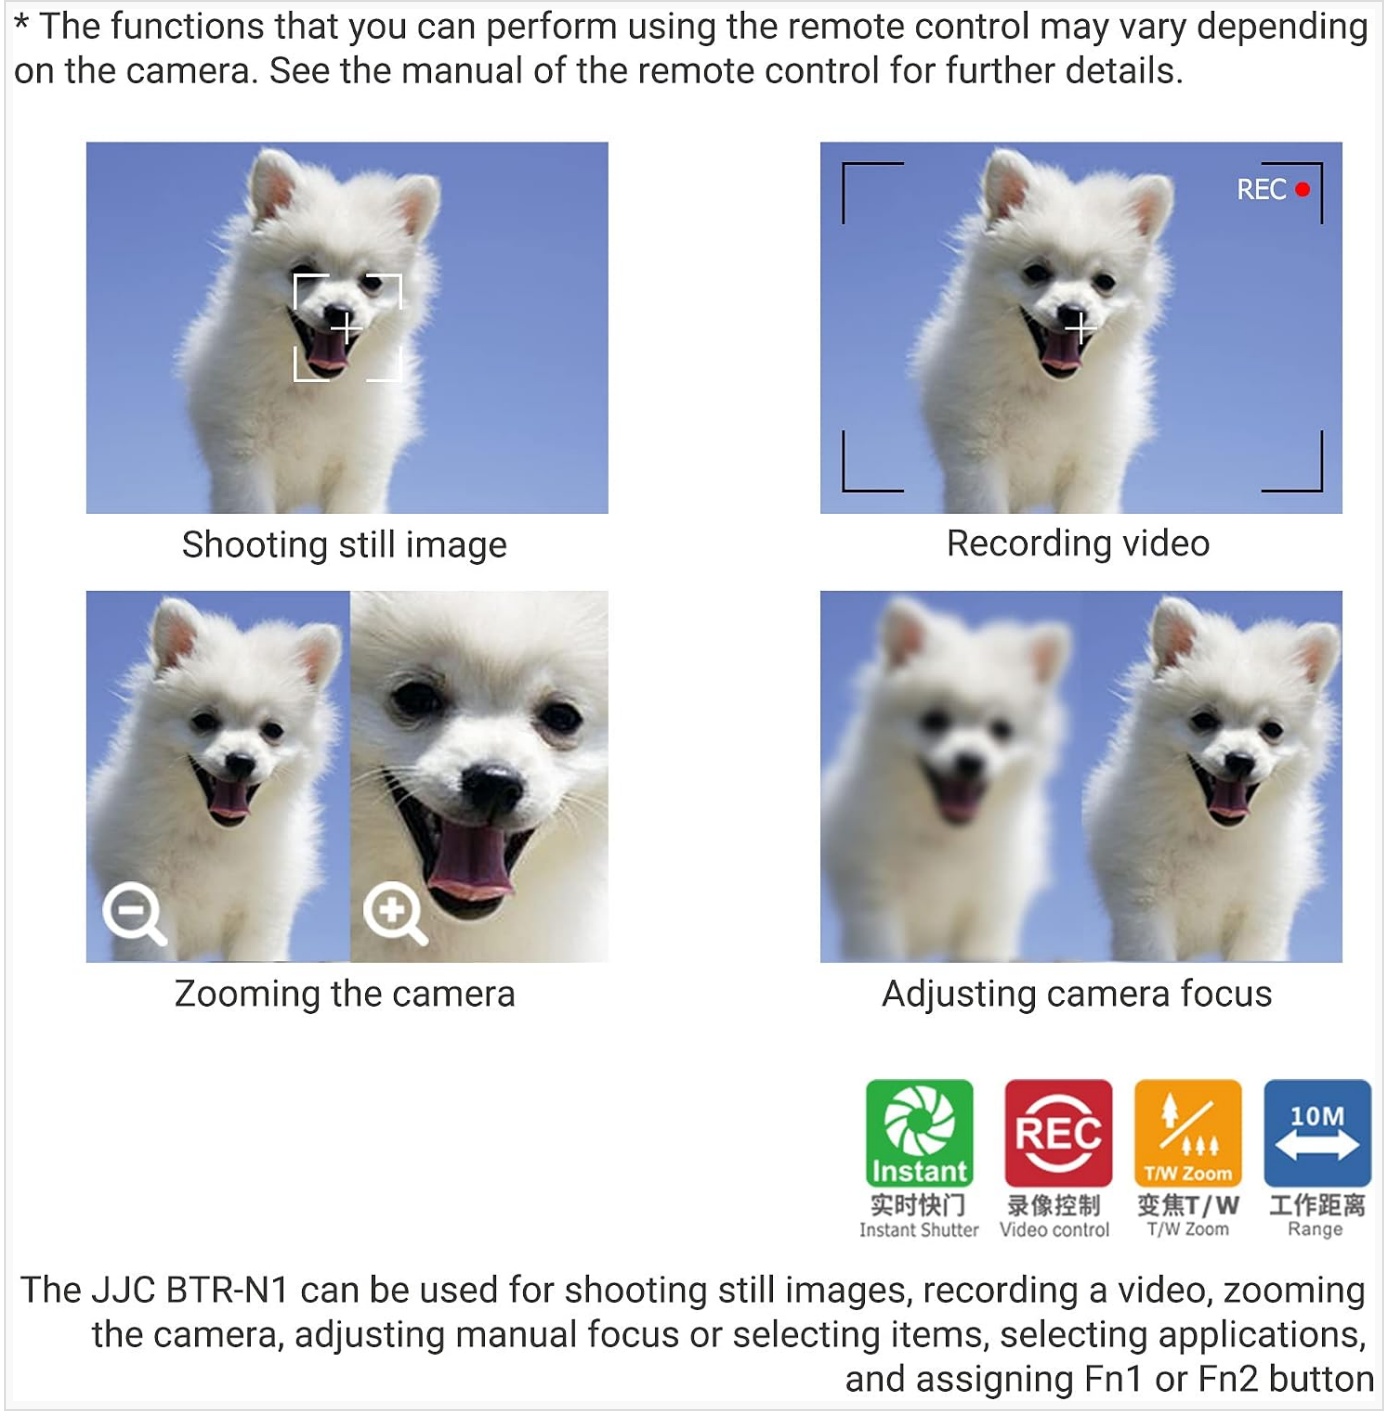


Figure 2: Remote control functions including still image capture, video recording, zoom, and focus adjustment.

Basic Functions:

- **Still Image Shooting:** Press the Shutter Release Button to capture a still photograph.
- **Video Recording:** Press the Video Recording Button to start recording. Press it again to stop recording.

Advanced Functions (Camera Dependent):

- **Zoom Control:** Use the '+' and '-' buttons to zoom in and out. This function is available on cameras that support remote zoom control.
- **Manual Focus Adjustment:** Use the Multi Selector buttons (up, down, left, right) to adjust manual focus.
- **Selecting Items/Applications:** The Multi Selector and OK button can be used to navigate menus or select items/applications on compatible cameras.
- **Fn1 and Fn2 Buttons:** These customizable function buttons can be assigned specific camera functions (e.g., ISO, white balance) via your camera's settings. These buttons are compatible with Nikon Z50 and COOLPIX P950

cameras only.



Figure 3: The remote control offers a wireless operating distance of approximately 10 meters (32.8 feet).

Maintenance

- Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or solvents.
- If the remote will not be used for an extended period, remove the battery to prevent leakage.
- Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote does not power on.	Battery is dead or incorrectly installed.	Replace the CR2032 battery or ensure it is installed correctly with the positive (+) side up.
Remote does not control the camera.	Not paired, out of range, or camera Bluetooth is off.	Ensure the remote is paired with the camera. Check camera's Bluetooth settings. Move closer to the camera (within 10m).
Specific functions (zoom, Fn buttons) do not work.	Camera model does not support the function or firmware is outdated.	Verify your camera model's compatibility with these functions. Update camera firmware if necessary (e.g., Nikon Z6II/Z7II to v1.40+).
Intermittent connection.	Interference or low battery.	Avoid strong electromagnetic interference. Replace battery if low. Re-pair the remote if issues persist.

Specifications



Specifications

Transmission method: 2.4GHz, GFSK modulation
Operating distance: Approx. 10m / 32.8'
Power: CR2032 battery
Dimension: Approx. 110 x 31.6 x 12.7mm (4.3 x 1.2 x 0.5")
Weight: Approx. 20g

Figure 4: Dimensions and key specifications of the remote control.

Feature	Detail
Transmission Method	2.4 GHz, GFSK modulation
Operating Distance	Approx. 10 m (32.8 ft)
Power Source	CR2032 Battery
Dimensions (Approx.)	110 x 31.6 x 12.7 mm (4.3 x 1.2 x 0.5 inches)
Weight (Approx.)	20 g (0.7 oz)
Connectivity Technology	Bluetooth
Compatible Devices	Nikon Z f, Z5, Z6II, Z7II, Z 30, Z FC, Z50, COOLPIX P1000, P950, A1000, B600 (replaces Nikon ML-L7)

Warranty and Support

JJC products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official JJC website. For technical support or inquiries, please contact JJC customer service through their official channels.

© 2023 JJC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09BQPXV58

More documents and user manuals: **https://manuals.plus/**