Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEWIS&WAYNE BN-CT006

LEWIS&WAYNE 7 ft Multicolor LED Outdoor Christmas Cone Tree

MODEL: BN-CT006 INSTRUCTION MANUAL

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your LEWIS&WAYNE 7 ft Multicolor LED Outdoor Christmas Cone Tree. This pre-lit tree features 310 multicolor LEDs across 15 strands, topped with a crystalline LED star. Designed for both indoor and outdoor holiday decoration, it offers various lighting modes and a timer function.



Image 1.1: The 7 ft Multicolor LED Outdoor Christmas Cone Tree in an outdoor setting.

2. Safety Information

- For outdoor use only.
- Unplug the unit during inclement weather conditions.
- Do not allow children to play on or near the display.
- Keep the product away from flammable materials.
- Ensure all connections are secure and protected from moisture.
- Use only the provided UL certified adapter.

3. Package Contents

Please verify that all components are present before assembly:

- Metal Frame Sections (for cone structure)
- 15 Strands of Multicolor LED Lights (pre-attached or to be attached)
- Crystalline LED Star Tree Topper
- Plastic Base
- UL Certified Power Adapter
- Ground Stakes
- Instruction Manual

4. Setup Instructions

Follow these steps to assemble your Christmas cone tree:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to ensure all items listed in Section 3 are present.
2. **Assemble the Frame:** Connect the metal frame sections using the spring button tubes. Ensure each section clicks securely into place to form the conical structure.
3. **Attach Light Strands:** If not pre-attached, carefully unwind and attach the 15 strands of LED lights to the frame, distributing them evenly from the top to the base. It is recommended to take your time unwinding the light strings to prevent tangling.
4. **Install Star Topper:** Place the crystalline LED star tree topper securely at the apex of the assembled frame.
5. **Position and Secure:** Place the assembled tree in your desired outdoor location. Use the provided ground stakes to firmly secure the plastic base to the ground, preventing it from tipping over in wind or adverse weather.
6. **Connect Power:** Connect the UL certified power adapter to the tree's power input, then plug the adapter into a suitable outdoor-rated electrical outlet. Ensure the outlet is protected from moisture.



Image 4.1: Overview of tree dimensions and features for setup.

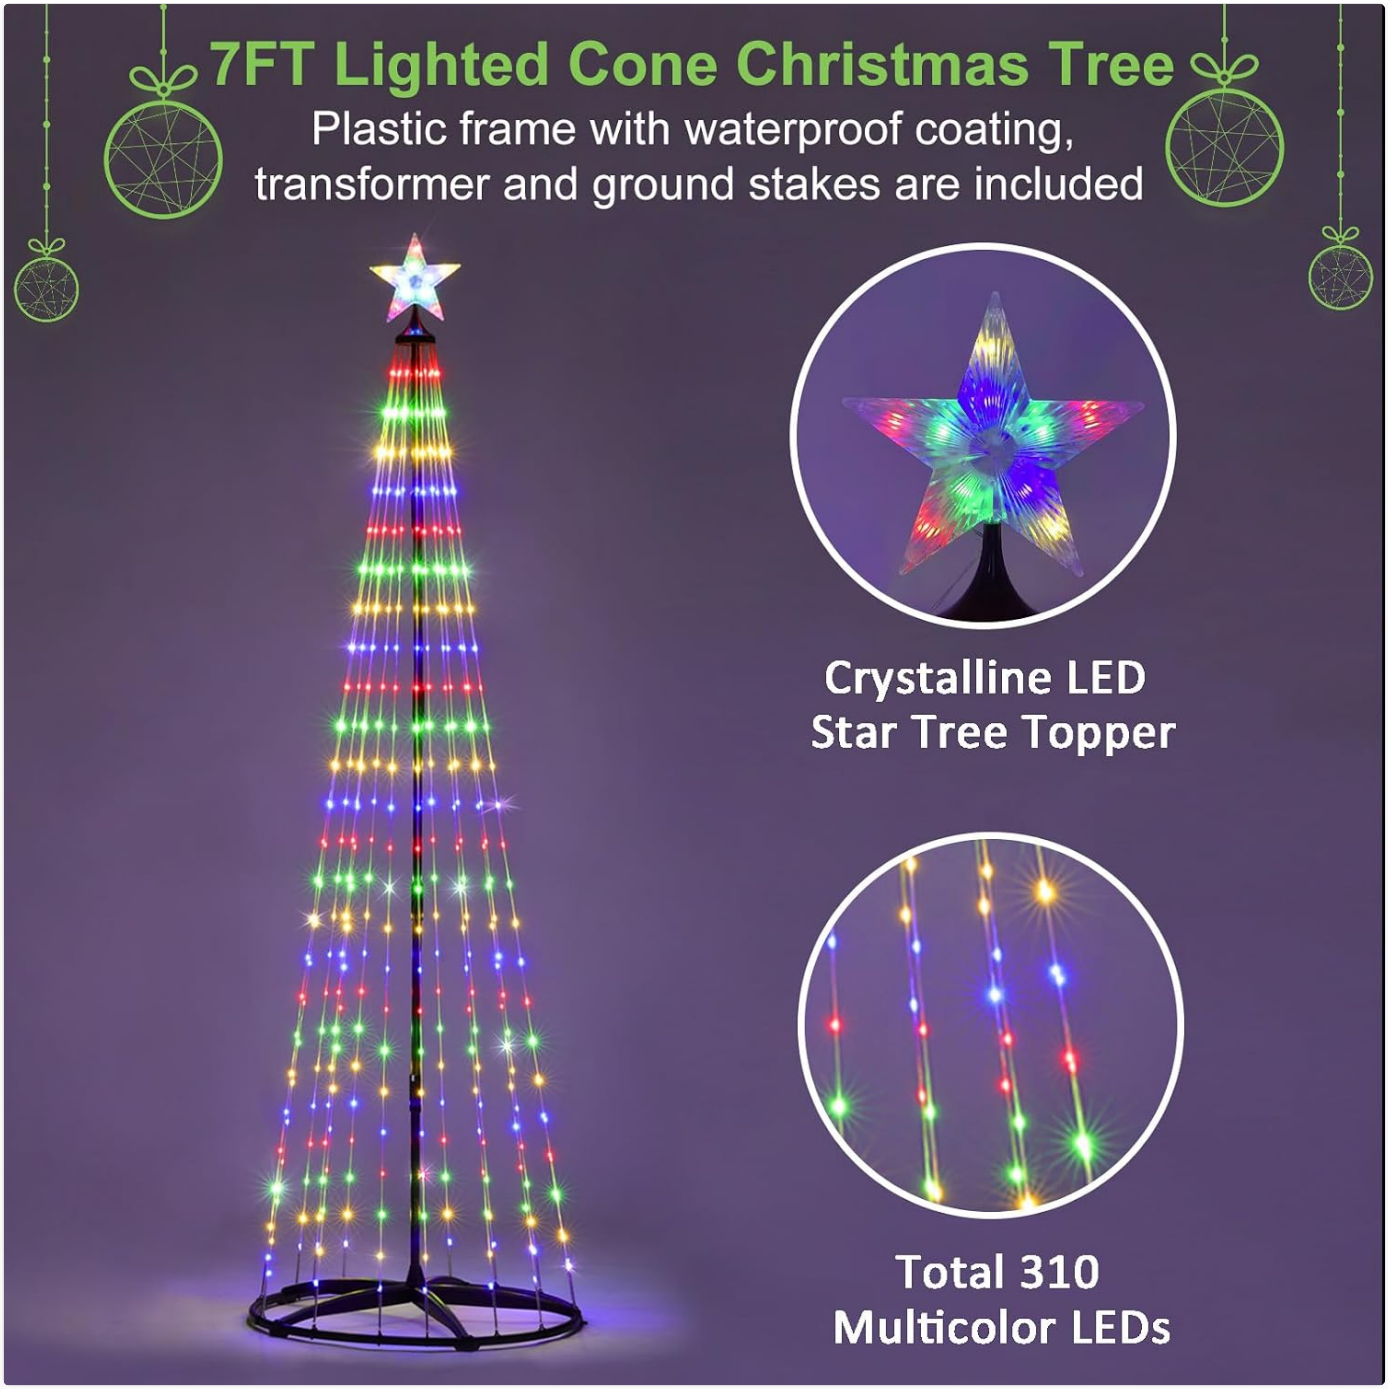


Image 4.2: Components and features including the star topper and LED details.

5. Operating Instructions

Once assembled and plugged in, the tree is ready for operation:

- **Power On:** The tree will illuminate automatically when plugged into a power source.
- **Change Lighting Modes:** Press the button on the power adapter to cycle through the 8 available lighting modes. Each press will switch to the next mode. The modes include: Combination, In Waves, Sequential, Slow-Glow, Chasing/Flash, Slow Fade, Twinkle/Flash, and Steady On.
- **Activate Timer Function:** To activate the built-in timer, press and hold the button on the power adapter for 3 seconds until the indicator light turns green. This will set the tree to a 6 hours on and 18 hours off cycle. The timer will automatically repeat daily.
- **Deactivate Timer Function:** To deactivate the timer, press and hold the button again for 3 seconds until the indicator light turns off or changes color (if applicable).



Image 5.1: Details of the 8 lighting modes and timer function.

6. Maintenance

Proper care will extend the life of your Christmas tree:

- **Cleaning:** Disconnect power before cleaning. Wipe the frame and light strands with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When the holiday season is over, carefully disassemble the tree. It is recommended to gently coil the light strands to prevent tangling and damage. Store all components in their original packaging or a suitable storage container in a cool, dry place, away from direct sunlight.
- **Inspection:** Before each use, inspect the power cord, adapter, and light strands for any signs of damage, fraying, or exposed wires. Do not use the product if any damage is found.

7. Troubleshooting

If you encounter issues with your Christmas tree, refer to the following:

Problem	Possible Cause	Solution
Lights do not turn on.	No power, loose connection, faulty adapter.	Check if the adapter is securely plugged into the outlet and the tree. Test the outlet with another device. Ensure the adapter is functioning.
Some LEDs are not lit.	Damaged LED, loose connection in a strand.	Inspect the specific light strand for visible damage. While individual LEDs are not typically replaceable, ensure connections are firm. If multiple LEDs on a strand are out, the strand may need replacement.
Timer function not working.	Timer not activated correctly.	Press and hold the button for 3 seconds until the indicator light turns green to activate the timer. Repeat to deactivate and reactivate if necessary.
Tree is unstable.	Insufficiently secured base, uneven ground.	Ensure ground stakes are fully inserted into the ground. Place the tree on a level surface.

8. Specifications

Feature	Detail
Model Number	BN-CT006
Height	7 ft (84 inches)
Base Dimensions	28 x 28 inches (L x W)
Total LEDs	310 Multicolor LEDs
Light Strands	15 strands, 20 LEDs per strand
Star Topper LEDs	10 LEDs with shimmering effect
Lighting Modes	8 (Combination, In Waves, Sequential, Slow-Glow, Chasing/Flash, Slow Fade, Twinkle/Flash, Steady On)
Timer Function	6 hours On / 18 hours Off cycle
Lead Cord Length	16.5 ft
Power Source	Plug-in, UL Certified Adapter
Frame Material	Metal with waterproof coating
Item Weight	3.99 pounds

Feature	Detail
UPC	766630779401

9. Warranty and Support

For product support, warranty information, or to report any issues, please contact LEWIS&WAYNE customer service through the retailer's platform where the product was purchased. Please have your model number (BN-CT006) and purchase date available when contacting support.

© 2025 LEWIS&WAYNE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09BV3QWZB

More documents and user manuals: **https://manuals.plus/**