Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FABULETTA FSV001

FABULETTA Cordless Vacuum Cleaner FSV001 Instruction Manual

Model: FSV001

1. Important Safety Instructions

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before connecting to battery pack, picking up or carrying the appliance.

- Recharge only with the charger specified by the manufacturer.

2. Product Overview & Components

The FABULETTA Cordless Vacuum Cleaner FSV001 is a versatile 6-in-1 lightweight stick vacuum designed for efficient cleaning of various surfaces. It features a powerful brushless motor, an LED display, and a detachable battery for extended runtime.

Included Components:

- Main Vacuum Unit (Handheld)
- Retractable Metal Tube (Extension Wand)
- LED Roller Brush (Motorized Floor Head)
- Mini Power Brush (for upholstery/pet hair)
- Dust Brush
- Long Crevice Tool
- Flexible Hose
- Adapter (Charger)
- Wall Mount with Hardware
- HEPA Filter x 2 (one pre-installed, one spare)
- Cleaning Tool (for brush roll and filter)

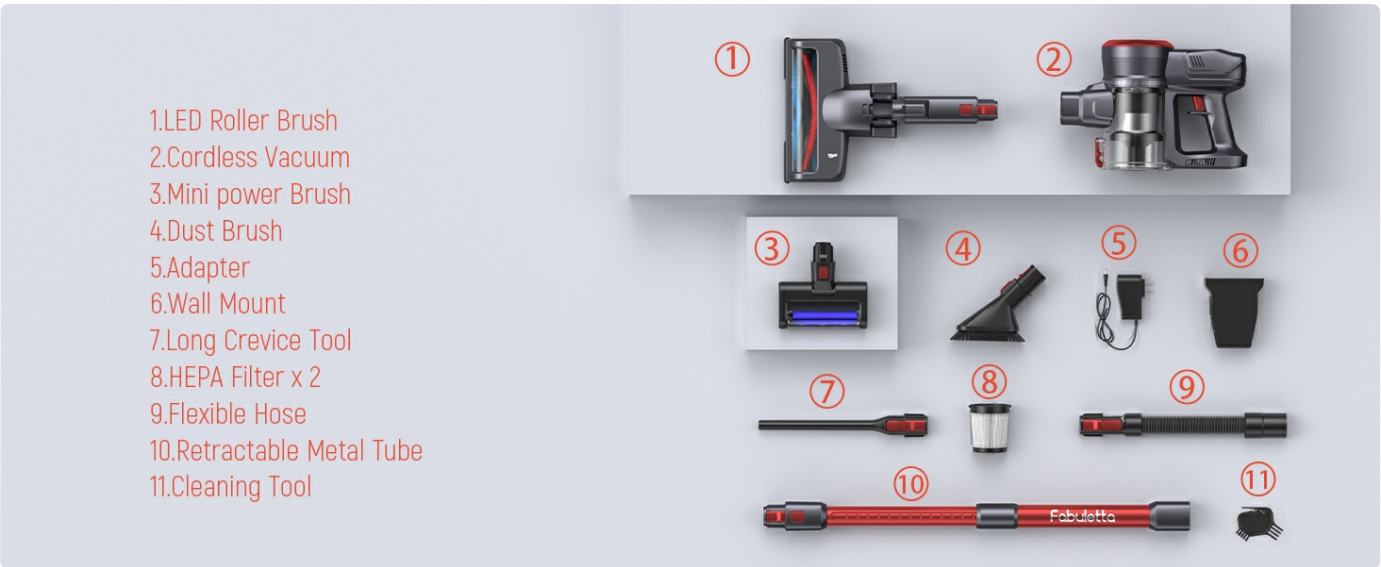


Figure 1: All components included with the FABULETTA Cordless Vacuum Cleaner FSV001.

Video 1: Overview of the FABULETTA FSV101 Cordless Vacuum Cleaner components and initial setup.

3. Setup & Assembly

The FABULETTA Cordless Vacuum Cleaner is designed for easy assembly and versatile configurations.

Assembly Steps:

1. **Attach the Extension Tube:** Connect the retractable metal tube to the main vacuum unit until it clicks securely.
2. **Attach the Floor Head:** Connect the LED roller brush (motorized floor head) to the other end of the extension tube until it clicks.
3. **Install Battery:** Ensure the detachable Lithium-Ion battery is fully charged. Slide the battery pack into the main vacuum unit until it locks into place.
4. **Alternative Configurations:** For handheld use, attach accessories directly to the main vacuum unit. For extended reach, attach accessories to the extension tube.

Wall Mount Installation:

The included wall mount allows for convenient storage and organization of your vacuum and accessories.

1. Choose a suitable location on a wall, ensuring it's near a power outlet for charging.
2. Use the provided hardware (screws and anchors) to securely fasten the wall mount to the wall.
3. Hang the main vacuum unit on the mount. The mount also has slots for storing additional accessories.



Figure 2: The vacuum cleaner stored on its wall mount with accessories.

4. Charging the Battery

The vacuum is powered by a detachable Lithium-Ion battery. Ensure the battery is fully charged before first use and whenever the battery indicator is low.

- **Charging Time:** A full charge takes approximately 4 hours.
- **Charging Method:** Connect the adapter to the charging port on the detachable battery. You can charge the battery while it's attached to the vacuum or separately.
- **Battery Indicator:** The LED display on the main unit will show the battery level.
- **Runtime:** The vacuum offers up to 50 minutes of runtime in low mode.



Figure 3: The detachable battery being charged using the provided adapter.

5. Operating Instructions

The FABULETTA Cordless Vacuum Cleaner offers intuitive controls and multiple modes for effective cleaning.

Power On/Off & Speed Control:

- **Power On:** Press the power button on the main unit.
- **Speed Adjustment:** The vacuum has 3 speed levels (low, medium, high). Tap the 'Speed' button on the LED display to cycle through the suction modes.
- **LED Display:** The large LED display shows the current suction level, battery life, and indicators for filter and brush roll cleaning.



Figure 4: The LED display indicating suction level, battery status, and maintenance alerts.

Using Attachments:

Select the appropriate attachment for your cleaning task:

- **LED Roller Brush:** Ideal for carpets, hard floors, and hardwood. The integrated LED headlights illuminate dust in dark areas.
- **Mini Power Brush:** Excellent for removing pet hair and debris from upholstery, pet beds, and car interiors.
- **Dust Brush:** Suitable for delicate surfaces, blinds, and stairs.

- **Long Crevice Tool:** Perfect for reaching tight spaces, corners, and between cushions.
- **Flexible Hose:** Provides extended reach and flexibility for awkward angles, such as inside car chassis or high shelves.



Figure 5: The LED headlights on the motorized floor head illuminating dust on a hard floor.



Figure 6: Specialized pet tools designed to remove embedded pet hair and debris.

Video 2: Demonstrations of the vacuum's features, including various attachments and their uses.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin:

- The dustbin has a capacity of 3.3 pounds.
- To empty, hold the main unit over a trash can and press the release button on the dustbin. The bottom flap will open, allowing debris to fall out.



Figure 7: Easy one-touch emptying of the dustbin.

Cleaning Filters:

- The vacuum uses HEPA filters. The LED display will indicate when the filter needs cleaning.
- Twist and pull to remove the filter assembly from the dustbin.
- Tap the filter gently to remove loose dust. For thorough cleaning, rinse the filter under running water. Ensure it is completely dry before reinserting.
- Use the provided cleaning tool to brush off any stubborn debris from the filter.

Cleaning the Brush Roll:

- The LED roller brush features a rotating brush roll. The LED display will indicate if the brush roll needs cleaning.
- To remove the brush roll, locate the release tab on the side of the floor head and unlock it.
- Carefully pull out the brush roll. Use the cleaning tool's cutter to remove any tangled hair or fibers.
- Reinsert the clean brush roll and secure the release tab.

7. Troubleshooting

If you encounter any issues with your FABULETTA Cordless Vacuum Cleaner, please refer to the following common solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Low suction power	Dustbin is full, filter is clogged, or brush roll is tangled.	Empty dustbin, clean/replace filters, clear any tangles from the brush roll.
Brush roll not rotating	Hair or debris tangled in the brush roll, or obstruction in the floor head.	Remove and clean the brush roll. Check for any blockages in the floor head.
LED display shows error indicator	Indicates filter or brush roll needs cleaning.	Refer to the maintenance section for cleaning instructions for filters and brush roll.

8. Specifications

Feature	Detail
Brand	FABULETTA
Model Name	FABULETTA Multifunctional Cordless Vacuum Cleaner with Brushless Motor
Item Model Number	FSV001
Product Dimensions	9.84"L x 7.87"W x 41.34"H
Item Weight	8.6 pounds
Motor Horsepower	0.34 Horsepower (Maximum)
Noise Level	65 Decibels
Battery Type	Lithium-Ion (Detachable)
Charging Time	4 Hours
Dustbin Capacity	3.3 Pounds
Filter Type	HEPA Filter
Number of Speeds	3
Control Method	Touch Button
Vacuum Collection Technology	Rotating Brush Roll
Recommended Uses	Carpet, Hard Floor, Hardwood, Home

9. Warranty & Support

The product battery comes with a 1-year warranty. For any questions, troubleshooting assistance, or warranty claims, please contact FABULETTA customer support:

- **Website:** Visit the FABULETTA Store
- **Email:** Refer to product packaging or official website for contact email.
- **Phone:** Refer to product packaging or official website for contact number.

© 2024 FABULETTA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09C57W7Q8

More documents and user manuals: **https://manuals.plus/**