Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MEUBLE COSY CLOVIS EG4HPG

MEUBLE COSY CLOVIS EG4HPG 40cm Kitchen Wall Cabinet User Manual

1. Introduction

1.1 Product Overview

This document provides essential instructions for the MEUBLE COSY CLOVIS EG4HPG 40cm Kitchen Wall Cabinet. This French-manufactured cabinet features a modern design, offering practical storage solutions for your kitchen.



Figure 1: Front view of the MEUBLE COSY CLOVIS EG4HPG 40cm Kitchen Wall Cabinet.

The cabinet is constructed from 16 mm melamine particle board, ensuring stability and resistance. It is designed to integrate seamlessly into various kitchen styles.

1.2 Intended Use

The MEUBLE COSY CLOVIS EG4HPG cabinet is intended for use as a wall-mounted storage unit in kitchens. It is suitable for organizing dishes, plates, pots, and other kitchen appliances, helping to keep your kitchen tidy and functional.



Figure 2: The CLOVIS EG4HPG cabinet as part of a complete kitchen setup.

2. Specifications

The following table details the key specifications of the MEUBLE COSY CLOVIS EG4HPG 40cm Kitchen Wall Cabinet.

Feature	Detail
Brand	MEUBLE COSY
Model Number	CLOVIS EG4HPG
Product Dimensions (W x D x H)	40 cm x 33.3 cm x 55.4 cm
Weight	10.5 kg
Color	Grey
Material	Melamine Particle Board (16 mm)
Mounting Type	Wall Mount
Number of Doors	1
Number of Shelves	2
Manufacturer	Furnish 1



Figure 3: Detailed dimensions of the 40cm wall cabinet (Width: 40cm, Depth: 33.3cm, Height: 55.4cm).

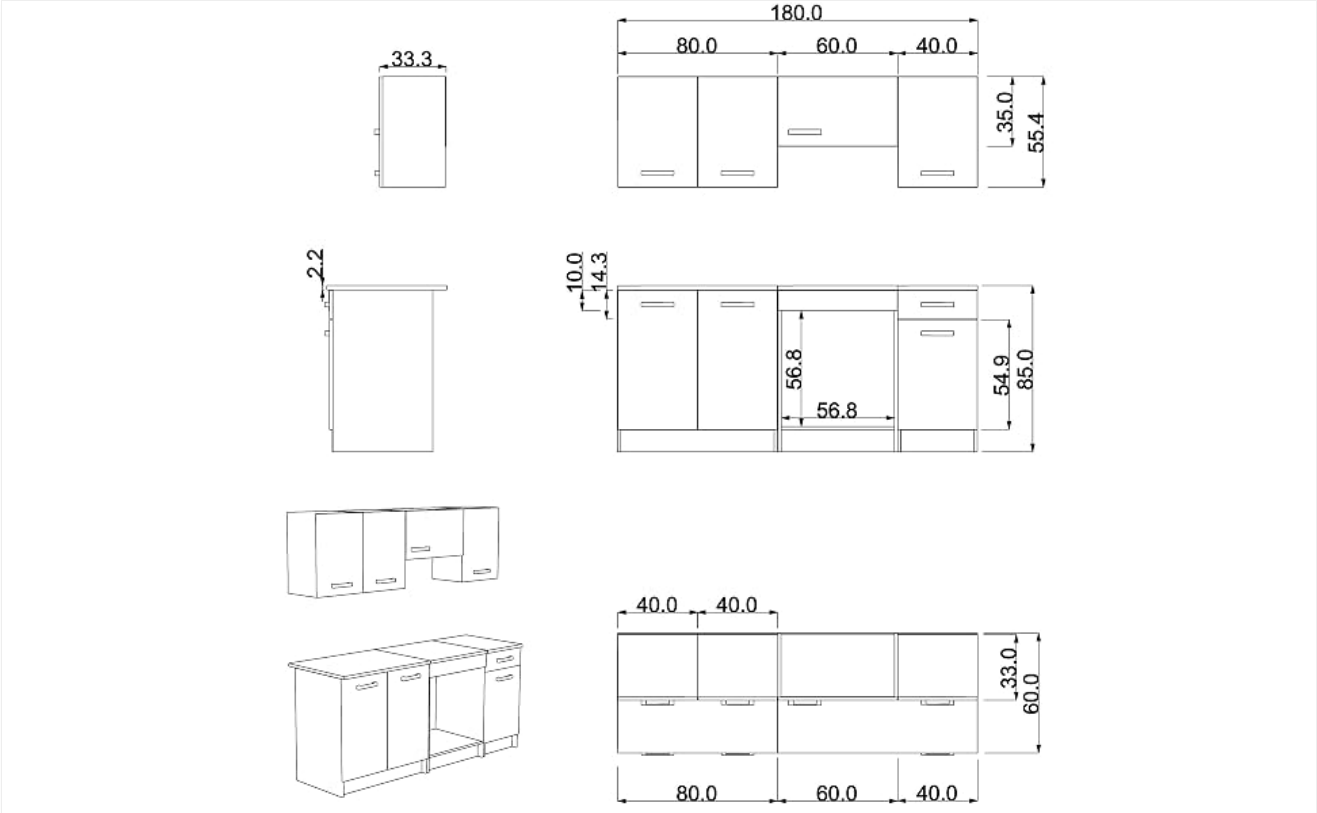


Figure 4: Overview of compatible cabinet dimensions, including the 40cm wall cabinet.

3. Setup and Installation

3.1 Unpacking

1. Carefully open the packaging and remove all components.
2. Check the contents against the included parts list to ensure all pieces are present and undamaged.
3. Keep packaging materials for potential returns or disposal according to local regulations.

3.2 Assembly

The cabinet requires assembly. Detailed assembly instructions are included with the product. Please follow these instructions carefully, step-by-step, to ensure correct and safe construction. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

3.3 Wall Mounting

This cabinet is designed for wall mounting. Ensure that the wall structure is suitable to support the weight of the cabinet and its contents. Use appropriate wall fixings for your specific wall type (e.g., concrete, plasterboard, wood studs). If you are unsure about the correct mounting procedure or suitable fixings, consult a qualified professional.

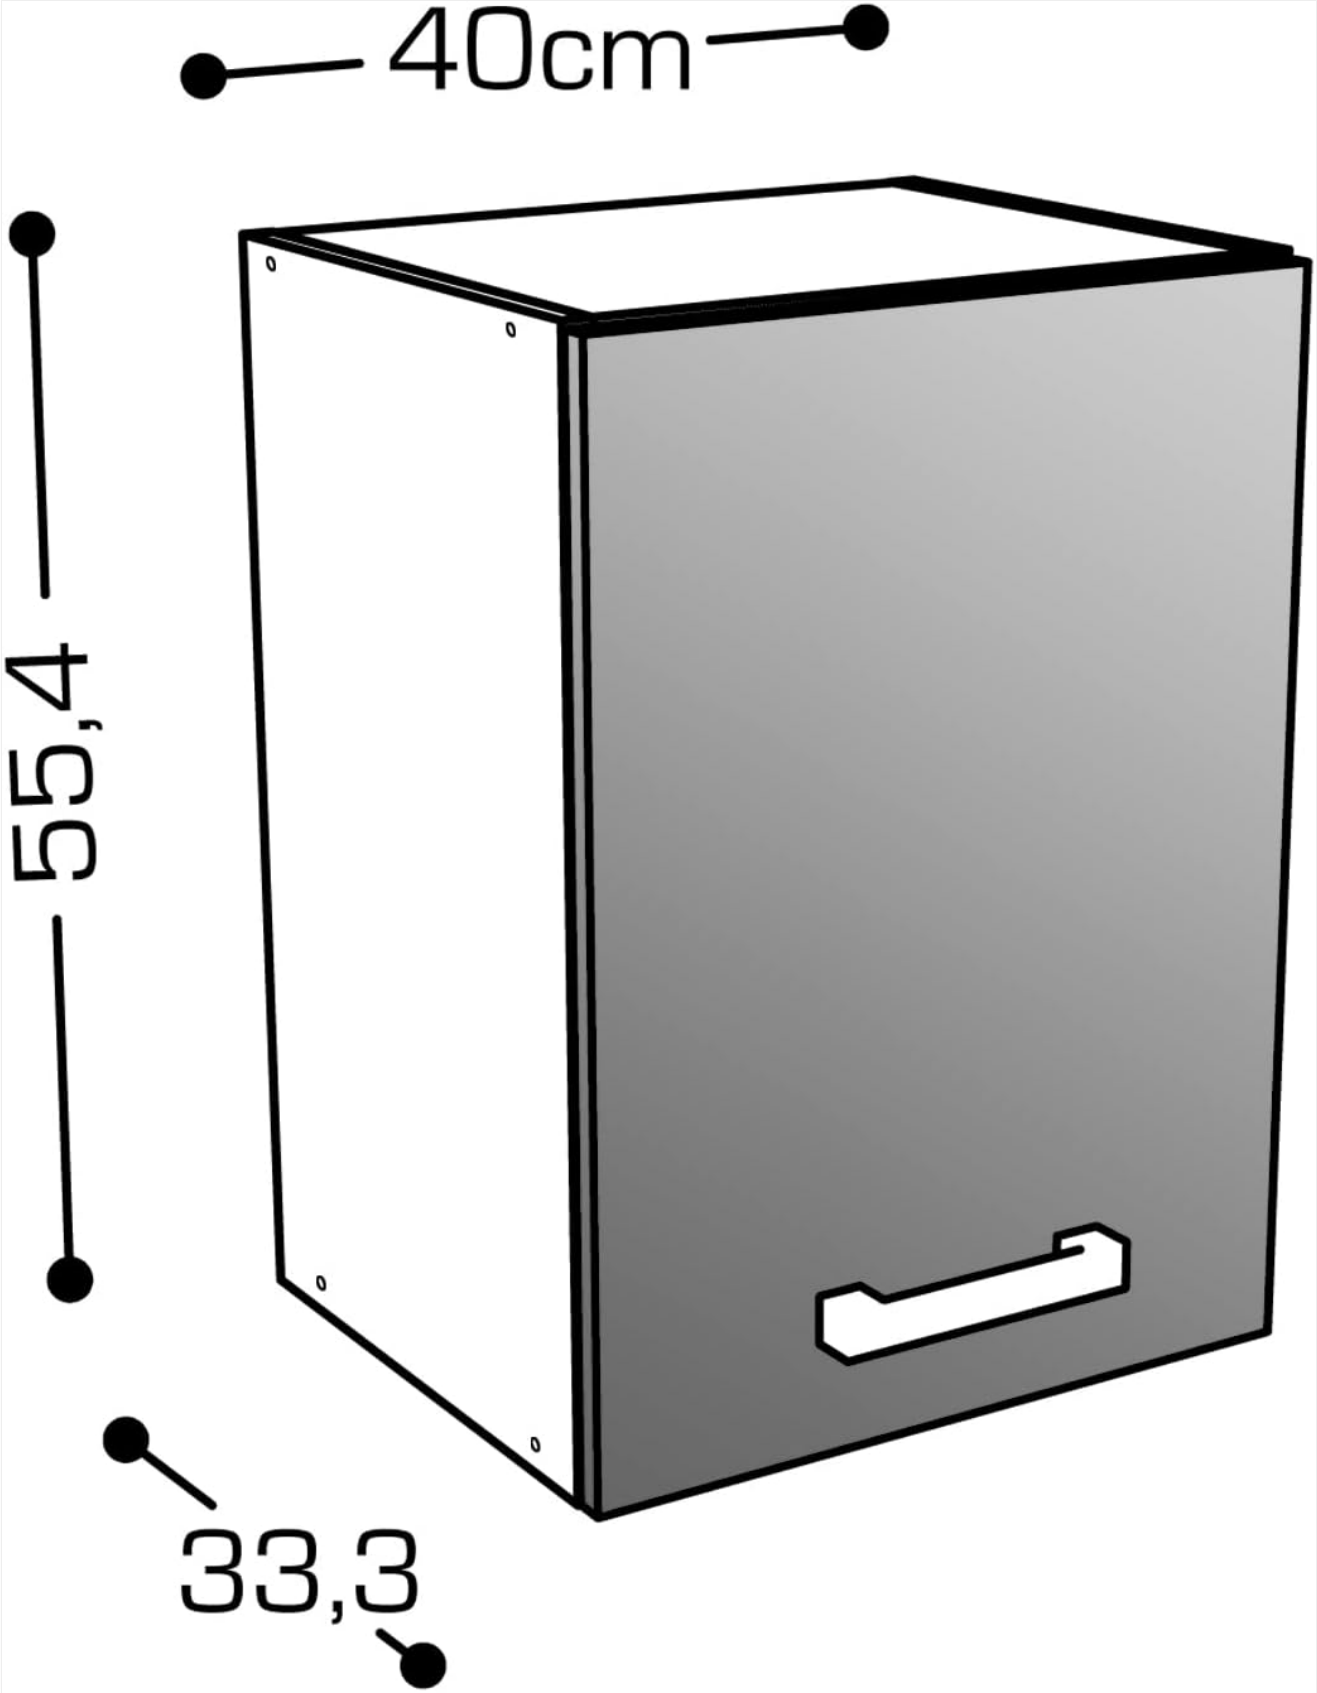


Figure 5: Interior view of the cabinet, highlighting the two shelves for storage.

4. Operation

4.1 Door Operation

The cabinet features a single door. To open, gently pull the handle. To close, push the door until it is fully shut. Avoid forcing the door or slamming it, as this can cause damage to the hinges or the cabinet structure.

4.2 Storage Capacity

The cabinet is equipped with two internal shelves, providing organized storage space. Distribute items evenly across the shelves to maintain balance and prevent excessive strain on the cabinet structure. The door helps keep stored items clean and dust-free.

5. Maintenance

5.1 Cleaning

For routine cleaning, simply use a soft, clean, and slightly damp cloth on all surfaces. Avoid using abrasive cleaners, harsh chemicals, or rough sponges, as these can damage the melamine finish.

5.2 General Care

- Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods.
- Do not overload the shelves beyond their intended capacity.

6. Troubleshooting

This section addresses common issues you might encounter with your kitchen wall cabinet.

- **Loose Door:** If the door feels loose or misaligned, check the hinge screws and tighten them gently. Avoid overtightening.
- **Wobbly Cabinet:** Ensure the cabinet is securely mounted to the wall and all internal assembly screws are tight. If the issue persists, re-evaluate the wall fixings.
- **Scratches/Minor Damage:** For minor scratches on the melamine surface, touch-up pens or repair kits designed for laminate furniture may be used.

If you experience any issues not covered here or require further assistance, please contact the manufacturer's customer support.

7. Warranty and Support

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or contact MEUBLE COSY customer service. Keep your proof of purchase for warranty claims.

For technical support or inquiries, please reach out to the manufacturer, Furnish 1, or the retailer from whom you purchased the product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09C5ZN81Y

More documents and user manuals: **https://manuals.plus/**