Bellemave Lift Up Storage Bed

Bellemave Full Size Lift Up Storage Bed Frame Instruction Manual

Model: Lift Up Storage Bed

1. Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bellemave Full Size Lift Up Storage Bed Frame. Please read this manual thoroughly before beginning assembly or use to ensure safe and correct operation.



Image 1.1: The Bellemave Full Size Lift Up Storage Bed Frame in a bedroom.

2. Safety Information

WARNING:

- Always follow assembly instructions carefully to prevent instability.
- Do not exceed the maximum weight recommendation of 500 pounds for the bed frame.
- Ensure a compatible mattress is used to maintain stability and proper function of the hydraulic lift system.
- Keep hands and fingers clear of moving parts, especially when operating the lift mechanism.
- Do not allow children to play on or around the lift mechanism.

3. Package Contents

Before assembly, please ensure all parts and hardware are present. Refer to the included parts list (usually found in the packaging) to verify all components. If any parts are missing or damaged, contact customer support immediately.

4. Setup and Assembly

Assembly is required for this bed frame. It is recommended that two adults assemble the bed. Clear a spacious area for assembly and keep all tools and parts organized.

4.1 General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against the parts list to ensure everything is present.
2. **Assemble the Bed Frame:** Follow the specific instructions provided with your product to connect the side rails, footboard, and headboard. Ensure all bolts and fasteners are securely tightened.
3. **Attach the Headboard:** Secure the upholstered headboard to the main frame.
4. **Install the Slat System:** Position and secure the wooden slats onto the bed frame. These slats provide mattress support and are crucial for the hydraulic lift system.
5. **Install Hydraulic Lift Mechanism:** Attach the hydraulic pistons and associated hardware as per the detailed instructions. Ensure they are correctly oriented and securely fastened.
6. **Test the Lift Mechanism:** Before placing the mattress, carefully test the hydraulic lift system by gently raising and lowering the slat platform.
7. **Place Mattress:** Once assembly is complete and the lift mechanism is confirmed to be working, carefully place your full-size mattress onto the slats.



Image 4.1: Assembled bed frame with slats and headboard.



Image 4.2: Key features for assembly and operation, including the hydraulic lift system.

5. Operating Instructions

The Bellemave Lift Up Storage Bed Frame features a hydraulic system for easy access to under-bed storage.

5.1 Accessing Storage:

1. **Clear the Bed:** Ensure there are no items on the bed that could fall off when the platform is lifted.
2. **Locate Lift Handle/Rope:** Find the fabric loop or handle typically located at the foot end of the bed, under the mattress.
3. **Lift the Platform:** Grasp the handle firmly and gently pull upwards. The hydraulic pistons will assist in lifting the mattress platform smoothly. Continue lifting until the platform is fully open and stable.
4. **Access Storage:** Place or retrieve items from the spacious storage area beneath the bed.

5.2 Closing the Storage:

1. **Ensure Clearance:** Verify that no items are obstructing the closing mechanism or extending above the storage compartment.
2. **Lower the Platform:** Grasp the handle and gently pull the platform downwards. The hydraulic system will control the descent. Apply slight downward pressure if needed to initiate the closing motion.
3. **Securely Closed:** Ensure the platform is fully lowered and rests securely on the bed frame.



Image 5.1: The bed frame with the storage compartment open.

6. Maintenance

- **Upholstery Care:** The fabric upholstery should be dry cleaned only. For minor spills, gently blot with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Frame Inspection:** Periodically check all bolts and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Hydraulic System:** The hydraulic pistons are designed for long-term use and generally require no maintenance. If you notice any issues with lifting or lowering, refer to the troubleshooting section.
- **Cleaning:** Wipe down the metal frame and wooden slats with a dry or slightly damp cloth as needed.

7. Troubleshooting

Problem	Possible Cause	Solution
Hydraulic lift mechanism does not move up or down smoothly.	• Incorrect installation of hydraulic pistons. • Obstruction in the mechanism. • Pistons are faulty or damaged. • Mattress weight is incompatible.	• Review assembly instructions for correct piston installation. • Check for any items blocking the mechanism. • Ensure mattress weight is within the recommended range (refer to product specifications). • Contact customer support for replacement parts if pistons are damaged.

Problem	Possible Cause	Solution
Slats or frame components appear broken or unstable.	• Loose fasteners. • Overloading the bed. • Damaged components during shipping or assembly.	• Check and tighten all bolts and screws. • Ensure the bed's weight capacity (500 lbs) is not exceeded. • Contact customer support for replacement parts.
Bed makes squeaking noises.	• Loose connections. • Friction between metal parts.	• Tighten all assembly bolts. • Apply a small amount of lubricant (e.g., silicone spray) to contact points between metal components, avoiding wood slats.

8. Specifications

Model: Lift Up Storage Bed

Brand: Bellemave

Color: Grey

Material: Metal frame, Upholstered headboard

Style: Platform

Compatible Mattress Size: Full Size

Product Dimensions (L x W x H):78.1 x 57.5 x 44.5 inches

Item Weight: 88 pounds

Maximum Weight Capacity: 500 pounds (approximate, based on safety information)

Assembly Required: Yes

Product Care Instructions: Dry Clean Only (for upholstery)

UPC: 733805233358

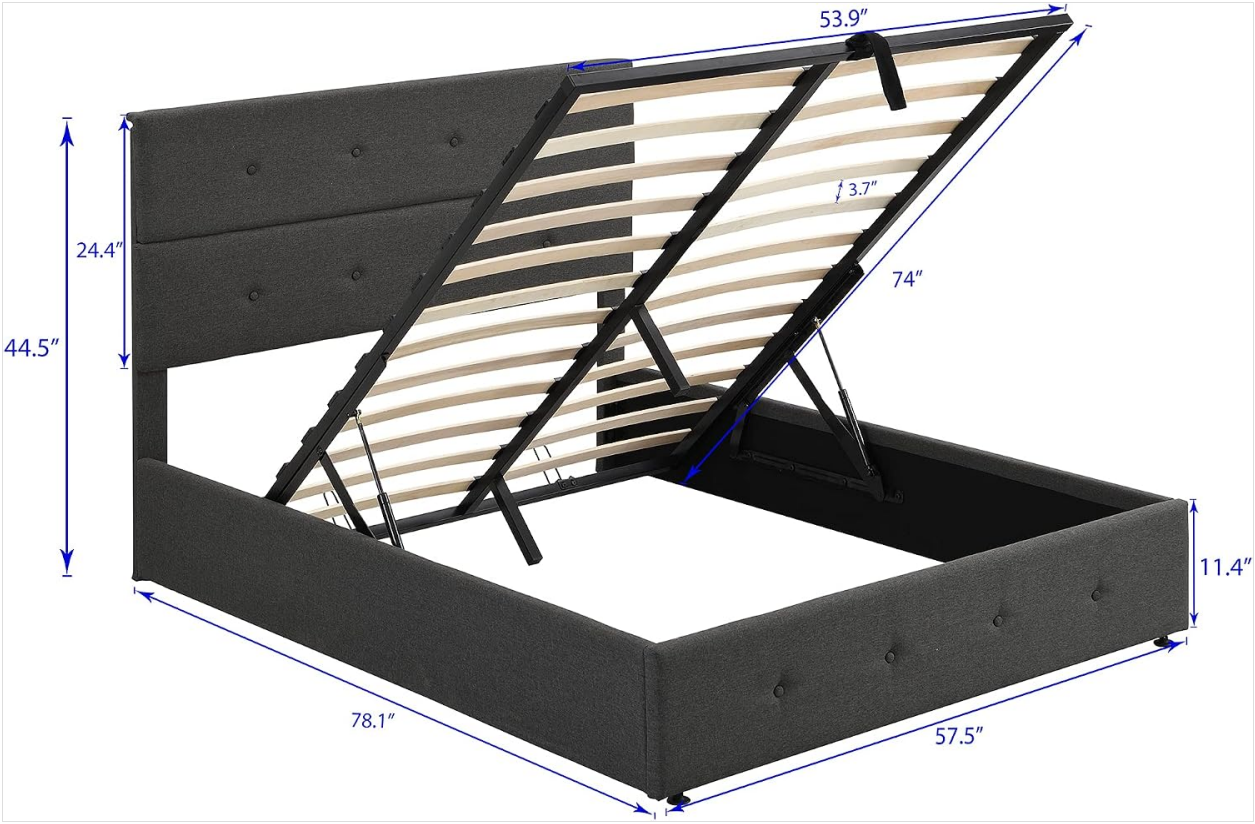


Image 8.1: Product dimensions overview.

9. Warranty and Customer Support

Bellemave is committed to providing quality products and excellent customer service. While specific warranty details are not provided in this manual, please retain your proof of purchase.

For any questions, missing parts, damaged components, or assistance with assembly and operation, please contact Bellemave customer support. Refer to the contact information provided with your purchase or visit the official Bellemave website for support details.

Our customer service team is dedicated to resolving any issues you may encounter.

© 2024 Bellemave. All rights reserved.