LANGGER V V Gun Safe PIN Code Version

LANGGER V Gun Safe for Pistol

PIN Code Version Instruction Manual

1. Introduction

Thank you for choosing the LANGGER V Gun Safe. This manual provides essential information for the safe and proper use, setup, and maintenance of your PIN Code Version gun safe. Please read these instructions carefully before operating the safe and retain them for future reference.

2. Safety Information

- Always store firearms unloaded within the safe.
- Keep the safe locked at all times when not in use.
- Store emergency keys in a secure location away from the safe and out of reach of unauthorized individuals. Do not store them inside the safe.
- Ensure the safe is mounted or secured properly to prevent unauthorized removal.
- Do not allow children or unauthorized persons access to the safe or its contents.
- This safe is not water resistant. Avoid exposure to water or high humidity.

3. Package Contents

Verify that all items are present in your package:

- LANGGER V Gun Safe (PIN Code Version)
- Emergency Keys (2)
- Security Cable
- Mounting Hardware (screws)
- User Manual

4. Product Features

- **Quick Access:** Rapid entry via backlit keypad or emergency key.
- **Durable Construction:** Reinforced solid alloy steel with a durable powder coating finish.
- **PIN Code Access:** Customizable 4-6 digit PIN code.
- **Backlit Keypad:** For visibility in low-light conditions.
- **Internal LED Light:** Illuminates the interior when the safe is opened.
- **Silent Mode:** Option to disable sound for discreet operation.
- **Portable Design:** Compact size suitable for home, car, or travel.
- **Security Cable:** For anchoring the safe to a stationary object.
- **Protective Foam Interior:** Cushioned interior to protect contents.

5. Setup

5.1. Battery Installation

1. Locate the battery compartment, typically on the underside or inside the door of the safe.
2. Insert 4 AA batteries (not included) according to the polarity indicators.
3. Close the battery compartment cover securely.

5.2. Setting Your PIN Code

The safe comes with a default code. It is crucial to change this immediately.

1. Open the safe using the emergency key.
2. Locate the reset button inside the safe (often a small red button).
3. Press and hold the reset button until you hear a beep or see the indicator light flash.
4. On the keypad, enter your desired 4-6 digit PIN code.
5. Press the '#' or 'SET' button (refer to specific button on your model if different) to confirm. You should hear a confirmation beep.
6. Test your new PIN code with the safe open to ensure it works correctly before closing the safe.

5.3. Securing the Safe

The safe can be secured using the included security cable or by mounting it.

Using the Security Cable:

1. Loop the security cable around a fixed, heavy object (e.g., car seat frame, desk leg).
2. Insert the cable's metal end into the designated slot on the safe.
3. Close and lock the safe. The cable will be secured.

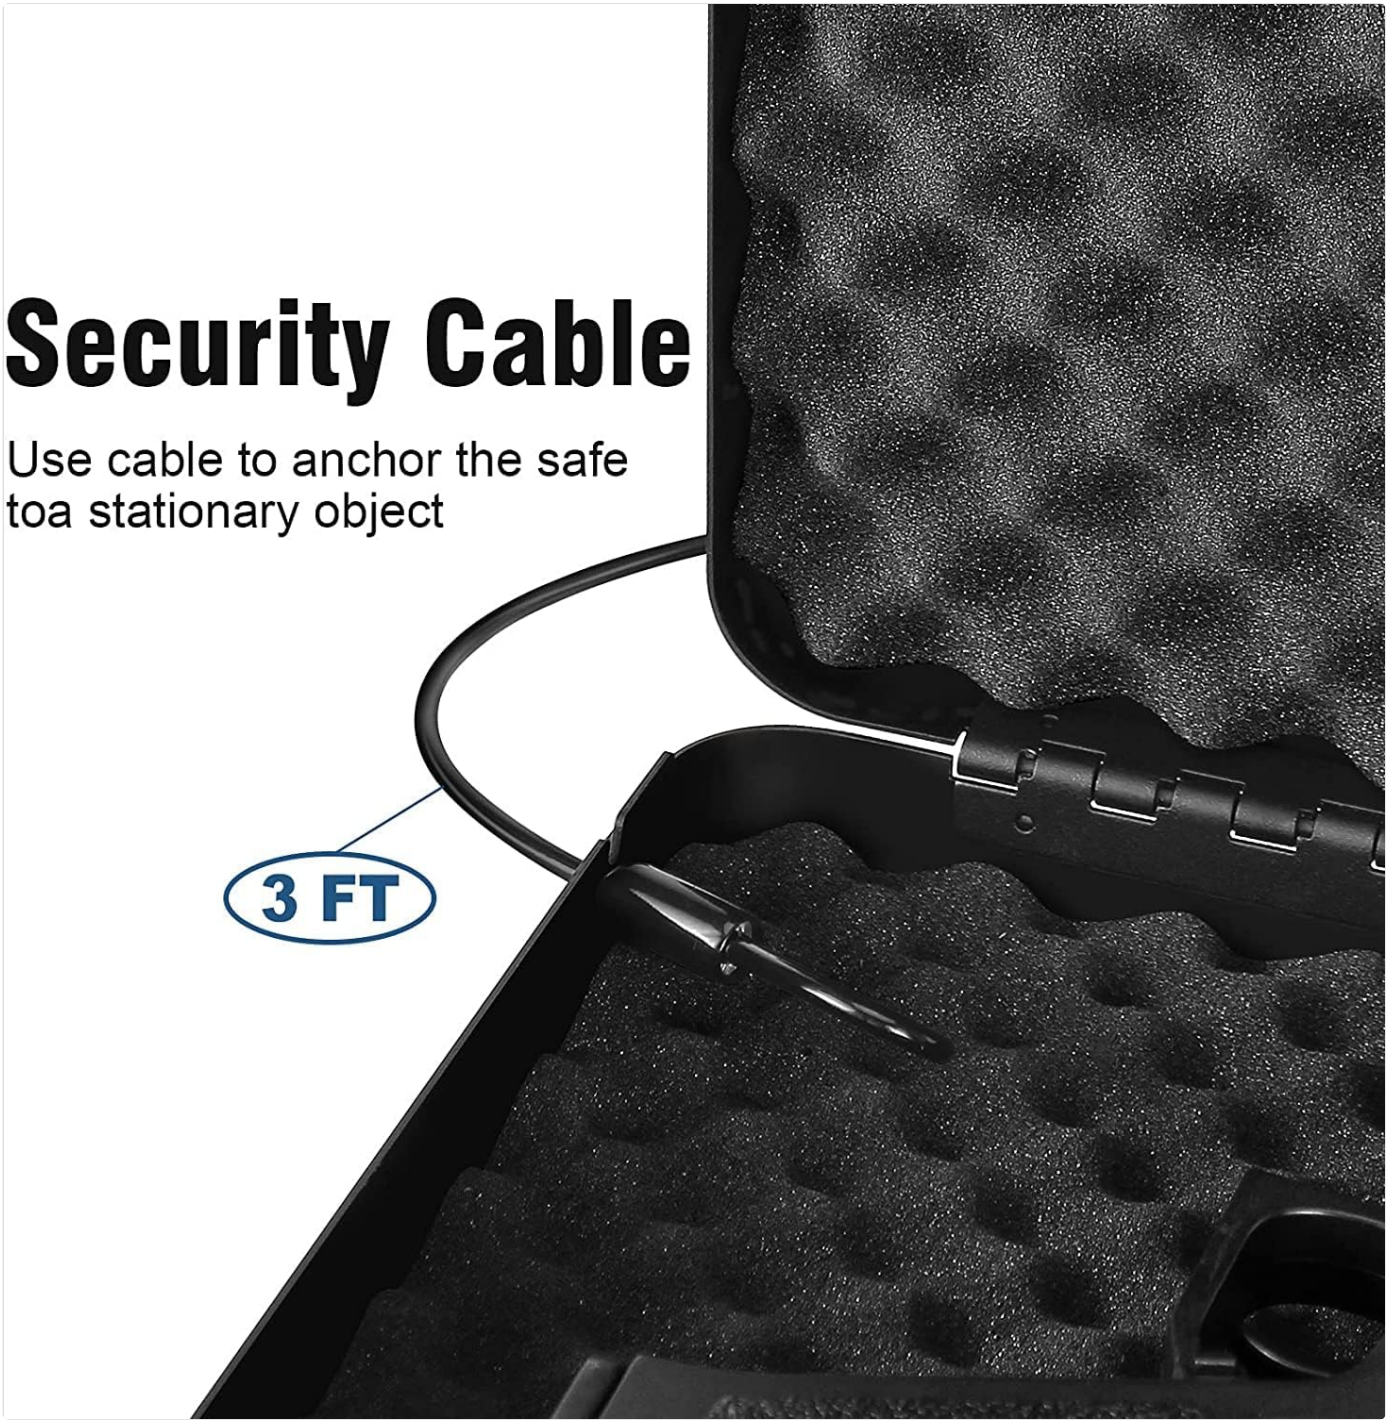


Image: The LANGGER V Gun Safe secured with its security cable to a table leg.

Mounting the Safe:

1. Identify a suitable mounting location (e.g., inside a cabinet, to a floor).
2. Use the pre-drilled holes on the safe as a template to mark drilling points.
3. Drill pilot holes if necessary.
4. Secure the safe using the provided mounting hardware.

6. Operating Instructions

6.1. Opening the Safe with PIN Code

1. Enter your 4-6 digit PIN code on the keypad.
2. The safe door will automatically spring open.

Your browser does not support the video tag.

Video: Demonstrates the quick access feature of the LANGGER V Gun Safe, showing how to open it using the PIN code and its suitability for various environments like home, car, and travel.

6.2. Opening the Safe with Emergency Key

1. Locate the keyhole on the front of the safe.
2. Insert one of the emergency keys and turn it to unlock.
3. The safe door will open.



Image: Close-up of the LANGGER V Gun Safe's keypad and manual keyhole, highlighting both access methods.

6.3. Closing the Safe

1. Gently push the lid down until it clicks into place.
2. The safe will automatically lock.

6.4. Silent Mode

To activate or deactivate silent mode (disabling keypad beeps):

1. With the safe open, press and hold the 'MUTE' button (or a designated button, refer to your specific model's instructions if different) for a few seconds until you hear a confirmation sound or see a light indicator change.
2. Repeat the process to toggle the silent mode on or off.

7. Maintenance

- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears or if the keypad becomes unresponsive. Use high-quality alkaline AA batteries.
- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Keypad Care:** Keep the keypad clean and dry. Avoid pressing buttons with excessive force.
- **Interior Foam:** Periodically check the interior foam for wear and tear.

8. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with PIN code.	Incorrect PIN entered; Low batteries; Keypad malfunction.	Re-enter PIN carefully; Replace batteries; Use emergency key.
Keypad is unresponsive.	Dead batteries; Keypad damage.	Replace batteries; Use emergency key and contact support if issue persists.
Safe makes no sound.	Silent mode is activated.	Deactivate silent mode (refer to section 6.4).
Door does not close properly.	Obstruction; Misalignment.	Check for items blocking the door; Ensure safe is on a flat surface.

9. Specifications



Image: Visual representation of the LANGGER V Gun Safe's external and internal dimensions.

Feature	Detail
Brand	LANGGER V
Model	V Gun Safe (PIN Code Version)
Exterior Dimensions (L x W x H)	11.8" x 7.5" x 2.3"
Interior Dimensions (L x W x H)	8.8" x 7.3" x 2.2"
Lock Type	Electronic (PIN Code)
Color	Black
Capacity	1 handgun and magazines

Feature	Detail
Material	Alloy Steel
Item Weight	5.5 Pounds
Mounting Type	Freestanding, Tabletop
Water Resistance Level	Not Water Resistant

10. Warranty and Support

LANGGER V offers a standard 1-year warranty on this product. By registering your product within 21 days of purchase, you may be eligible for an additional 2-year warranty, extending your coverage to a total of 3 years. Please refer to the warranty registration card included with your product or visit the official LANGGER V website for details on how to register and for further support.
For technical assistance or customer service inquiries, please contact LANGGER V support through their official channels.

© 2026 LANGGER V. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question