Donerton I09

Donerton I09 Wireless Earbuds User Manual

Model: I09

1. Introduction

Thank you for choosing the Donerton I09 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

2. Package Contents

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

- Wireless Earbuds (2 units)
- Fast Charging Case
- Type-C Charging Cable
- Pairs of Silicone Earplugs (various sizes)
- User Manual (this document)

3. Product Overview

The Donerton I09 Wireless Earbuds feature a compact design with touch controls and come with a portable charging case.

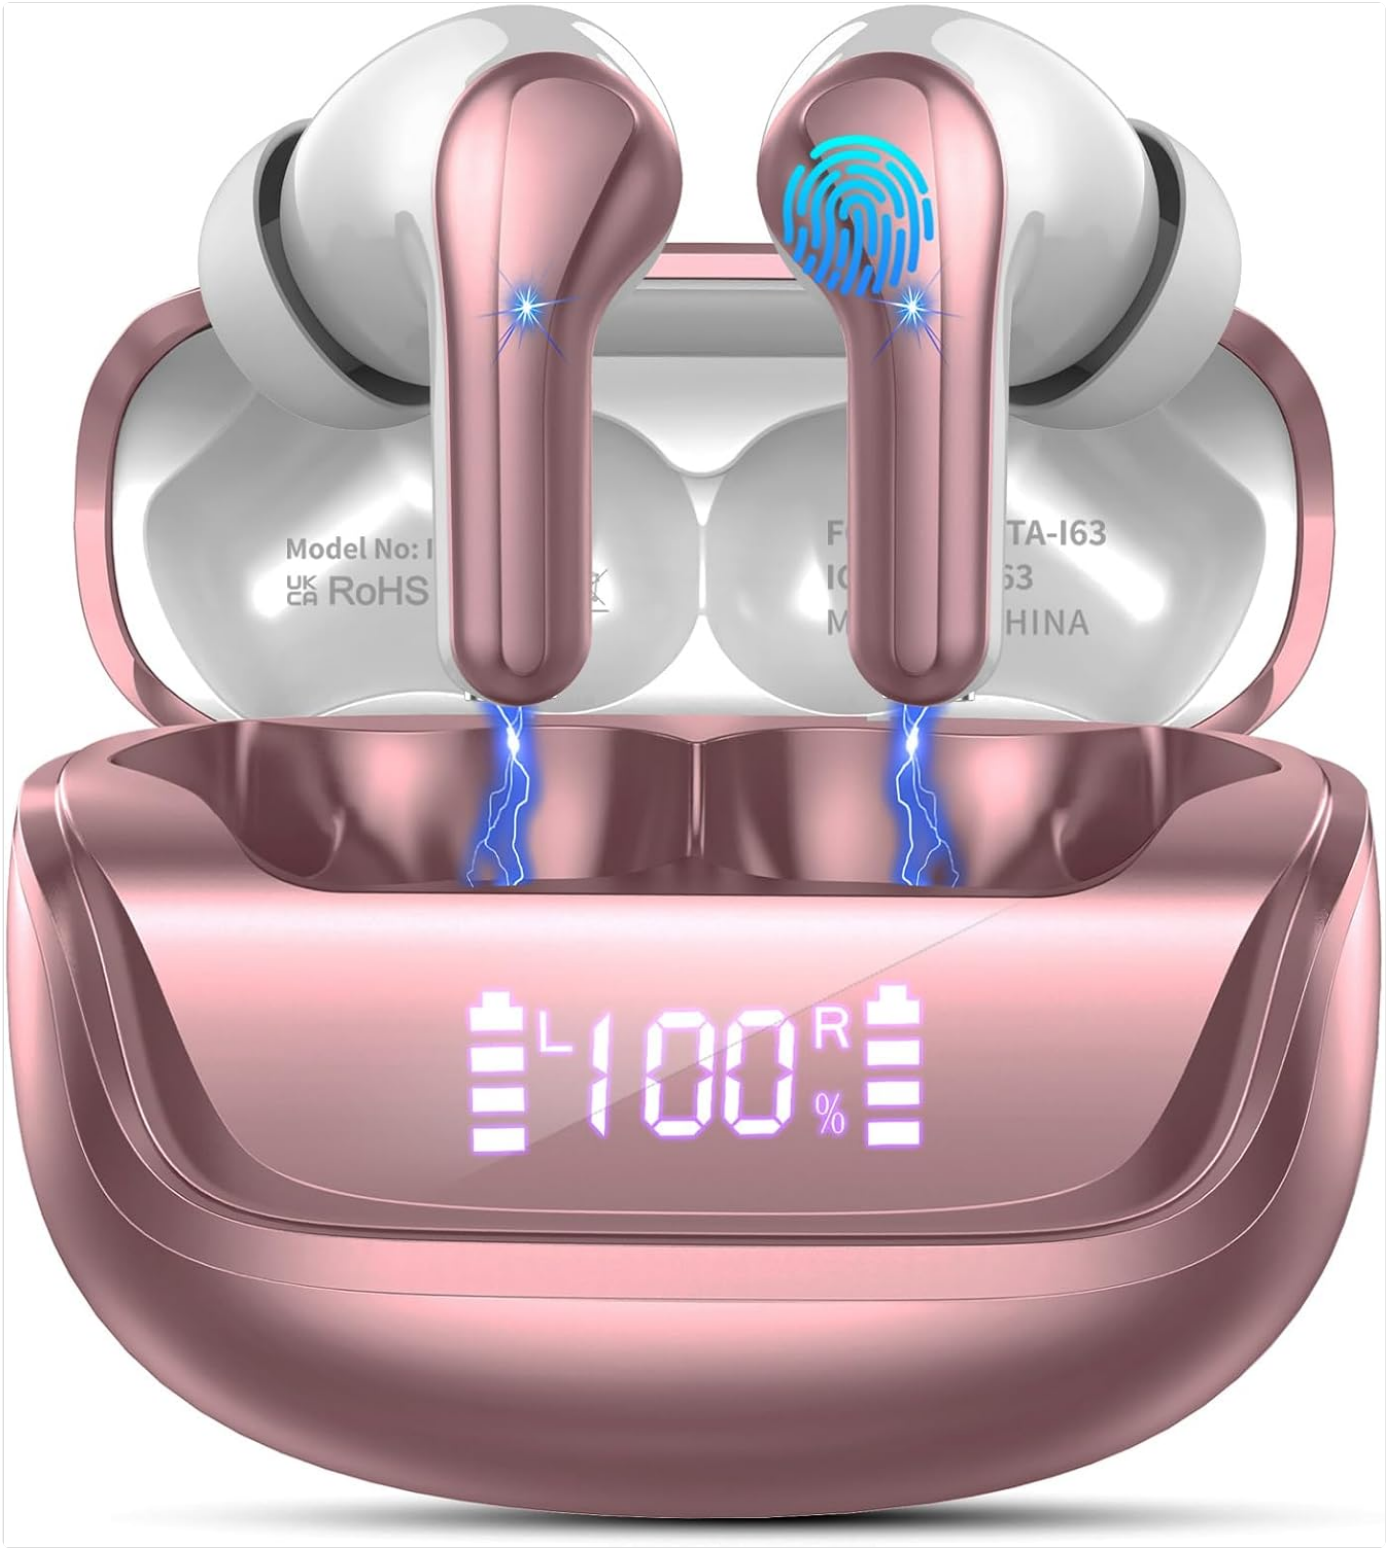


Figure 1: Donerton I09 Wireless Earbuds in Charging Case. The image displays the Donerton I09 Wireless Earbuds in their charging case. The earbuds are rose gold and white, with a fingerprint-like touch control area visible on one earbud. The charging case is also rose gold, showing a digital display indicating 'L 100% R', signifying both earbuds are fully charged. Blue lightning bolt icons suggest active charging.

3.1 Components

- **Earbuds:** Left and Right, with touch control areas.
- **Charging Case:** Houses and charges the earbuds, features a digital battery display.
- **Charging Port:** Type-C port on the charging case.

3.2 Touch Control Functions

The earbuds feature touch-sensitive controls for various functions. Specific gestures (single tap, double tap, long press)

correspond to different actions. Refer to the quick start guide included in the package for a detailed list of touch commands.

4. Setup

4.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the Type-C charging cable to the charging port on the case and to a USB power source.
3. The digital display on the charging case will indicate the battery level. A full charge for the earbuds typically takes 60 minutes. The charging case provides approximately 45 hours of additional battery life.
4. Once fully charged, disconnect the charging cable.

4.2 Pairing with a Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "Donerton I09" (or similar name) from the list.
5. Once connected, a confirmation sound may be heard, and the earbuds will be ready for use.
6. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case and Bluetooth is enabled on the device.

5. Operating Instructions

5.1 Basic Functions

- **Power On:** Open the charging case or long-press the touch area on both earbuds.
- **Power Off:** Place earbuds back into the charging case and close the lid, or long-press the touch area on both earbuds until they power off.
- **Play/Pause:** Single tap the touch area on either earbud.
- **Volume Control:** Specific touch gestures (e.g., long press left for volume down, long press right for volume up) as detailed in the quick start guide.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.

5.2 Call Management

- **Answer Call:** Single tap the touch area on either earbud.
- **End Call:** Single tap the touch area on either earbud during a call.
- **Reject Call:** Long press the touch area on either earbud.

5.3 Voice Assistant

Triple tap the touch area on either earbud to activate your device's voice assistant (e.g., Siri, Google Assistant).

6. Maintenance

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.

- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

6.2 Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid exposing the product to extreme temperatures, humidity, or direct sunlight.

6.3 Water Resistance

The Donerton I09 earbuds are rated IP7 Waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This rating applies to the earbuds only, not the charging case. Avoid submerging the charging case in water. Ensure earbuds are dry before placing them back into the charging case.

7. Troubleshooting

Issue	Possible Solution
Earbuds not pairing	◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "Donerton I09" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close the lid, wait a few seconds, then open again.
No sound from one earbud	◦ Ensure both earbuds are charged. ◦ Try re-pairing the earbuds. ◦ Check device audio settings for balance.
Charging case not charging	◦ Check the Type-C cable and power adapter. ◦ Ensure the charging port is clean and free of debris.
Touch controls unresponsive	◦ Ensure earbuds are clean and dry. ◦ Restart the earbuds by placing them in the case and taking them out.

8. Specifications

Feature	Detail
Model Name	I09 (also referred to as I66 in some contexts)
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	Bluetooth (specific version not provided, typically 5.0 or higher for modern earbuds)
Water Resistance Level	IP7 Waterproof (earbuds only)
Earbud Battery Life	Up to 6 Hours
Charging Case Battery Life	Up to 45 Hours (additional playtime)
Earbud Charging Time	Approximately 60 minutes

Feature	Detail
Bluetooth Range	10 Meters
Control Type	Touch, Volume Control
Audio Driver Size	6 Millimeters
Frequency Range	20 Hz - 20 kHz
Compatible Devices	Android, iOS, Phones, Pads
Item Weight (Earbuds + Case)	100 Grams (3.53 ounces)
Material	Plastic

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Donerton website. Keep your purchase receipt as proof of purchase.
Visit the Donerton Store on Amazon for more information and support.

© 2025 Donerton. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question