WOOX R9061

WOOX Smart Video Doorbell

Model: R9061

Introduction

The WOOX R9061 Smart Video Doorbell is a comprehensive home security device designed to enhance your peace of mind. Featuring a 1080p camera, two-way audio communication, motion detection, and clear night vision, it allows you to monitor your doorstep from anywhere. This manual provides detailed instructions for setting up, operating, and maintaining your doorbell.



The WOOX Smart Video Doorbell (left) and its accompanying chime (right), with a smartphone displaying a live view of a person at the door.

Setup and Installation

Follow these steps to set up your WOOX Smart Video Doorbell:

1. **Charge the Batteries:** Ensure the included lithium-ion batteries are fully charged before installation. The doorbell operates on battery power.
2. **Mounting Location:** Choose a suitable location near your door, ensuring a clear view of the entrance. The doorbell is designed for wall mounting using screws.
3. **Install Mounting Bracket:** Securely attach the mounting bracket to the wall using the provided screws.
4. **Attach Doorbell:** Slide the doorbell onto the mounting bracket until it clicks into place.
5. **Connect to Wi-Fi:** Download the WOOX Home app (or compatible smart home app). Follow the in-app instructions to connect your doorbell to your home Wi-Fi network.
6. **Pair Chime:** Plug the wireless chime into a power outlet inside your home. Follow the instructions to pair it with your doorbell.



The image illustrates the simple installation process, showing a hand attaching the WOOX Smart Video Doorbell to its wall-mounted bracket.

Operating Instructions

Two-Way Audio Communication

When someone presses the doorbell, you will receive a notification on your smartphone. Open the app to view the live feed and engage in two-way audio communication. This allows you to speak with visitors, even when you are away from home, for example, to instruct a courier on where to leave a package.



A user communicating with a person at the door via the WOOX Smart Video Doorbell app on their smartphone, demonstrating the two-way audio feature.

Clear Image Quality and Night Vision

The doorbell provides clear 1080p video resolution during the day. At night, its advanced night vision capabilities ensure you can clearly see who is at your door, even in low-light conditions.




This image compares the video quality, showing a blurred 720p image from another doorbell above a clear 1080p image from the WOOX doorbell, highlighting its superior resolution.

Motion Detection

The doorbell features motion detection. If someone lingers in front of your door, you will receive a motion detection alert and a video recording on your mobile phone, providing an additional layer of security.

Voice Control Integration

For hands-free operation, the WOOX Smart Video Doorbell can be controlled via voice commands through compatible smart home devices such as Amazon Echo Show or Google Nest Hub. You can ask your smart assistant to display the live feed from your doorbell on the screen.

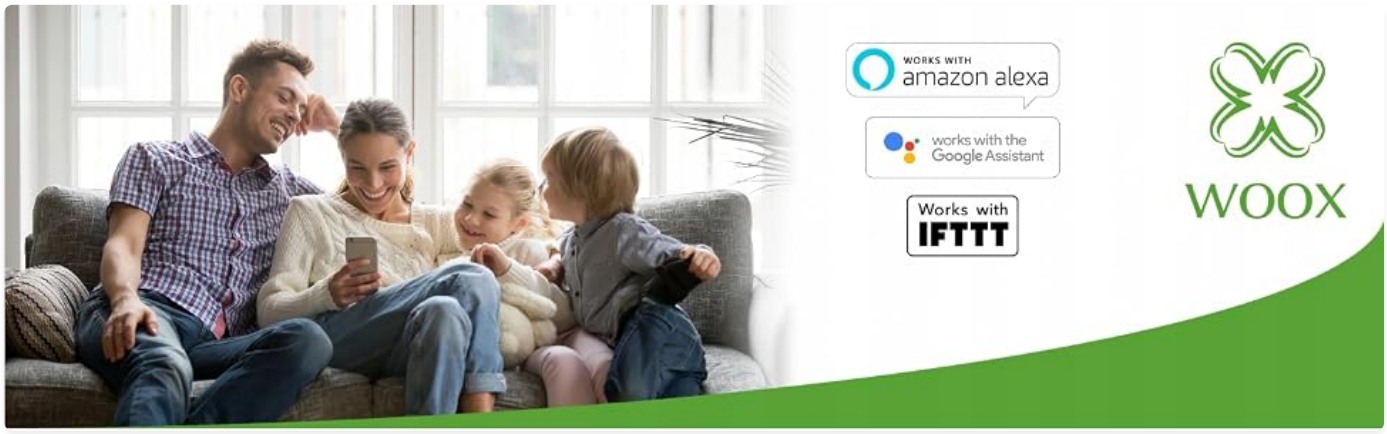

A family relaxing on a couch, with logos indicating compatibility with Amazon Alexa, Google Assistant, and IFTTT, showcasing the doorbell's smart home integration.

Maintenance

Battery Life

The doorbell is designed for extended use with its rechargeable lithium-ion batteries, offering approximately 90 days of battery life on a single charge, depending on usage frequency.



An exploded view of the WOOX Smart Video Doorbell, revealing its internal components and the two rechargeable batteries that provide its power.

Data Storage Options

You have two options for storing video recordings:

- **SD Card:** Insert a microSD card (up to 128GB, not included) into the doorbell for local storage. This option is free and

provides full data privacy.

- **Cloud Storage:** Utilize the free cloud storage option provided by WOOX. Both methods allow for video playback.



The WOOX Smart Video Doorbell chime is shown plugged into a wall socket, emphasizing the "No Fees" aspect, likely referring to local storage options.

Cleaning

Wipe the doorbell's exterior with a soft, damp cloth as needed to remove dust and dirt. Do not use harsh chemicals or abrasive cleaners.

Troubleshooting

- **No Power/Not Turning On:** Ensure batteries are fully charged and correctly inserted.
- **Cannot Connect to Wi-Fi:** Verify your Wi-Fi network is 2.4GHz (5GHz is not supported). Check Wi-Fi signal strength

at the doorbell's location. Restart your router and the doorbell.

- **Poor Video Quality:** Ensure the camera lens is clean. Check your Wi-Fi connection speed.
- **Motion Detection Not Working:** Check motion detection settings in the app. Ensure the detection zone is correctly configured.
- **Two-Way Audio Issues:** Check your phone's microphone and speaker settings. Ensure a stable internet connection.
- **Chime Not Ringing:** Ensure the chime is plugged in and paired with the doorbell. Check the chime's volume settings.

For further assistance, please refer to the support section or contact WOOX customer service.

Technical Specifications

Feature	Specification
Model Number	R9061
Video Recording Resolution	1080p
Color	Black
Wireless Communication Technology	Wi-Fi
Effective Video Resolution	1080 Pixels
Viewing Angle	140 Degrees
Installation Type	Screw-in
Material	Plastic
Item Dimensions (L x W x H)	50 x 30 x 125 mm
Product Dimensions	5 x 3 x 12.5 cm; 400 g
Batteries	2 Lithium-ion (included)
Battery Type	Lithium-ion
Special Features	HD Resolution, Night Vision
Power Source	Battery Powered
Connectivity Protocol	Wi-Fi
Compatible Devices	Smartphone
Mounting Type	Wall Mount

Warranty and Support

For warranty information and technical support, please visit the official WOOX website or contact their customer service

department. Keep your purchase receipt for warranty claims.
WOOX Official Website: www.wooxhome.com

© 2023 WOOX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question