Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Victrola VPA-583-ESP

Victrola V1 Stereo Turntable Instruction Manual

Model: VPA-583-ESP | Brand: Victrola

Introduction

The Victrola V1 Stereo Turntable is a premium audio system designed to provide an immersive listening experience for vinyl records and digital audio. This unit combines a high-quality record player with integrated stereo speakers and Bluetooth connectivity, offering versatile playback options. It supports both 33-1/3 and 45 RPM records and features advanced components for superior sound reproduction.

Important Safety Information

Please read all safety and operating instructions carefully before using this product. Retain these instructions for future reference.

- Do not expose the unit to rain, moisture, or excessive heat.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

Package Contents

Verify that all items listed below are included in your package:

- Victrola V1 Stereo Turntable Unit
- Power Adapter
- Remote Control
- 45 RPM Adapter
- Silicone Slip Mat
- Dust Cover
- Instruction Manual (this document)

Product Features and Components




Overall View: The Victrola V1 Turntable with its dust cover and remote control, showcasing its sleek design and integrated soundbar.



Front Panel: Displays the integrated speaker grille and the main control knob on the right side.



Rear Connections: Shows the various input and output ports including Bluetooth pairing button, Subwoofer out, RCA L/R, Aux in, Optical in, and AC power input, along with the 33/45 RPM speed selector switch.

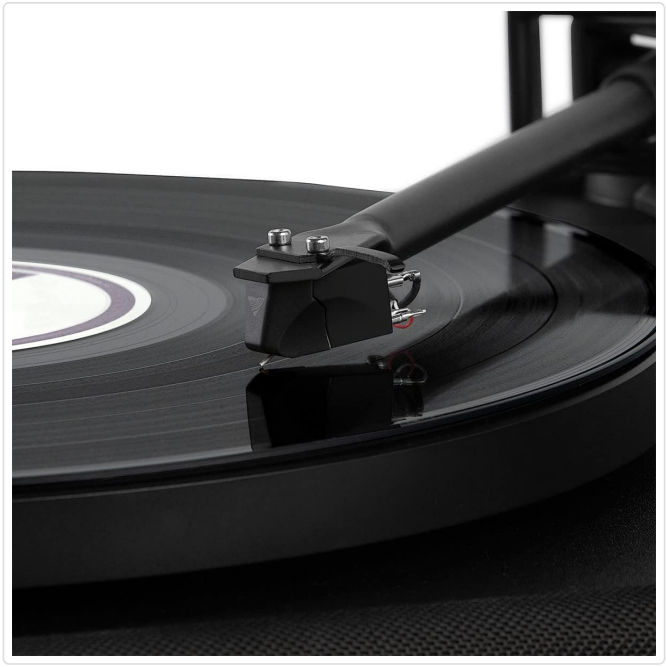

Stylus and Tonearm: A detailed view of the tonearm, cartridge, and stylus, highlighting the precision components for vinyl playback.

Key Features:

- **Integrated Stereo Speakers:** Built-in 20W (10W per channel) stereo speakers for direct audio playback.
- **Bluetooth Connectivity:** Allows wireless audio streaming from external devices (Bluetooth input) and to external Bluetooth speakers/headphones (Vinyl Stream wireless output).
- **Adjustable Tonearm:** Features an aluminum tonearm with adjustable counterweight and anti-skate knob for precise tracking.
- **Dual Speed Playback:** Supports 33-1/3 and 45 RPM vinyl records.
- **Anti-Vibration Design:** Patent-pending technology to minimize vibrations and enhance sound clarity.
- **Multiple Connectivity Options:** Includes Optical Digital Input, 3.5mm Aux Input, Stereo RCA Line Level Output, 3.5mm Headphone Output, and Mono-RCA Subwoofer Output.
- **Victrola VPC-190 Cartridge:** Comes with a factory-balanced moving magnetic cartridge.

Setup

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations. Ensure adequate space around the unit for ventilation.

2. Assembly

1. **Platter and Belt Installation:** Gently place the metal platter onto the spindle. Locate the drive belt (usually pre-installed or found separately) and carefully loop it around the motor pulley and the inner rim of the platter. Ensure the belt is not twisted.
2. **Silicone Slip Mat:** Place the silicone slip mat on top of the platter.
3. **Dust Cover:** Attach the dust cover to the hinges at the rear of the unit. This protects your records and the turntable from dust when not in use.

4. **Tonearm Balance:**
    - Carefully remove the stylus protector.
    - Rotate the counterweight at the rear of the tonearm until the tonearm floats horizontally.
    - Once balanced, hold the counterweight steady and rotate the numbered ring to '0'.
    - Rotate the entire counterweight to the recommended tracking force (refer to cartridge specifications, typically 2.0-3.0 grams for the VPC-190).
5. **Anti-Skate Adjustment:** Set the anti-skate dial to match the tracking force. This helps prevent the stylus from skipping across the record.

3. Connections

- **Power:** Connect the AC power adapter to the DC input on the rear of the turntable and plug it into a wall outlet.
- **Audio Output (RCA):** For connecting to an external amplifier or powered speakers, use RCA cables (not included) to connect the L/R RCA outputs on the turntable to the corresponding inputs on your audio system.
- **Subwoofer Output (Mono-RCA):** Connect an optional powered subwoofer (e.g., Victrola Premiere S1) to this output for enhanced bass.
- **Optical Input:** Connect a TV or CD player using an optical cable (not included) to utilize the turntable's soundbar functionality.
- **Aux Input (3.5mm):** Connect other audio devices using a 3.5mm audio cable (not included).
- **Headphone Output (3.5mm):** Connect headphones for private listening.

Operating Instructions

1. Basic Vinyl Playback

1. Ensure the turntable is powered on.
2. Select the appropriate speed (33-1/3 or 45 RPM) using the switch on the rear panel. Use the 45 RPM adapter for singles if needed.
3. Place a vinyl record on the platter.
4. Gently lift the tonearm using the cueing lever.
5. Position the tonearm over the desired track on the record.
6. Slowly lower the cueing lever to allow the stylus to descend onto the record.
7. Adjust the volume using the front knob or remote control.
8. At the end of the record, the turntable features an auto-stop function that will stop the platter rotation. Manually lift the tonearm and return it to the tonearm rest.

2. Bluetooth Input (Streaming from Device)

1. Press the Bluetooth button on the remote or the main control knob to switch to Bluetooth input mode. The indicator light will flash.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), search for "Victrola V1" in the Bluetooth settings.
3. Select "Victrola V1" to pair. Once connected, the indicator light will be solid.
4. You can now stream audio from your device through the turntable's speakers.

3. Bluetooth Output (Vinyl Stream)

The Victrola V1 can transmit vinyl audio wirelessly to external Bluetooth speakers or headphones.

1. Ensure your external Bluetooth speaker/headphones are in pairing mode.
2. On the Victrola V1, press and hold the Bluetooth pairing button on the rear panel until the indicator light flashes rapidly.
3. The turntable will search for and connect to the nearest available Bluetooth audio device. Once connected, the indicator light will be solid.
4. Play a record, and the audio will be transmitted to your external Bluetooth device.

4. Using Optical and Aux Inputs

To use the Optical or Aux inputs, connect your external device to the corresponding port on the rear of the turntable. Use the remote control or main knob to cycle through input modes until the correct input is selected.

Maintenance

1. Cleaning

- **Unit:** Wipe the turntable's surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Stylus:** Use a soft brush designed for stylus cleaning, brushing gently from back to front. Avoid touching the stylus with your fingers.
- **Records:** Keep your records clean using a record brush or cleaning solution to prevent dust buildup and improve sound quality.

2. Stylus Replacement

The Victrola VPC-190 cartridge features a non-replaceable stylus. When the stylus wears out (typically after 500-1000 hours of playback), the entire cartridge must be replaced. The V1 turntable is designed to accept standard 1/2-inch mount cartridges, allowing for replacement with a new VPC-190 or a compatible third-party cartridge with a replaceable stylus. Consult a qualified technician or refer to detailed cartridge replacement guides for proper installation and alignment.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not active.	Ensure power adapter is securely connected to the unit and a working wall outlet.
No sound from speakers	Volume too low; incorrect input selected; external speakers not connected/powered.	Increase volume. Verify correct input mode (Phono, Bluetooth, Optical, Aux). If using external speakers, ensure they are connected and powered on.
Turntable speed is incorrect	Incorrect speed selected; belt issue.	Check the 33/45 RPM switch on the rear. Ensure the drive belt is properly seated around the motor pulley and platter.
Bluetooth pairing issues	Device too far; pairing mode not active; interference.	Ensure devices are within range (up to 33 feet). Activate pairing mode on both devices. Clear previous Bluetooth connections if necessary.

Problem	Possible Cause	Solution
Skipping or distorted sound	Dirty record/stylus; improper tonearm balance/anti-skate; damaged stylus.	Clean record and stylus. Re-balance tonearm and adjust anti-skate. Inspect stylus for damage; replace cartridge if necessary.

Specifications

- **Model:** VPA-583-ESP
- **Product Dimensions:** 16.54 x 15.12 x 7.95 inches (42.01 x 38.40 x 20.19 cm)
- **Item Weight:** 19.66 pounds (8.94 kg)
- **Connectivity Technology:** Wireless (Bluetooth), Wired (RCA, Optical, Aux, Headphone, Subwoofer)
- **Maximum Rotational Speed:** 45 RPM (also supports 33-1/3 RPM)
- **Included Components:** Turntable unit, Power Adapter, Remote Control, 45 RPM Adapter, Silicone Slip Mat, Dust Cover.
- **Special Feature:** Patent-pending anti-vibration technology
- **Material:** Plastic (with woodgrain vinyl finish)
- **Color:** Espresso
- **Manufacturer:** Innovative Technology
- **On-mode Power Consumption:** 70 watts

Warranty and Support

For warranty information and technical support, please refer to the official Victrola website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Victrola Customer Support: Visit Victrola's Contact Us Page
Victrola Brand Store: Explore more Victrola products on Amazon

© 2025 Victrola. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09FF7GXS8

More documents and user manuals: **https://manuals.plus/**