Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TECLAST P30T

TECLAST P30T 10.1-inch Android 16 Tablet User Manual

Model: P30T

1. Product Overview

The TECLAST P30T is a 10.1-inch tablet designed for a smooth and efficient user experience. It features a 120Hz display, ample memory and storage, and runs on Android 16. This manual provides essential information for setting up, operating, and maintaining your device.



Image: TECLAST P30T tablet showcasing its key features including 10.1-inch display, Unisoc T7250 processor, Android 16, Gemini AI, and GMS certification.

Key Features:

- **Operating System:** Android 16 with 3GB physical RAM + 12GB virtual RAM for smooth multitasking.
- **Storage:** 128GB ROM, expandable up to 1TB via microSD card.
- **Display:** 10.1-inch IPS LCD with 120Hz refresh rate, 1280x800 resolution, and eye care modes.
- **Battery:** 6000mAh large capacity battery with power-saving mode.

- **Connectivity:** 2.4GHz/5GHz dual-band Wi-Fi and Bluetooth 5.4.
- **Security:** Face recognition unlock.
- **Multimedia:** Widevine L1 certification for HD streaming on Netflix, Amazon Prime Video, Disney+.
- **Design:** Lightweight 446g body, 8.8mm thin, space gray metal finish.

2. What's in the Box

Upon opening your TECLAST P30T package, please ensure all the following items are present:



Image: Diagram showing the tablet and its accessories, including charger, cable, and documentation.

1. TECLAST P30T Tablet
2. Power Adapter (may vary by region)
3. USB Type-C Data Cable
4. SIM Ejector Tool (for microSD card slot)
5. Maintenance Card
6. User Manual

3. Initial Setup

3.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet.



Image: The TECLAST P30T tablet connected to a Type-C charger, illustrating the charging process.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button on the side of the tablet until the TECLAST logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears on the screen. Select "Power Off" and confirm.
- **To Restart:** Press and hold the Power button until a menu appears. Select "Restart" and confirm.

3.3 Initial Configuration

Follow the on-screen prompts to complete the initial setup, which includes:

- Language selection
- Wi-Fi network connection
- Google account sign-in or creation
- Date and time settings
- Setting up screen lock (PIN, pattern, or face unlock)

4. Operating Your Tablet

4.1 Navigation and Interface

The P30T runs on Android 16, offering an intuitive user interface. Use touch gestures to navigate:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.



Image: The Android 16 operating system interface on the TECLAST P30T, highlighting features like private space and app pairing.

4.2 Display Settings

The 10.1-inch IPS display supports a 120Hz refresh rate for smoother visuals. You can adjust display settings in the Settings app:

- **Refresh Rate:** Switch between 60Hz (for battery saving) and 120Hz (for smoother gaming/scrolling).
- **Reading Mode:** Optimizes the screen for comfortable reading.
- **Eye Care Mode:** Reduces blue light to prevent eye strain.



Image: Visual comparison of 60Hz and 120Hz refresh rates on the TECLAST P30T display.

4.3 Connectivity

Your tablet supports various connectivity options:

- **Wi-Fi:** Connect to 2.4GHz or 5GHz networks for internet access.
- **Bluetooth 5.4:** Pair with wireless headphones, keyboards, and other accessories.
- **Wireless Mirroring:** Project your tablet screen to a larger display.

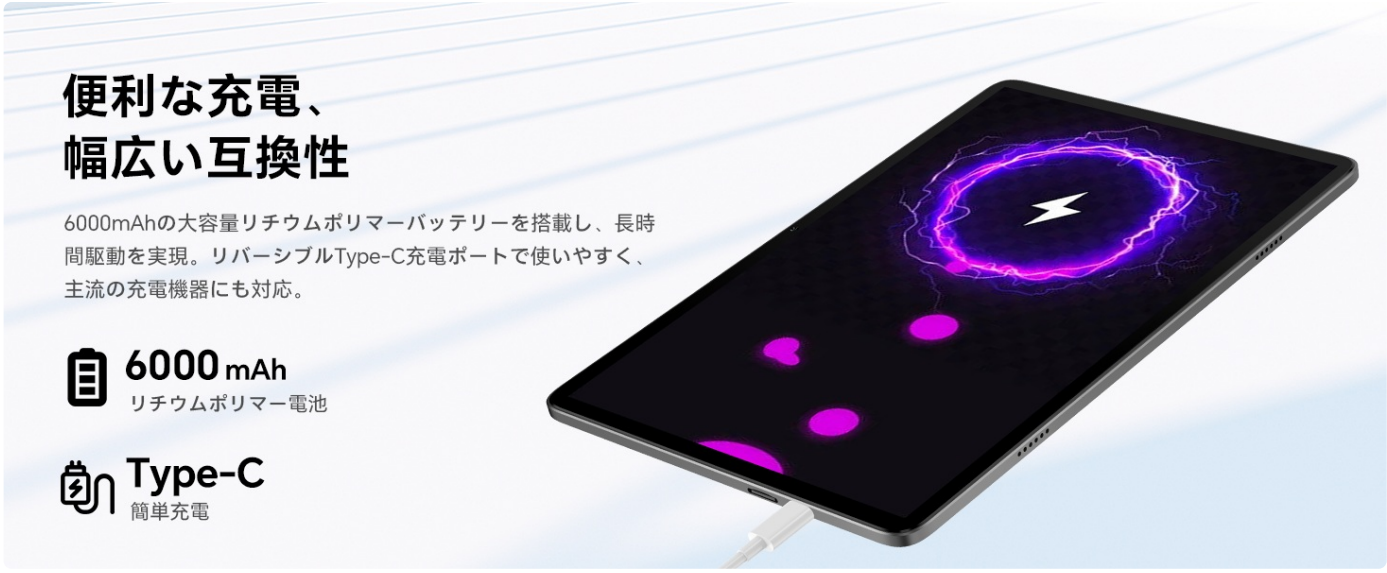


Image: The TECLAST P30T tablet demonstrating its stereo sound, digital amp chip, 2.4GHz+5GHz dual-band Wi-Fi, and Bluetooth 5.4 capabilities.

4.4 Camera and Face Unlock

The tablet features a 5MP rear camera and a 2MP front camera. For enhanced security, you can set up face recognition unlock:

1. Go to **Settings > Security > Face Unlock**
2. Follow the on-screen instructions to register your face.
3. Once set up, you can unlock your tablet by simply looking at the front camera.



Image: A user demonstrating face unlock on the TECLAST P30T tablet, alongside details of the 5MP rear and 2MP front cameras.

5. Maintenance

5.1 Battery Care

- Avoid extreme temperatures (hot or cold) as they can degrade battery life.
- Do not leave the tablet fully charged or completely drained for extended periods.
- Use the original charger and cable for optimal charging.

5.2 Cleaning

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.

5.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security:

1. Go to **Settings > System > System Update**.
2. Follow the on-screen instructions to download and install any available updates.

6. Troubleshooting

If you encounter issues with your TECLAST P30T, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the battery is charged. Connect to the charger for at least 30 minutes before attempting to power on again.
Screen is unresponsive	Restart the tablet. If the issue persists, perform a factory reset (data will be lost).
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Forget the network and reconnect. Ensure you are within range.
Apps are crashing or slow	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear Cache). Ensure sufficient storage space.
Battery drains quickly	Reduce screen brightness. Close unused apps. Turn off Wi-Fi/Bluetooth when not in use. Enable power-saving mode.

7. Specifications

Feature	Detail
Brand	TECLAST
Model Name	P30T
Operating System	Android 16
Processor	Unisoc T7250 Octa-core (2x A75, 6x A55)
GPU	Arm Mali G57 MP1
RAM	3GB (Physical) + 12GB (Virtual) = 15GB Total
Internal Storage	128GB ROM
Expandable Storage	microSD up to 1TB
Screen Size	10.1 inches
Display Type	IPS

Feature	Detail
Resolution	1280x800 pixels
Refresh Rate	Up to 120Hz
Aspect Ratio	16:10
Battery Capacity	6000mAh Lithium Ion
Rear Camera	5MP
Front Camera	2MP
Wi-Fi	2.4GHz/5GHz Dual-band (802.11ac/b/g/n)
Bluetooth	Bluetooth 5.4
Ports	USB Type-C, 3.5mm Headphone Jack
Dimensions	242.4 x 161.3 x 8.8 mm
Weight	446g

8. Warranty and Support

8.1 Product Warranty

The TECLAST P30T comes with a **1-year product warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.



Image: A visual representation of the tablet's display quality, emphasizing the product's quality and reliability.

8.2 Customer Support

For any questions or issues regarding your product, please contact TECLAST customer support. You can typically find contact information on the product page where you made your purchase, or by visiting the official TECLAST website.

Contact Method (if purchased via Amazon):

1. Go to your Amazon account > Orders > Select your order > Contact Seller.

2. Alternatively, on the product page, click on the store name "TECLAST Shop" below the "Add to Cart" button, then click the "Ask a Question" button.

Customer support aims to respond within 24 hours on weekdays (excluding weekends and manufacturer-specified holidays) and within 48-72 hours.

8.3 Parental Controls

The tablet includes Google's standard parental control features. You can set daily usage time limits for children and restrict access to specific websites, promoting a healthy device usage environment.

© 2026 TECLAST. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09FLBYL3R

More documents and user manuals: **https://manuals.plus/**