Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOOBRO BF341BZ01

HOOBRO BF341BZ01 End Table with Charging Station User Manual

Model: BF341BZ01

Introduction

This manual provides essential information for the assembly, operation, and maintenance of your HOOBRO BF341BZ01 End Table with Charging Station. Please read these instructions carefully before assembly and use to ensure safe and correct operation of the product.



Image: The HOOBRO BF341BZ01 End Table, showcasing its rustic brown finish, black metal frame, flip-top compartment, and two open shelves. A power cord extends from the back.

Safety Information

Caution: Electrical components can cause injury if not used properly. Keep away from children. Adjustable feet

and flip top design may pose pinch risks. Do not exceed maximum weight recommendation of 17 pounds.

- Ensure all electrical connections are secure and properly grounded.
- Do not expose the charging station to water or excessive moisture.
- Avoid placing excessively heavy items on the table or shelves. The maximum weight recommendation is 17 pounds.
- Keep small children away from the flip-top mechanism and electrical outlets to prevent injury.
- Periodically check all screws and connections to ensure the table remains stable.

Package Contents

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Side Table with Charging Station components (wood panels, metal frame parts)
- Accessory Kit (screws, bolts, nuts, etc.)
- Allen Key (for assembly)
- Instructions Manual (this document)

Assembly Instructions

Assembly of the HOOBRO BF341BZ01 End Table is designed to be straightforward. Follow the numbered steps and diagrams provided in the included instruction leaflet. An Allen key is provided for your convenience.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each component to the corresponding labels in the instruction leaflet.
3. **Assemble Frame:** Attach the metal frame pieces together using the provided screws and the Allen key. Do not overtighten screws initially.
4. **Attach Shelves:** Secure the wooden shelves to the assembled frame.
5. **Install Charging Station:** Mount the charging station unit into its designated slot within the flip-top compartment. Ensure the power cord is routed correctly.
6. **Attach Flip Top:** Secure the flip-top panel to the table structure using the hinges.
7. **Tighten All Screws:** Once all components are in place, gradually tighten all screws to ensure stability.
8. **Adjust Feet:** Use the adjustable feet at the bottom of the table legs to level the table on uneven surfaces and protect your floor.

Operating Instructions

Using the Charging Station

The integrated charging station provides convenient access to power for your electronic devices.



Image: A detailed view of the charging station, showing two standard AC outlets (120V/12A) and two USB ports (5V/2A), along with the 4.9-foot power cord.

1. **Connect to Power:** Plug the table's 4.9-foot power cord into a standard wall outlet.
2. **Access Ports:** Lift the flip-top panel to reveal the charging station.
3. **Charge Devices:** Plug your devices into the two AC outlets (120V/12A) or the two USB ports (5V/2A).
4. **Cable Management:** Utilize the side grooves to route charging cables neatly, preventing clutter on the tabletop.

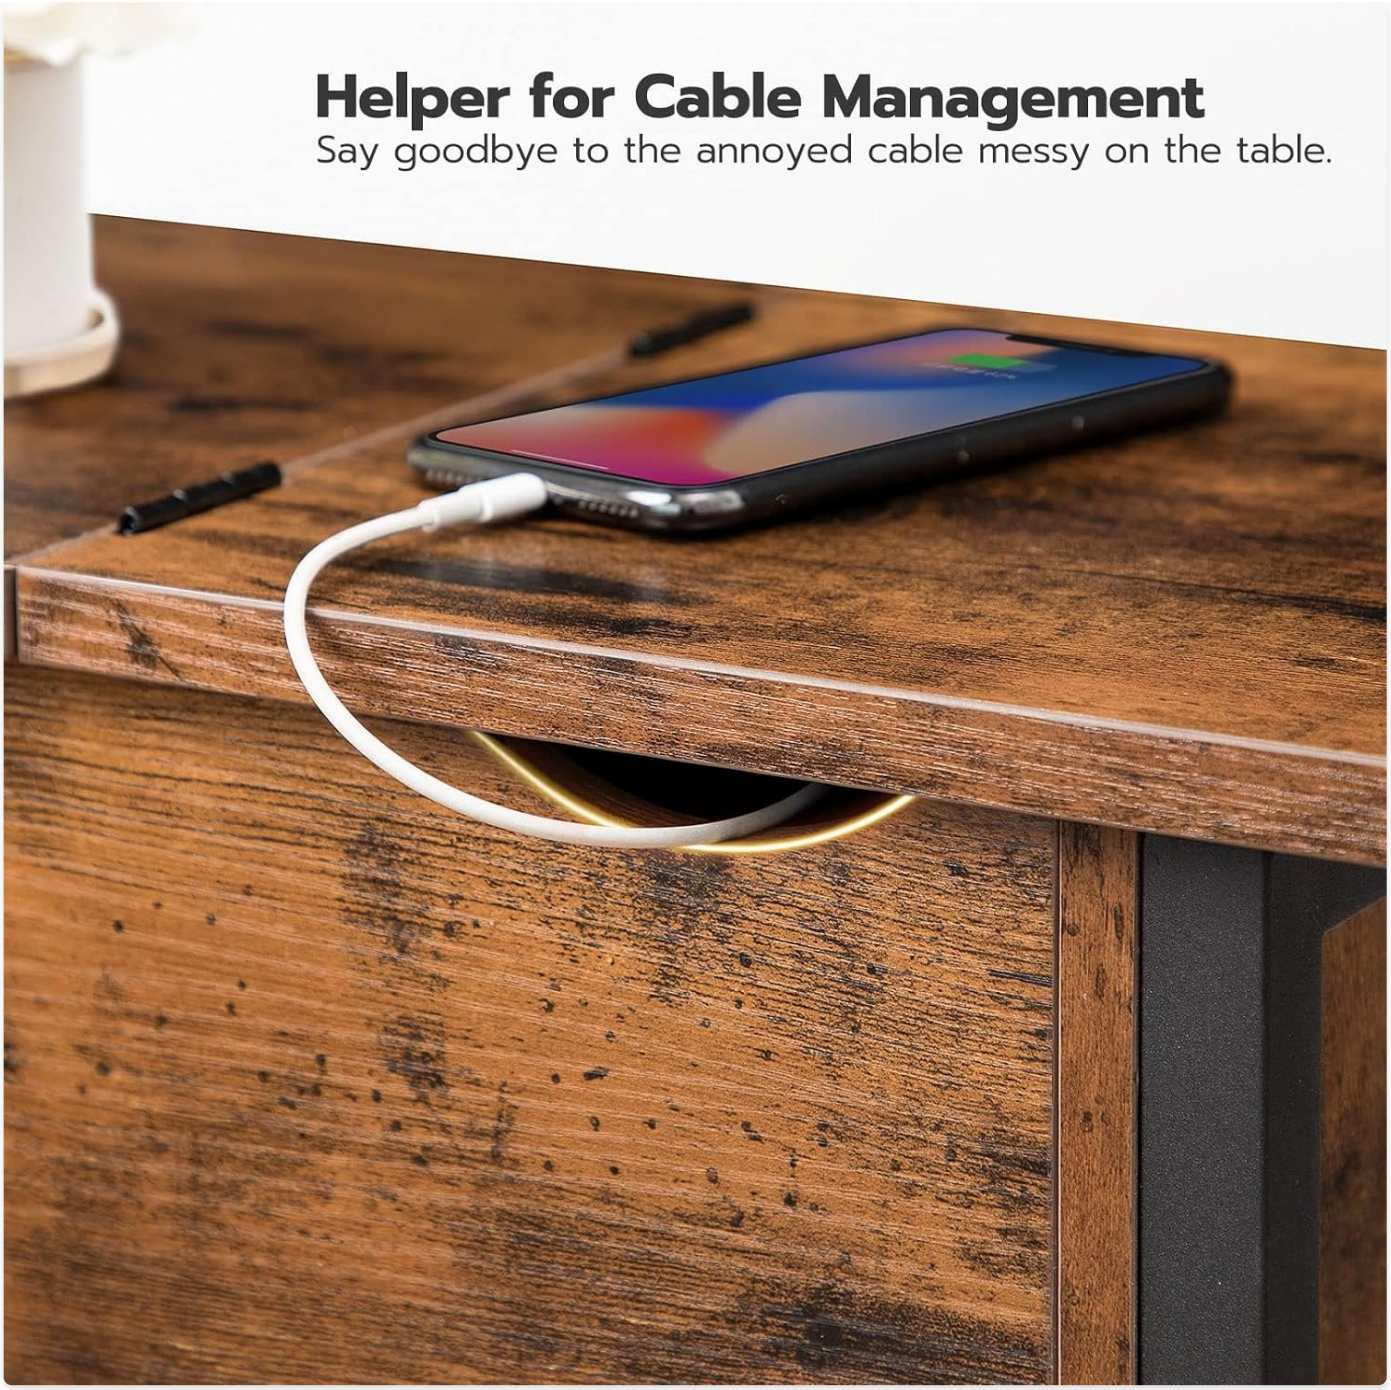


Image: A close-up of the integrated cable management groove, showing a charging cable passing through it to keep the tabletop tidy.

Storage and Display

The end table features a flip-top compartment for concealed storage and two open shelves for display or additional storage.

- **Flip-Top Compartment:** Use the clamshell top drawer for discreet storage of items like remote controls, small electronics, or personal belongings.
- **Open Shelves:** The lower two shelves provide space for books, decorative items, plants, or storage baskets.



Image: The HOOBRO end table positioned next to a sofa, demonstrating the flip-top compartment in use for charging a phone, with a basket and plant on the open shelves.

Care and Maintenance

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood.
- **Electrical Components:** Ensure the charging station remains dry. Do not attempt to clean the electrical outlets or USB ports with liquids.
- **Stability Check:** Periodically inspect all screws and connections. Tighten if necessary to maintain structural integrity.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or warping of the wood finish.

Troubleshooting

Charging Station Not Working

- **Check Power Connection:** Ensure the table's power cord is securely plugged into a functional wall outlet.
- **Verify Outlet:** Test the wall outlet with another device to confirm it is supplying power.
- **Device Compatibility:** Ensure your device and charging cable are compatible with the USB ports (5V/2A) or AC outlets (120V/12A).
- **Multiple Devices:** If charging multiple devices, note that charging speed may decrease. For optimal charging, connect one device at a time.

Table is Wobbly

- **Tighten Screws:** Re-check and tighten all assembly screws.
- **Adjust Feet:** Use the adjustable feet on the bottom of each leg to level the table on uneven floors. Rotate the feet clockwise or counter-clockwise until stability is achieved.
- **Weight Distribution:** Ensure items on the shelves are evenly distributed and do not exceed the maximum weight capacity of 17 pounds.

Specifications

Feature	Detail
Brand	HOOBRO
Model Number	BF341BZ01
Product Dimensions (D x W x H)	18.9" x 10.2" x 25.2" (48cm x 26cm x 64cm)
Maximum Weight Recommendation	17 Pounds (7.7 kg)
Color	Rustic Brown + Black
Material Type	Engineered Wood, Metal
Charging Station	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
Power Cord Length	4.9 Feet
Number of Shelves	3 (including flip-top compartment)
Style Name	Rustic



Image: A diagram illustrating the key dimensions of the HOOBRO end table, including its length (10.2"), width (18.9"), and height (25.2").

Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact HOOBRO directly through their official website or the retailer where the product was purchased. Please have your model number (BF341BZ01) and purchase details ready when contacting support.

© 2025 HOOBRO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find the PDF manual for the HOOBRO BF341BZ01 End Table with Charging Station?

You can find the online version of the HOOBRO BF341BZ01 End Table with Charging Station User Manual directly on this page. While a direct PDF download link may vary by retailer, the following assembly...

Read full answer

Open the live page

https://manuals.plus/asin/B09FP4STTG

More documents and user manuals: **https://manuals.plus/**