Candy Bila CB01P

Candy Bila Bluetooth Kids Headphones Model CB01P User Manual

Comprehensive instructions for setup, operation, and maintenance.

Introduction

Thank you for choosing the Candy Bila Bluetooth Kids Headphones Model CB01P. This manual provides detailed instructions to help you understand and operate your new headphones safely and effectively. Please read this manual thoroughly before use and retain it for future reference.



Image: Candy Bila Bluetooth Kids Headphones in pink, showcasing the overall design with soft earcups and a colorful LED ring on the earcup.

Safety Information

- **Volume Limit:** These headphones feature a 94 dB volume limit to protect hearing. Prolonged listening at high volumes, even within safe limits, is not recommended.
- **Choking Hazard:** Keep small parts away from young children.
- **Water Resistance:** The headphones are not water resistant. Avoid exposure to liquids.

- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals.
- **Temperature:** Avoid extreme temperatures.



Image: Illustration of a headphone earcup with a sound wave icon and "94dB < External Noise" indicating the volume limit feature.

Package Contents

Please check the package for the following items:

- Candy Bila Bluetooth Kids Headphones (Model CB01P)
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual

Product Overview

Familiarize yourself with the headphone's components and controls.



Image: Detailed view of the headphone earcup showing the HD Microphone, 94dB volume limit switch, 3.5mm audio jack for wired mode, TF card slot, and Bluetooth 5.0 indicator.

Controls and Ports:

- **Power Button:** Used to power on/off the headphones.
- **Volume Up/Next Track Button:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Short press for volume down, long press for previous track.
- **Multi-function Button (MFB):** Play/pause, answer/end calls.
- **LED Light Button:** Controls the colorful LED lights.
- **USB-C Charging Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection.
- **TF Card Slot:** For playing music directly from a TF card.
- **HD Microphone:** For hands-free calls.

Setup

1. Charging the Headphones

Before first use, fully charge the headphones. A full charge takes approximately 2 hours and provides up to 25 hours of playtime.

1. Connect the USB-C charging cable to the headphone's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, blue for fully charged).

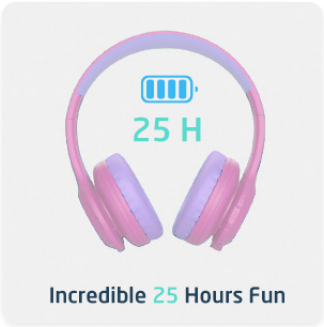


Image: Illustration of a headphone with a battery icon and "25 H" indicating 25 hours of battery life.

2. Bluetooth Pairing

Pair the headphones with your device for wireless audio.

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button for approximately 3 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "Candy Bila CB01P" (or similar name) from the list.
5. Once connected, the LED indicator will flash blue slowly.



Image: A child wearing the headphones while using a tablet, surrounded by icons representing compatible devices like Chromebook, iPad, iPhone, Kindle Fire, and PC, highlighting Bluetooth 5.0 connectivity.

3. Wired Mode

Use the included 3.5mm audio cable for a wired connection, which does not require battery power.

1. Plug one end of the 3.5mm audio cable into the headphone's 3.5mm audio jack.
2. Plug the other end into your audio device's 3.5mm audio output.
3. The headphones will automatically switch to wired mode.

4. TF Card Mode

Play music directly from a TF (MicroSD) card inserted into the headphones.

1. Insert a TF card with audio files (MP3, WAV, etc.) into the TF card slot on the headphones.
2. The headphones will automatically detect the card and begin playing music.
3. Use the volume/track buttons to control playback.

Operating Instructions

Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

Volume Control

- **Increase Volume:** Short press the Volume Up button.
- **Decrease Volume:** Short press the Volume Down button.

Music Playback

- **Play/Pause:** Short press the Multi-function Button (MFB).
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

Answering Calls

- **Answer/End Call:** Short press the Multi-function Button (MFB).
- **Reject Call:** Long press the Multi-function Button (MFB).

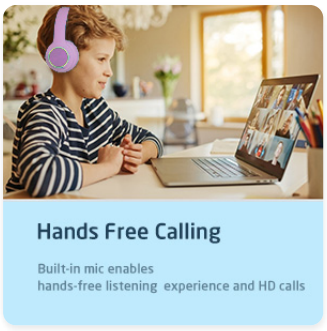


Image: A child wearing the headphones and looking at a laptop screen, with text "Hands Free Calling" and "Built-in mic enables hands-free listening experience and HD calls."

Controlling LED Lights

- Press the dedicated LED Light button to turn the colorful LED lights on or off.



Image: Close-up of a headphone earcup displaying vibrant, circular LED lights, with the text "Cool LED Lights" and "Lights can be turned off by separated button."

Maintenance

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge regularly.
- **Durability:** While designed for children, avoid excessive force or dropping the headphones to prevent damage.



Image: A child wearing the headphones, surrounded by icons representing key features: Safe Audio, Child-friendly Material, Comfort & Lightweight, and Soft Ear Cushion, emphasizing the design for children aged 3-21.

Troubleshooting

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source using the USB-C cable.
Cannot pair via Bluetooth.	• Ensure headphones are in pairing mode (flashing blue/red LED). • Make sure Bluetooth is enabled on your device. • Move headphones closer to the device (within 10 meters). • Forget the device from your Bluetooth list and try pairing again.

Problem	Possible Solution
No sound in wired mode.	• Ensure the 3.5mm audio cable is fully inserted into both the headphones and the audio source. • Check the volume level on both the headphones and the audio source. • Test with a different audio cable if available.
TF card music not playing.	• Ensure the TF card is inserted correctly. • Verify that the audio files on the TF card are in a compatible format (e.g., MP3). • Try a different TF card.
LED lights not working.	Press the dedicated LED Light button to activate them. Ensure headphones have sufficient battery.

Specifications

Feature	Detail
Model Number	CB01P
Connectivity Technology	Wireless (Bluetooth 5.0) / Wired (3.5mm)
Bluetooth Range	Up to 10 meters (33 feet)
Audio Driver Type	Balanced Armature Driver
Sensitivity	94 dB (Volume Limited)
Frequency Range	20Hz - 20,000Hz
Battery Life	Up to 25 Hours
Charging Time	Approximately 2 Hours (via USB-C)
Headphones Jack	USB-C (charging), 3.5mm (audio)
Special Features	Colorful LED Lights, Built-in Microphone, TF Card Slot, Foldable Design, Adjustable Headband, Noise Cancellation, Noise-Isolating
Compatible Devices	iPad, iPhone, iPod touch, Android Smartphones, tablets, PCs, etc.
Material	Composite
Product Dimensions	5.5 x 3.3 x 6.3 inches
Item Weight	10.5 ounces
UPC	741996275439, 734931645497

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Candy Bila website. Keep your purchase receipt as proof of purchase.

Manufacturer: Candy Bila

Brand Store: Visit the Candy Bila Store on Amazon

© 2024 Candy Bila. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question