Soundcore T0373011

Soundcore by Anker Frames Cafe Interchangeable Frame Audio Glasses

Model: T0373011

INTRODUCTION

This manual provides instructions for the Soundcore Frames Cafe Interchangeable Frame. This frame is an accessory designed to be used with Soundcore Frames audio temples, which are sold separately. It features blue light filtering lenses and quick-release hinges for easy customization of your Soundcore Frames.

WHAT'S IN THE BOX

- Cafe Interchangeable Frame
- Cleaning Cloth

PRODUCT OVERVIEW

Interchangeable Frames

INTERCHANGEABLE FRAMES

With quick release hinges for easy switching.

Note: Soundcore Frames audio temples need to be bought separately.

Image: Exploded view of Soundcore Frames showing the main frame and detachable audio temples with quick-release hinges.

The Cafe frame is designed with quick-release hinges, allowing for effortless switching between different frame styles. This enables you to adapt your Soundcore Frames to various environments and personal preferences.

Blue Light Filtering Lenses

BLUE LIGHT FILTER

Protect your eyes while looking at screens.

Image: Close-up of Soundcore Frames with clear blue light filtering lenses.

The lenses in the Cafe frame filter out 32% of blue light. This feature helps to reduce eye strain during extended periods of screen time, such as when using laptops, tablets, or smartphones.

Frame Dimensions
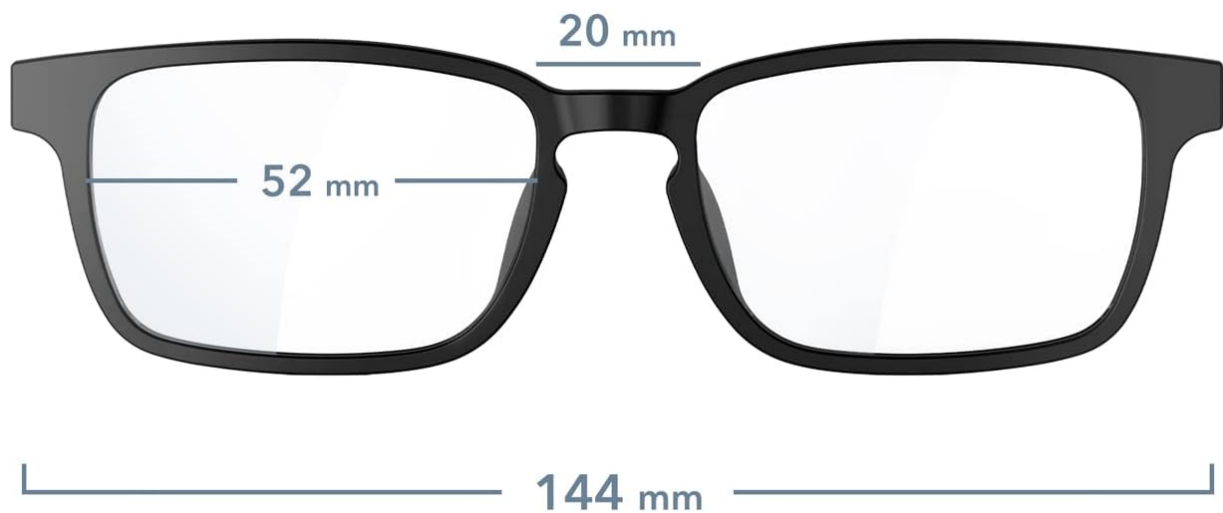

20 mm

52 mm

144 mm

Image: Diagram illustrating the frame width, lens width, and bridge width in millimeters.

The Cafe frame has a width of 144mm, a lens width of 52mm, and a bridge width of 20mm. These dimensions

contribute to a comfortable and secure fit for various users.

Note: The Cafe interchangeable frame must be used together with Soundcore Frames audio temples, which are sold separately.

SETUP: HOW TO CHANGE THE FRAMES

1. **Remove Current Frame:** Gently pull the audio temples out of the quick-release hinges of the current frame.
2. **Orient Audio Temples:** Ensure the Soundcore logo on the audio temples is facing outwards.
3. **Attach New Frame:** Push the audio temples securely into position on the hinges of the new Cafe frame until you hear a click.

Image: Step-by-step visual guide on detaching and reattaching audio temples to different frames.

Image: A person smiling while wearing the assembled Soundcore Frames with the Cafe style.

OPERATING THE LENSES

The blue light filtering lenses are designed to be worn indoors or in low-light conditions to protect your eyes from digital screens. The Cafe frame itself does not contain electronic components for audio or controls; these functions are integrated into the Soundcore Frames audio temples.

MAINTENANCE

To keep your lenses smudge- and smear-free, use the soft cleaning cloth provided in the box. Avoid using abrasive materials or harsh chemical cleaners, as these may damage the lens coating.

SPECIFICATIONS

Product Dimensions	5.67 x 1.57 x 0.71 inches
Item Model Number	T0373011
Item Weight	0.48 ounces

Manufacturer	Anker
Department	Unisex-adult

TROUBLESHOOTING

If you experience any issues with the functionality of your Soundcore Frames (e.g., audio, connectivity, controls), please refer to the instruction manual provided with your Soundcore Frames audio temples. The Cafe frame itself is a passive component and does not contain electronic parts.

WARRANTY & SUPPORT

This Soundcore Frames Cafe Interchangeable Frame is an accessory. Its warranty coverage is typically aligned with the warranty terms of the main Soundcore Frames audio temples. For specific warranty details and to register your product, please visit the official Soundcore website or refer to the warranty information included with your Soundcore Frames audio temples.

For customer support, you may contact Soundcore directly:

- Phone: +1 (800) 988-7973 (US) Mon-Fri 6:15-17:00 (PT)
- Email: service@soundcore.com
- Support Page: soundcore.com/support