Noma 326712

Noma Quick-Clip C9 LED Christmas Lights Instruction Manual

Brand: Noma | Model: 326712

Introduction

The Noma Quick-Clip C9 100-Bulb Warm White LED Christmas Lights are designed for effortless holiday decoration. Featuring innovative Quick-Clip technology, these 66.8-foot long string lights allow for fast and tool-free setup on various surfaces like rooflines, branches, and railings. The 180-degree rotating C9 bulbs ensure targeted festive lighting, creating a polished and professional outdoor display. Built for durability, the diamond-cut bulbs and weather-sealed sockets are designed to withstand harsh winter conditions, providing a lasting glow for up to 10,000 hours across many joyful holiday seasons. The green wiring seamlessly blends into natural surroundings for a clean and cohesive appearance.

Setup Instructions

Setting up your Noma Quick-Clip C9 LED Christmas Lights is designed to be simple and efficient, requiring no special tools or complicated assembly. The integrated spring-loaded clips make installation quick and secure.

Installation Steps:


1. **Unpack and Inspect:** Carefully remove the lights from their packaging. Uncoil the string and inspect all bulbs and clips for any visible damage.
2. **Plan Your Layout:** Before clipping, plan where you want your lights to go. The 66.8-foot length is ideal for rooflines, fences, or wrapping around trees.
3. **Attach with Quick-Clips:** The unique Quick-Clips are pre-attached to each bulb. Simply press the clip to open it and secure it onto your desired surface.
4. **Adjust Bulb Direction:** Each C9 bulb can rotate 180 degrees. Adjust the direction of each light to achieve your desired illumination angle.
5. **Connect Multiple Sets (Optional):** If you need more length, these lights are designed to connect multiple sets end-to-end. Ensure the total wattage does not exceed the maximum recommended load (refer to specifications).
6. **Secure Excess Wire:** Use zip ties or electrical tape to neatly secure any excess wiring to prevent tangling or tripping hazards.



Noma Quick-Clip C9 LED Christmas Lights installed on a snowy roofline, demonstrating the ease of attachment to gutters.



Close-up of a hand demonstrating the spring-loaded Quick-Clip mechanism for easy attachment to various surfaces.

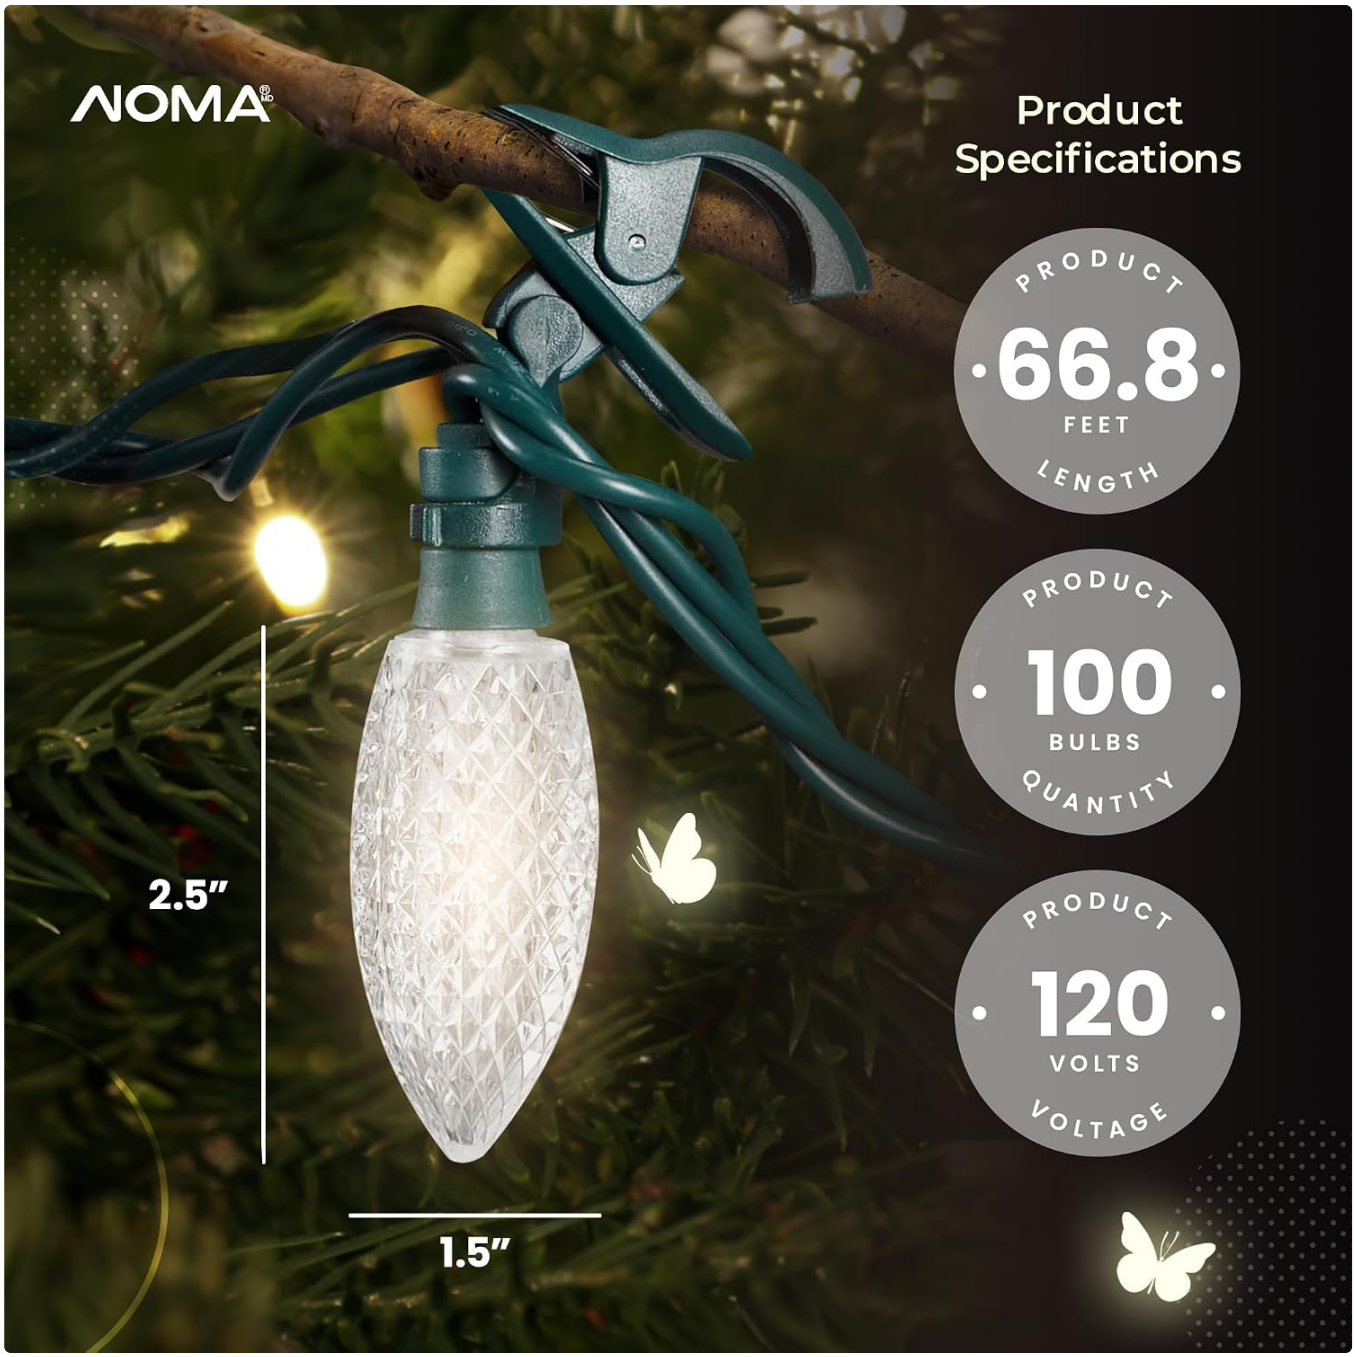

Noma Quick-Clip C9 LED Christmas Light clipped to a tree branch, showing versatility for outdoor decoration.

Setup Demonstration Videos:

Your browser does not support the video tag.

This video demonstrates the ease of clipping Noma Quick-Clip lights to various surfaces like gutters, siding, and rooflines, highlighting their simple installation process.

Your browser does not support the video tag.

An honest homeowner's review showcasing the Noma Quick-Clip lights up close, emphasizing their pre-assembled nature and easy, nail-free mounting on rooflines and gutters.

Operating Instructions

Once installed, operating your Noma Quick-Clip LED Christmas Lights is straightforward. Simply plug them into a standard electrical outlet to illuminate your space.

Usage:

- **Power On:** Connect the male plug of the light string to a compatible outdoor-rated electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI) for safety.
- **Enjoy the Glow:** The warm white LED lights will immediately illuminate, providing a cozy and festive atmosphere.
- **Power Off:** To turn off the lights, simply unplug them from the electrical outlet. For extended periods of non-use, it is recommended to unplug the lights.



Noma Quick-Clip C9 LED Christmas Lights illuminating a stair railing, showcasing their warm white glow.



Noma Quick-Clip C9 LED Christmas Lights brightly illuminating a house roofline at night, demonstrating their festive appearance.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your Noma Quick-Clip LED Christmas Lights. These lights are designed for durability, but a few simple steps can extend their lifespan.

Care and Storage:

- **Pre-Season Check:** Before each season, inspect the entire light string, including bulbs, wires, and clips, for any cuts, fraying, or damage. Replace any damaged sections or bulbs immediately.
- **Cleaning:** If necessary, gently wipe down the bulbs and wires with a damp cloth. Ensure the lights are unplugged before cleaning.
- **Weather Resistance:** The lights feature weather-sealed sockets designed to resist moisture, snow, and freezing

temperatures. However, avoid submerging the lights in water.

- **Off-Season Storage:** When the holiday season concludes, carefully remove the lights. To prevent tangling and damage, it is highly recommended to wrap the lights in segments around a storage reel or a piece of cardboard. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Clip Inspection:** Periodically check the spring-loaded clips for proper function. While durable, clips can break. Replacement clips may be available from the manufacturer or compatible third-party suppliers.

Troubleshooting

If you encounter any issues with your Noma Quick-Clip LED Christmas Lights, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet.	Check if the outlet is working by plugging in another device. Reset the GFCI outlet if tripped.
Lights do not turn on.	Loose connection or damaged plug.	Ensure the plug is fully inserted into the outlet. Inspect the plug and wire for damage. Do not use if damaged.
Some bulbs are not lit.	Individual bulb failure.	LED bulbs are generally long-lasting. If a bulb fails, it typically does not affect the rest of the string. Replace the faulty bulb if possible, or contact customer support.
Clips are broken or not holding securely.	Wear and tear or improper handling.	While durable, clips can break. Replacement clips may be available from the manufacturer or compatible third-party suppliers.
Lights flicker or dim.	Overloaded circuit or loose connection.	Ensure you are not connecting too many strings together, exceeding the maximum recommended load. Check all connections for tightness.

Specifications

Feature	Detail
Brand	Noma
Model Number	326712
Light Source Type	LED
Light Color	Warm White

Feature	Detail
Bulb Shape Size	C9
Number of Light Sources	100
Length	66.8 feet
Power Source	Corded Electric
Voltage	120 Volts
Wattage	2.4 watts
Indoor/Outdoor Usage	Outdoor, Indoor
Special Feature	Energy Efficient, Rotating Bulbs, Spring-Loaded Clips, Weather-Sealed Sockets
Water Resistance Level	Water Resistant
Included Components	2 sets of 100 bulb quick clip Christmas string lights

Warranty and Support

Noma Quick-Clip C9 LED Christmas Lights are built for durability and long-term performance, designed to shine brightly for up to 10,000 hours across many joyful holiday seasons.
For specific warranty information, product support, or to inquire about replacement parts, please refer to the product packaging or visit the official Noma website. You may also contact Noma customer service directly for assistance with any product-related questions or concerns.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question