ELISWEEN 72ed368d-9dff-42ae-ba96-5d07f9731cf6

ELISWEEN Presentation Remote with Air Mouse Function User Manual

Model: 72ed368d-9dff-42ae-ba96-5d07f9731cf6

INTRODUCTION

This manual provides detailed instructions for the ELISWEEN Presentation Remote with Air Mouse Function. This wireless presenter is designed to enhance your presentations by offering flexible control, including an air mouse, laser pointer, and intuitive slide navigation. It is compatible with various operating systems and presentation software.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x ELISWEEN Wireless Presenter Remote
- 1 x USB Receiver
- 1 x User Manual (this document)

PRODUCT FEATURES

- **Air Mouse Function:** Combines traditional clicker functions with wireless cursor control, acting like a true mouse for enhanced interaction.
- **Bright Red Laser Pointer:** Easily highlight key points on most backgrounds with a visible red laser.
- **Extended Control Range:** Wireless range up to 165 feet, air mouse function range up to 50 feet, and laser light range up to 328 feet.
- **Ergonomic Design:** Shaped to fit comfortably in hand with intuitive touch-keys for seamless control without needing to look at the device.
- **Full-Functionality:** Includes controls for volume, window switching, hyperlinks, video playback, full/black screen toggle, page up/down, and label/eraser functions.
- **Plug & Play:** No drivers required. Simply plug the USB dongle into a compatible port.
- **Wide Compatibility:** Supports Windows 2003/XP/Vista/7/8/10, Mac OS, Linux, Android. Compatible with software like PowerPoint, iWork (Keynote, Numbers, Pages), Prezi, MS Word, Excel, ACDSee, and web browsers. (Note: Not

compatible with Google Slides).

SETUP INSTRUCTIONS

1. **Insert Batteries:**

   Open the battery compartment on the back of the presenter. Insert two AAA batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.

2. **Connect USB Receiver:**

   Locate the USB receiver stored within the presenter's battery compartment or a dedicated slot. Plug the USB receiver into an available USB-A port on your computer or laptop.

The USB receiver is designed for easy storage within the presenter and connects directly to your computer's USB-A port for instant plug-and-play functionality.

3. **Power On:**

   Turn on the presenter using the power switch, usually located on the side or bottom. A blue indicator light may

illuminate to confirm it is powered on and connected.

4. **System Recognition:**

   Your computer should automatically detect and install the necessary drivers. This process typically takes a few seconds. No manual driver installation is required.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and functions of your ELISWEEN Presentation Remote:

Button Functions Overview

Presentation Remote with Air Mouse

Left / Right Clicker
Flexible control of your computer interface

Page Up/ Down
Simple & smooth control presentation

Label / Eraser function
Quickly highlight key points & facilitate removal

Full/ Black Screen
Freely switch your window srceen

Switch Windows
Make window switching easy

Play slideshowt
Turn on the video at will to adjust the control volume

This image illustrates the various control buttons on the presentation remote and their corresponding functions, including navigation, annotation, and screen control.

- **Page Up/Down:** Navigate through slides.

- **Left/Right Clicker:** Flexible control for computer interface interactions.

- **Label/Eraser:** Activate annotation mode to highlight points or erase markings.

- **Full/Black Screen:** Toggle between full screen presentation mode and a black screen.

- **Switch Windows:** Quickly switch between open applications.

- **Play Slideshow:** Start or pause video playback within your presentation.

- **Volume Control:** Adjust audio output.

- **Hyperlinks:** Activate embedded hyperlinks in your presentation.

Air Mouse Function

The presenter features an air mouse function, allowing you to control the cursor by moving the remote in the air. This provides greater flexibility during presentations.

The remote includes a dedicated switch to activate or deactivate the air mouse function. When the air mouse is off, the presenter will not control the mouse cursor, allowing you to use your computer's own mouse without interference.
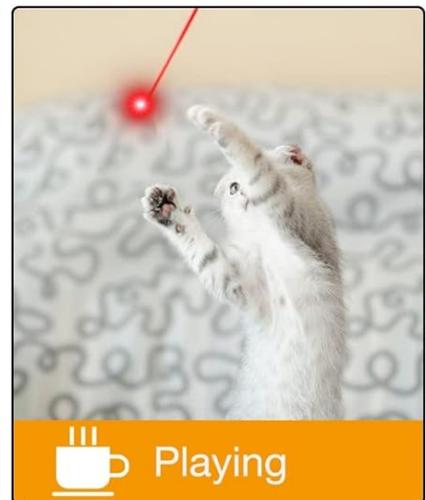
- **Activating Air Mouse:** Press the dedicated air mouse button or toggle the switch (refer to the device layout). The cursor will appear on your screen.
- **Controlling Cursor:** Move the presenter in the air to control the cursor's movement.
- **Deactivating Air Mouse:** Press the air mouse button or toggle the switch again to turn off the air mouse function. This allows you to use your computer's mouse without interference from the presenter.

Laser Pointer

Use the integrated red laser pointer to draw attention to specific areas on your presentation screen.

The bright red laser pointer is effective for highlighting content during presentations and meetings. Its visibility helps guide the audience's focus.

- **Activating Laser:** Press and hold the laser button (typically marked with a laser icon) to emit the red laser beam.
- **Deactivating Laser:** Release the button to turn off the laser.
- **Note:** The laser pointer is designed for traditional projection screens. Its visibility may be reduced or absent on LED/LCD screens.

This image highlights the effective operational ranges for the laser pointer, air mouse, and general wireless control, allowing for freedom of movement during presentations.

The ELISWEEN Presentation Remote offers significant freedom of movement:

- **Wireless Control Range:** Up to 165 feet (50 meters).
- **Air Mouse Function Range:** Up to 50 feet (15 meters).
- **Laser Light Range:** Up to 328 feet (100 meters).

Note that environmental factors and obstacles may affect the actual operating range.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Avoid using liquid cleaners or abrasive

materials.

- **Battery Replacement:** When the indicator light dims or the presenter becomes unresponsive, replace the two AAA batteries. Ensure correct polarity.
- **Storage:** Store the USB receiver inside the presenter when not in use to prevent loss. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device, as this may cause the battery cover to detach or damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Presenter is unresponsive.	Low batteries; USB receiver not connected; presenter not powered on.	Replace batteries; ensure USB receiver is securely plugged in; turn on the presenter.
Laser pointer does not work.	Laser button not pressed; low batteries; pointing at an LED/LCD screen.	Press and hold the laser button; replace batteries; note that the laser is less visible on LED/LCD screens.
Air mouse cursor lags or is difficult to control.	Interference; distance from receiver; rapid movements.	Reduce distance to USB receiver; ensure no major obstructions; use smoother, deliberate movements.
Presenter disconnects frequently.	Low batteries; USB receiver interference; out of range.	Replace batteries; try a different USB port; stay within the recommended wireless range.
Functions (e.g., page up/down) do not work in specific software.	Software incompatibility; software not in focus.	Ensure the software is supported (e.g., not Google Slides); click on the presentation window to ensure it is the active application.

SPECIFICATIONS

- **Model Number:** 72ed368d-9dff-42ae-ba96-5d07f9731cf6
- **Material:** ABS
- **Light Color:** Red (Laser)
- **Radio Frequency:** 2.4GHz
- **Wireless Control Range:** ≤ 165 ft (50 meters)
- **Air Mouse Function Range:** ≤ 50 ft (15 meters)
- **Laser Light Range:** ≤ 328 ft (100 meters)
- **Power Source:** 2 x AAA Battery (Not Included)
- **Dimensions:** 5.31 x 1.65 x 0.95 inches
- **Item Weight:** 1.76 ounces
- **Supported Operating Systems:** Win 2000, XP, Vista, Win7, Win8, Win10, MAC OS, Linux, Android
- **Compatible Devices:** Personal Computer (Laptop, Desktop)
- **Max Number of Supported Devices:** 10

WARRANTY AND SUPPORT

For warranty information and technical support, please contact ELISWEEN customer service. Details can typically be found on the product packaging or the official ELISWEEN website. Please retain your proof of purchase for warranty claims.

Manufacturer: SHENZHEN QIXUN SPACE TECHNOLOGY CO.,LTD