DEWENWILS HLFL04F

DEWENWILS Gold Arched Floor Lamp User Manual

Model: HLFL04F

Introduction

Thank you for choosing the DEWENWILS Gold Arched Floor Lamp. This manual provides detailed instructions for the safe and efficient assembly, operation, and maintenance of your new floor lamp. Please read this manual thoroughly before installation and retain it for future reference. This lamp features a minimalist design, an adjustable beige linen drum shade, and a convenient foot switch, making it suitable for various indoor settings.



Image: The DEWENWILS Gold Arched Floor Lamp, showcasing its elegant design and warm illumination in a modern living room.

Safety Instructions

To reduce the risk of fire, electric shock, or injury, please follow these safety guidelines:

- Ensure the power is OFF before assembly, disassembly, or replacing the bulb.

- Use only the specified bulb type and wattage. Refer to the 'Specifications' section for details.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact customer support.
- Do not expose the lamp to water or excessive moisture. This lamp is for indoor use only.
- Keep the lamp away from flammable materials.
- Ensure the lamp base is stable and placed on a flat, level surface to prevent tipping.
- Do not attempt to modify or repair the lamp yourself. Refer all servicing to qualified personnel.

Package Contents

Please verify that all components are present and undamaged upon opening the package. If any parts are missing or damaged, contact DEWENWILS customer support.

- Arched Lamp Pole Sections
- Lamp Base
- Linen Drum Lampshade
- Foot Switch (integrated with cord)
- Assembly Hardware (nuts, washers if applicable)
- User Manual

Assembly Instructions

Assembly of the DEWENWILS Gold Arched Floor Lamp is designed to be quick and straightforward. No special tools are required.

1. **Screw the lamp pole to the base:** Carefully attach the lowest section of the lamp pole to the weighted metal base by screwing it clockwise until secure.
2. **Tighten the lamp pole sections:** Connect the remaining lamp pole sections by screwing them together clockwise. Gently pull any excess wire from the bottom of the base as you assemble the pole.
3. **Install the lampshade frame:** If the lampshade is collapsible, assemble its frame according to the instructions provided with the shade.
4. **Remove the nut from the lamp holder:** Locate the lamp holder at the top of the arched pole. Unscrew the retaining ring or nut from the lamp holder.
5. **Place the lampshade on the pole and secure:** Carefully place the linen drum lampshade onto the lamp holder. Ensure it sits flush. Then, screw the retaining ring or nut back onto the lamp holder to secure the lampshade in place.
6. **Install the bulb:** Insert a compatible E26 medium base bulb (not included) into the lamp holder. Do not exceed the maximum wattage specified in the 'Specifications' section.

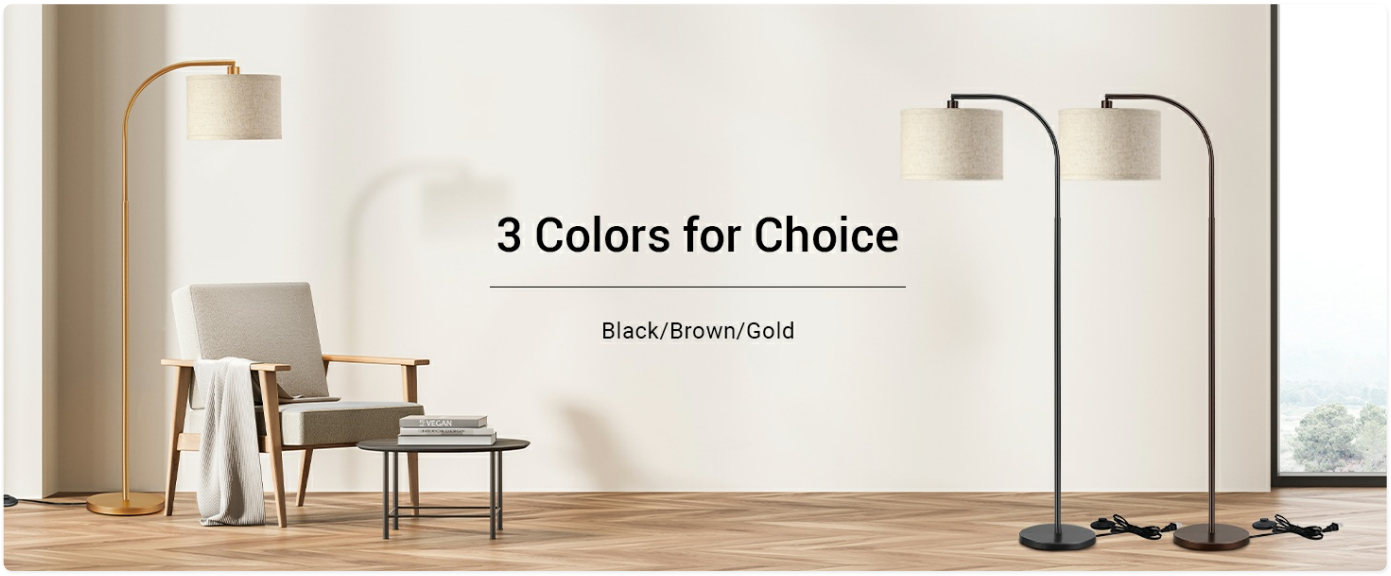


Image: Step-by-step visual guide for assembling the floor lamp, including attaching the base, connecting pole sections, and installing the lampshade and bulb.

Operating Instructions

The DEWENWILS Gold Arched Floor Lamp is designed for ease of use.

Turning the Lamp On/Off

Once assembled and plugged into a standard 120V AC outlet, the lamp can be operated using the integrated foot switch located on the power cord. Simply step on the switch to turn the lamp ON or OFF.



Image: A person's foot activating the convenient foot switch, demonstrating the ease of turning the lamp on and off without bending.

Adjusting the Lampshade

The lampshade features a rotatable joint, allowing you to adjust the direction of the light. Gently pivot the lampshade up to 180 degrees vertically to direct illumination where needed, such as for reading or ambient lighting.



Image: Visual representation of the lampshade's rotatable feature, highlighting its ability to pivot and direct light.

Maintenance

Proper maintenance will ensure the longevity and optimal performance of your floor lamp.

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe down the metal pole and base. For the linen lampshade, use a lint roller or a soft brush to remove dust. Do not use abrasive

cleaners or solvents.

- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it. Unscrew the old bulb counter-clockwise and screw in a new, compatible E26 medium base bulb clockwise. Refer to the 'Specifications' section for recommended bulb types and maximum wattage.



Image: A visual guide illustrating the lamp's dimensions and the types of E26 bulbs (LED, CFL, Incandescent) that are compatible with the fixture.

Troubleshooting

If you encounter any issues with your DEWENWILS Gold Arched Floor Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet. Bulb is loose or burnt out. Foot switch malfunction.	Check if the outlet is working by plugging in another device. Ensure the bulb is screwed in tightly. Replace the bulb if necessary. Ensure the foot switch is fully depressed.
Light flickers.	Loose bulb. Incompatible bulb type. Unstable power supply.	Tighten the bulb. Ensure the bulb is compatible (LED, CFL, incandescent, halogen). Try plugging the lamp into a different outlet.
Lampshade is wobbly.	Retaining ring is loose.	Tighten the retaining ring that secures the lampshade to the lamp holder.
Lamp is unstable.	Base not fully tightened. Uneven surface.	Ensure the lamp pole is securely screwed into the base. Place the lamp on a flat, stable surface.

If the problem persists after trying these solutions, please contact DEWENWILS customer support for further assistance.

Specifications

Below are the technical specifications for the DEWENWILS Gold Arched Floor Lamp (Model HLFL04F):

Feature	Specification
Model Number	HLFL04F
Dimensions (D x W x H)	4.33"D x 4.33"W x 24.96"H (packaged) / Approx. 11"D x 63.4"H (assembled)
Item Weight	13 Pounds
Material	Metal (Base, Pole), Linen (Shade)
Finish Type	Coated (Gold)
Bulb Base	E26 Medium
Max Wattage	60 Watts
Light Source Type	Compatible with LED, CFL, Incandescent, Halogen
Switch Type	Foot Switch
Power Source	Corded Electric
Voltage	120 Volts

Feature	Specification
Special Features	Adjustable Head, Arced Design, Corded, Foot Switch
Indoor/Outdoor Usage	Indoor

Warranty and Support

DEWENWILS products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official DEWENWILS website or contact their customer service directly. Please have your model number (HLFL04F) and purchase date available when contacting support.
DEWENWILS Official Store: Visit the DEWENWILS Store on Amazon

© 2023 DEWENWILS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question