IKEA 702.746.28

IKEA FIXA Worktop Support Fitting Instruction Manual

Model: 702.746.28

Product Overview

The IKEA FIXA Worktop Support Fitting, model 702.746.28, is a single, galvanised support designed to provide stability and reinforcement for worktops, particularly within IKEA kitchen systems. Its robust construction ensures durable support for various kitchen configurations.

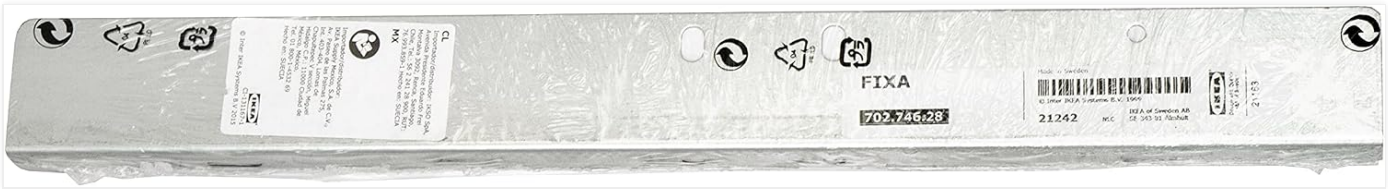


Image: The IKEA FIXA Worktop Support Fitting, showing its galvanized finish and packaging with model number 702.746.28 visible.

Setup and Installation

This product requires assembly and proper installation to ensure secure worktop support. Follow these general guidelines for setup:

1. **Preparation:** Ensure the worktop and cabinet structure are clean, dry, and free from obstructions. Identify the precise location where the support fitting will be installed.
2. **Positioning:** Place the FIXA support fitting in the desired position, typically underneath the worktop where additional reinforcement is needed, such as near appliance cutouts or seams.
3. **Marking:** Use a pencil to mark the drilling points through the pre-drilled holes on the fitting onto the cabinet or worktop underside.
4. **Drilling:** Carefully drill pilot holes at the marked points. Ensure the drill bit size is appropriate for the screws you will use and that you do not drill through the worktop surface.
5. **Securing:** Attach the FIXA support fitting using appropriate screws (not included) that are suitable for the material of your cabinets and worktop. Ensure the fitting is flush and securely fastened.
6. **Verification:** After installation, gently test the worktop for stability and ensure the support fitting is providing adequate

reinforcement.

Note: For specific installation instructions related to your IKEA kitchen system, refer to the assembly manual provided with your kitchen components or consult IKEA's official resources.

Intended Use

The IKEA FIXA Worktop Support Fitting is designed to reinforce and stabilize kitchen worktops, preventing sagging or movement over time. It is particularly useful in areas where the worktop might experience increased stress, such as around sinks, cooktops, or extended sections. This fitting helps distribute weight and maintain the structural integrity of your kitchen worktop installation.

Maintenance

To ensure the longevity and continued performance of your galvanised FIXA Worktop Support Fitting, consider the following maintenance tips:

- **Cleaning:** Wipe the fitting periodically with a damp cloth to remove dust and grime. Avoid abrasive cleaners or harsh chemicals that could damage the galvanised finish.
- **Inspection:** Routinely check the screws and mounting points to ensure they remain tight and secure. If any screws appear loose, tighten them carefully.
- **Corrosion Prevention:** While galvanised, prolonged exposure to moisture or corrosive substances can affect the finish. Ensure the area around the fitting remains dry.

Troubleshooting

If you encounter issues with your FIXA Worktop Support Fitting, consider these common troubleshooting steps:

- **Worktop Sagging/Movement:**
  - **Check Fasteners:** Ensure all screws securing the fitting are tight. Loose screws are a common cause of instability.
  - **Verify Placement:** Confirm the fitting is correctly positioned to support the most vulnerable areas of the worktop. Additional supports may be needed for very long or heavily loaded sections.
  - **Inspect Worktop:** Check the worktop itself for any damage or warping that might be contributing to the issue.
- **Corrosion/Rust Spots:**
  - **Clean:** Gently clean any surface rust with a mild abrasive pad (e.g., fine steel wool) and then wipe dry.
  - **Address Moisture:** Identify and eliminate sources of excessive moisture around the fitting to prevent further corrosion.

If problems persist, consider consulting a professional installer or contacting IKEA customer support for further assistance.

Specifications

Attribute	Detail
Product Name	IKEA FIXA Worktop Support Fitting
Model Number	702.746.28

Attribute	Detail
Brand	IKEA
Finish	Galvanised
Length	39 cm (15.35 inches)
Width	1.6 cm (0.63 inches)
Height	4 cm (1.57 inches)
Item Weight	2.2 pounds
Assembly Required	Yes
Batteries Required	No

Warranty and Support

For information regarding the warranty of your IKEA FIXA Worktop Support Fitting, please refer to the purchase documentation or contact IKEA directly. Warranty terms and conditions may vary by region and purchase date.
For product support, spare parts, or further assistance, please visit the official IKEA website or contact IKEA customer service in your country. You can often find detailed support information, FAQs, and contact details on their website:
IKEA Official Website: www.ikea.com

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question