Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Cuisinart

Cuisinart Air Fryer + Convection Toaster Oven

Model: TOA-70

Introduction

The Cuisinart Air Fryer + Convection Toaster Oven is a versatile 8-in-1 appliance designed to simplify your cooking experience. This premium 1800-watt unit combines the functions of an air fryer, convection oven, and toaster oven, allowing you to bake, grill, broil, toast, air fry, and warm a variety of foods. Its spacious interior and intuitive controls make it suitable for preparing meals for families or quick snacks.

Important Safety Information

Please read all instructions carefully before operating the appliance. Failure to follow these instructions may result in injury or damage. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface, ensuring adequate clearance (at least 6 inches) from walls and other appliances for proper ventilation.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot materials inside the oven.
- To protect against electrical shock, do not immerse the cord, plug, or main unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the manufacturer, as they may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

Product Overview and Components

Your Cuisinart Air Fryer + Convection Toaster Oven comes with several accessories to enhance your cooking versatility:

- **Oven Light:** Integrated for easy viewing of food during cooking.
- **Oven Rack:** Standard rack for baking and roasting.
- **Baking Pan/Drip Tray:** Used for baking or to catch drips during air frying or grilling.
- **Air Fry Basket:** Designed for optimal air circulation during air frying.
- **Reversible Grill/Griddle Plate:** A dual-sided plate for grilling or griddling.
- **Pull-out Crumb Tray:** Located at the bottom for easy cleaning of crumbs and small food particles.



Figure 1: Front view of the Cuisinart Air Fryer + Convection Toaster Oven, showcasing its controls and interior with the air fry basket and baking pan.



Figure 2: The various accessories included with the oven: Reversible Grill/Griddle Plate, Air Fryer Basket, Baking/Drip Pan, and Oven Rack.

Setup

1. **Unpacking:** Carefully remove all packaging materials, including any protective films or tapes. Ensure all accessories are accounted for.
2. **Placement:** Position the oven on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of clearance on all sides and above the unit for proper air circulation. Do not place it directly under cabinets.
3. **Initial Cleaning:** Before first use, wipe down the exterior with a damp cloth. Wash all removable accessories (oven rack, baking pan, air fry basket, grill/griddle plate, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
4. **First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes on the "Bake" function at 400°F (200°C) to burn off any manufacturing residues. Some smoke or odor may be present; this is normal. Ensure the area is well-ventilated.

5. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

Operating Instructions

The Cuisinart Air Fryer + Convection Toaster Oven features intuitive dial controls for temperature, function, and timer.



Figure 3: A close-up view of the function dial, showing options like Warm, Broil, Toast, Bake, Air Fry, and Grill.

Control Dials:

- **ON/OVEN TIMER Dial:** Used to set cooking time (up to 60 minutes) or to turn the oven ON for continuous operation. Features an auto-shutoff.
- **TEMPERATURE °F Dial:** Adjusts the cooking temperature from Warm to 450°F.
- **FUNCTION Dial:** Selects the desired cooking mode: Air Fry, Convection Bake, Bake, Convection Broil, Broil, Grill, Warm, or Toast.
- **ON/TOAST TIMER Dial:** Used specifically for toasting, allowing selection of toast shade.

Cooking Functions:

To operate, place food in the appropriate accessory (e.g., air fry basket for air frying, baking pan for baking) and insert into the oven. Close the oven door.

1. **Air Fry:**
    - Place food in the Air Fry Basket, typically placed on top of the Baking Pan/Drip Tray to catch oil.
    - Turn the FUNCTION dial to "Air Fry".
    - Set the TEMPERATURE dial to the desired temperature (e.g., 400°F for chicken wings).
    - Set the ON/OVEN TIMER dial to the recommended cooking time. The oven will begin heating.
    - The oven will automatically shut off when the timer expires.



Figure 4: The oven in operation, air frying french fries to a crispy texture.

2. **Bake / Convection Bake:**
    - Place food on the Oven Rack or in the Baking Pan.
    - Turn the FUNCTION dial to "Bake" or "Convection Bake" (for faster, more even cooking).
    - Set the TEMPERATURE dial to the desired baking temperature.

- Set the ON/OVEN TIMER dial for the required baking time.

3. **Broil / Convection Broil:**
    - Place food on the Oven Rack or in the Baking Pan. Broiling typically uses the top heating elements.
    - Turn the FUNCTION dial to "Broil" or "Convection Broil".
    - Set the TEMPERATURE dial to the desired broiling temperature.
    - Set the ON/OVEN TIMER dial for the required broiling time. Monitor food closely to prevent burning.
4. **Grill:**
    - Place the Reversible Grill/Griddle Plate inside the oven.
    - Turn the FUNCTION dial to "Grill".
    - Set the TEMPERATURE dial to the desired grilling temperature.
    - Set the ON/OVEN TIMER dial for the required grilling time.
5. **Toast:**
    - Place bread or other items directly on the Oven Rack.
    - Turn the FUNCTION dial to "Toast".
    - Use the ON/TOAST TIMER dial to select the desired toast shade (light to dark). The oven will automatically shut off when toasting is complete.
6. **Warm:**
    - Place food on the Oven Rack or in the Baking Pan.
    - Turn the FUNCTION dial to "Warm".
    - Set the ON/OVEN TIMER dial for the desired warming duration.



Figure 5: The Cuisinart oven in a kitchen environment, demonstrating its use for preparing various dishes like chicken wings and french fries.

Maintenance and Cleaning

Regular cleaning will help maintain the performance and appearance of your Cuisinart Air Fryer + Convection Toaster Oven.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the electrical outlet and allow it to cool completely.
2. **Crumb Tray:** The pull-out crumb tray should be emptied and cleaned regularly, ideally after each use, to prevent grease buildup and potential fire hazards. Wash with warm, soapy water, rinse, and dry thoroughly.
3. **Accessories:** The oven rack, baking pan, air fry basket, and grill/griddle plate should be washed with warm, soapy water after each use. Rinse well and dry completely. While some accessories may be dishwasher safe, hand washing is recommended to prolong their lifespan. The main unit is NOT dishwasher safe.

4. **Interior:** The interior of the oven has a nonstick, easy-clean surface. Wipe down the interior walls, top, and bottom with a damp cloth and mild detergent. For stubborn food residue, use a non-abrasive sponge or cloth. Avoid using metal scouring pads or harsh abrasive cleaners, as they can damage the nonstick coating.
5. **Exterior:** Wipe the exterior of the oven with a clean, damp cloth. Dry thoroughly. Do not use abrasive cleaners or polishes that could scratch the stainless steel finish.
6. **Heating Elements:** Do not attempt to clean the heating elements. Any food that comes into contact with them will burn off naturally.

Troubleshooting

If you encounter any issues with your Cuisinart Air Fryer + Convection Toaster Oven, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the unit is securely plugged into a working outlet. Check if the timer dial is set to the desired cooking time or "ON".
Food is not cooking evenly.	Overcrowding the basket/pan; incorrect temperature/time; food not flipped/shaken.	Do not overcrowd the air fry basket or baking pan. Ensure proper temperature and time settings. For air frying, shake or flip food halfway through cooking.
Excessive smoke during cooking.	Grease buildup; high-fat food; crumb tray not cleaned.	Clean the crumb tray and interior regularly. For high-fat foods, use the baking pan below the air fry basket to catch drips. Reduce temperature if smoke persists.
Toast is too light or too dark.	Toast shade selector set incorrectly.	Adjust the ON/TOAST TIMER dial to a lighter or darker setting as needed for future use.

For further assistance, please refer to the full user manual available online or contact Cuisinart customer support.

Specifications

- **Model Name:** Airfryer Convection Toaster Oven (TOA-70NAS)
- **Product Dimensions (DxWxH):** 12.25" x 15.75" x 13.75"
- **Color:** Stainless Steel
- **Capacity:** 0.6 Cubic Feet
- **Material:** Stainless Steel (Outer and Inner)
- **Output Wattage:** 1800 Watts
- **Item Weight:** 23.1 Pounds
- **Voltage:** 120 Volts
- **Control Method:** Dial selector
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Cable Length:** 24 Inches

- **Has Nonstick Coating:** Yes (Interior)
- **Is Dishwasher Safe:** No (Main unit)
- **Country of Origin:** China

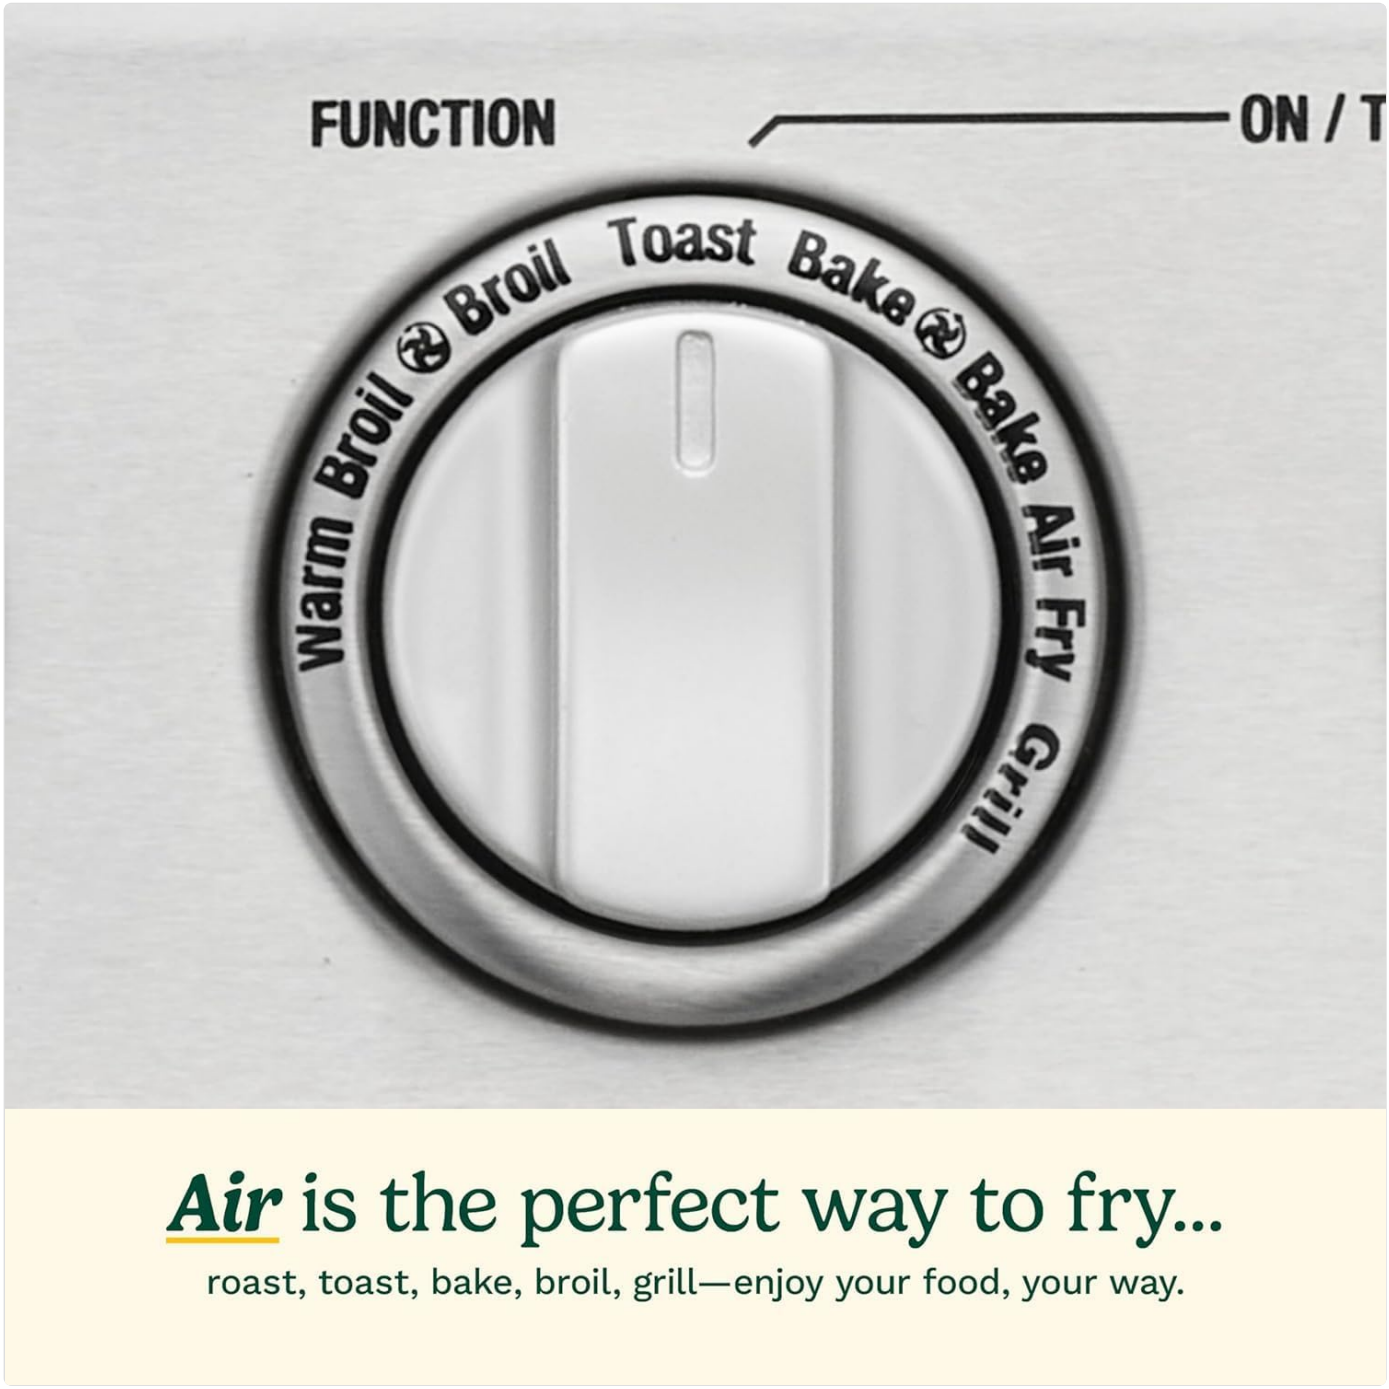


Figure 6: Diagram showing the dimensions of the Cuisinart Air Fryer Toaster Oven: 13.75 inches high, 15.75 inches wide, and 12.25 inches deep.

Warranty and Support

Your Cuisinart Air Fryer + Convection Toaster Oven is covered by a **Limited 3-Year Warranty**. This warranty covers defects in materials and workmanship under normal household use from the date of original purchase.
For detailed warranty information, including terms, conditions, and how to make a claim, please refer to the complete user manual provided with your product or visit the official Cuisinart website.
Customer Support: For any questions, troubleshooting assistance, or warranty inquiries, please contact Cuisinart Customer Service. Contact information can typically be found in the full user manual or on the Cuisinart official website.

© 2025 Cuisinart. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09HSWBTN4

More documents and user manuals: **https://manuals.plus/**