Nine West NW/2670RGGY

Nine West Women's Strap Watch Instruction Manual

Model: NW/2670RGGY

Introduction

Thank you for choosing a Nine West Women's Strap Watch. This manual provides essential information for the proper setup, operation, and care of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.



Image: Front view of the Nine West Women's Strap Watch in Grey/Rose Gold. The watch features a square case with a grey dial and rose gold-tone hands and hour markers, complemented by a grey synthetic leather strap.

Setup

Setting the Time

1. **Locate the Crown:** The crown is the small knob located on the right side of the watch case.
2. **Pull Out the Crown:** Gently pull the crown outwards to the time-setting position. You may feel a slight click.

3. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
4. **Push In the Crown:** Once the time is set, push the crown back into its original position. This will start the watch movement.



Image: Side view of the Nine West watch on a display stand, highlighting the crown used for time adjustment.

Operating Your Watch

Your Nine West watch features a reliable Japanese quartz movement with an analog display, showing hours, minutes, and seconds. It is powered by a single D-cell battery, which is included and pre-installed.

Reading the Time

The watch displays time using three hands: a short hand for hours, a long hand for minutes, and a thin sweeping hand for seconds. The dial features clear hour markers for easy readability.

Care and Maintenance

Water Resistance

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes or brief immersion in water, such as washing hands or light rain. It is **not** suitable for showering, bathing, swimming, snorkeling, or any water sports.
Important: Do not operate the crown while the watch is wet, as this can compromise its water resistance.

Cleaning Your Watch

- **Case and Crystal:** Wipe the watch case and mineral glass crystal with a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying.
- **Strap:** The synthetic leather strap can be cleaned with a slightly damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the strap. Allow the strap to air dry completely before wearing.

Battery Replacement

The watch is powered by a D-cell battery. When the watch stops or the second hand begins to skip, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure the watch's integrity and water resistance are maintained.

Troubleshooting

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low or dead battery	Replace the battery (recommended by a professional).
Time is incorrect	Crown is not fully pushed in; time needs adjustment	Ensure the crown is fully pushed in. Reset the time as described in the 'Setup' section.
Condensation under crystal	Exposure to extreme temperature changes or water ingress	Seek professional service immediately to prevent damage.

Specifications

- **Model Number:** NW/2670RGGY
- **Brand:** Nine West
- **Movement:** Japanese Quartz
- **Display Type:** Analog
- **Case Material:** Alloy Steel
- **Case Diameter:** 31 mm

- **Case Thickness:** 8 mm
- **Crystal Material:** Mineral Glass (Scratch Resistant)
- **Strap Material:** Synthetic Leather
- **Strap Color:** Grey
- **Strap Width:** 15.5 mm
- **Strap Length:** Approximately 27 cm
- **Clasp Type:** Buckle
- **Water Resistance:** 30 Meters (3 ATM)
- **Battery:** 1 D (included)
- **Product Dimensions:** 7.6 x 3.8 x 1.3 cm
- **Product Weight:** 100 g



Image: Diagram illustrating different watch case sizes, providing a visual reference for watch dimensions.

Warranty Information

Your Nine West watch comes with a limited warranty. Please refer to the warranty card included in your packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for any warranty claims.



Image: A closed white Nine West branded watch box, indicating the product packaging.

NINE WEST

WATCH CASE SIZES

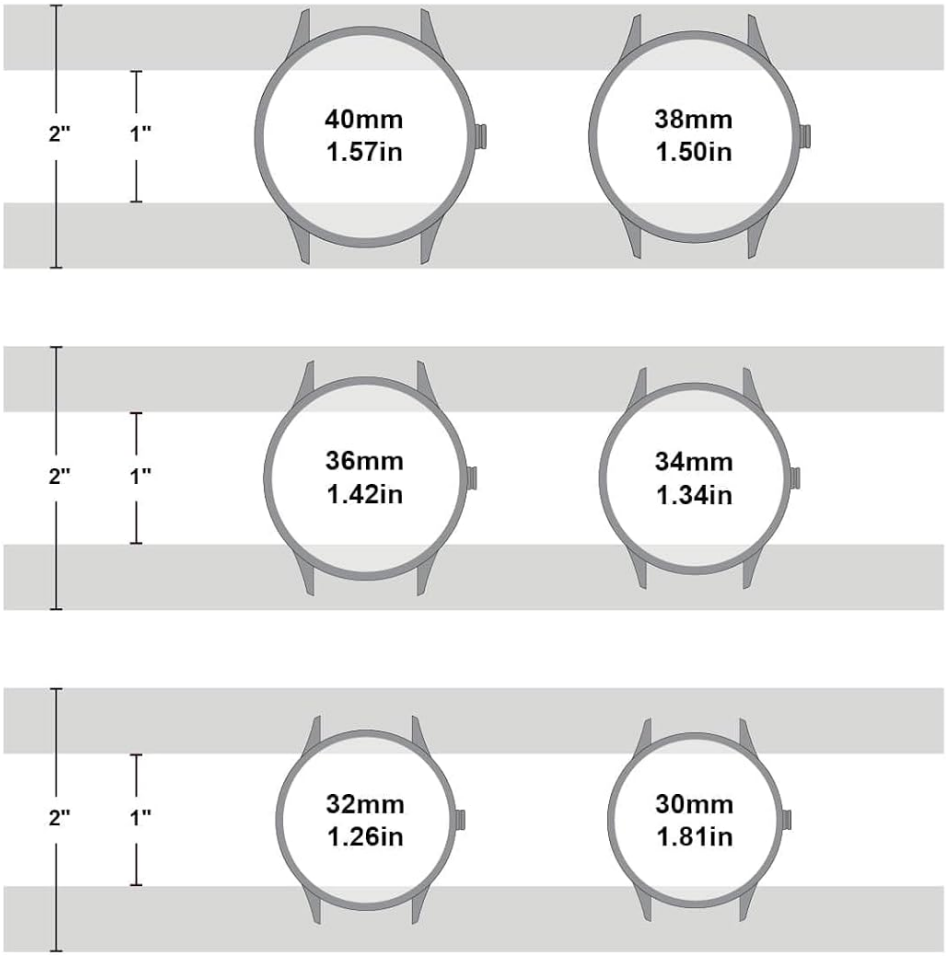


Image: An open white Nine West branded watch box, revealing an interior cushion designed to hold the watch securely.

Customer Support

For further assistance, service, or inquiries regarding your Nine West watch, please contact the retailer where you purchased the product or refer to the contact information provided in your warranty documentation. You may also visit the official Nine West website for support resources.

© 2023 Nine West. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question