Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AUNA Graceland XXL BT

AUNA Graceland XXL BT Jukebox Instruction Manual

Model: **Graceland XXL BT** | Brand: **AUNA**

Introduction

The AUNA Graceland XXL BT Jukebox is a vintage-style music system designed to bring a classic 1950s diner ambiance to any room while offering modern audio playback capabilities. This manual provides detailed instructions for the safe and efficient operation of your jukebox, covering setup, features, and troubleshooting.

Safety Instructions

- Read all instructions carefully before operating the device.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

Package Contents

Please check that all items are present and in good condition:

- AUNA Graceland XXL BT Jukebox
- Remote Control
- Power Cable
- Instruction Manual

Product Features

- Authentic 1950s Jukebox Design with LED lighting and chrome accents.
- Integrated Bluetooth interface for wireless audio streaming.
- MP3-compatible CD player.
- USB port and SD card slot for digital music playback.
- AM/FM radio tuner with analog frequency scale and manual tuning.
- 3.5mm AUX input for connecting external audio devices.
- Stereo RCA line output for connecting to additional speakers or amplifiers.
- Two-band equalizer for sound adjustment.
- LED lighting with static or color-changing modes.
- Remote control for convenient operation.

Controls and Connections

Familiarize yourself with the various controls and connection points on your jukebox.

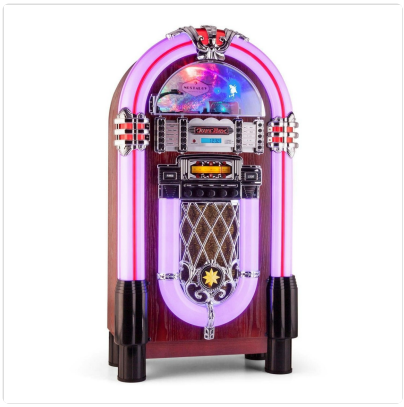


Figure 1: Front panel of the Jukebox showing main display, controls, and speaker grille. The LED lighting is illuminated in green.



Figure 2: The remote control with buttons for Mode, Play/Pause, Stop, Fast Forward, Next, F+10, Fast Back, Back, F-10, Program, Random, and Repeat functions.



Figure 3: Rear panel with RCA Line Out (R and L) and an On/Off switch for the line output.

Setup

1. **Unpacking:** Carefully remove the jukebox from its packaging. Retain all packaging materials for future transport or storage.
2. **Placement:** Place the jukebox on a stable, flat surface. Ensure adequate space for ventilation around the unit. The four feet with rubber pads protect your floor from damage.
3. **Power Connection:** Connect the power cable to the AC inlet on the back of the jukebox and then to a suitable wall outlet.
4. **Initial Power On:** Press the 'POWER' button on the front panel or the remote control to turn on the unit. The LED lighting will illuminate.

Operating Instructions

1. Bluetooth Pairing

1. Press the 'MODE' button on the front panel or remote control until 'BT' (Bluetooth) mode is selected on the display.
2. On your Bluetooth-enabled device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select 'AUNA Graceland XXL BT' from the list of devices.
4. Once paired, you can stream audio wirelessly from your device to the jukebox.

2. CD Playback

1. Gently open the hinged cover of the CD player.
2. Insert an audio CD or MP3 CD with the label side facing up.
3. Close the CD cover.
4. Press the 'MODE' button until 'CD' mode is selected.
5. The CD will begin playing automatically. Use 'PLAY/PAUSE', 'STOP', 'NEXT', 'BACK', 'F.F' (Fast Forward), and 'F.B' (Fast Back) buttons for control.

3. USB/SD Playback

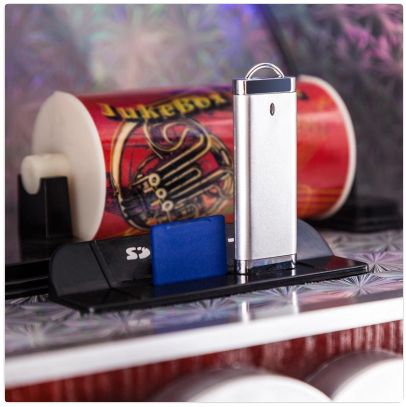


Figure 4: USB port and SD card slot for digital media playback.

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Press the 'MODE' button until 'USB' or 'SD' mode is selected.
3. The unit will automatically detect and play MP3 files from the inserted media.
4. Use the playback control buttons ('PLAY/PAUSE', 'STOP', 'NEXT', 'BACK', etc.) to manage your music.

4. AUX Input

1. Connect an external audio device (e.g., MP3 player, CD player, computer) to the 3.5mm AUX input jack using a suitable audio cable (not included).
2. Press the 'MODE' button until 'AUX' mode is selected.
3. Control playback directly from your external audio device.

5. FM Radio

1. Press the 'MODE' button until 'FM' mode is selected.
2. Use the tuning knob or 'NEXT' / 'BACK' buttons to manually tune to your desired radio station. The analog frequency

scale will indicate the current frequency.

3. The unit can store up to 20 FM stations. Refer to the full manual for programming instructions.

6. LED Lighting

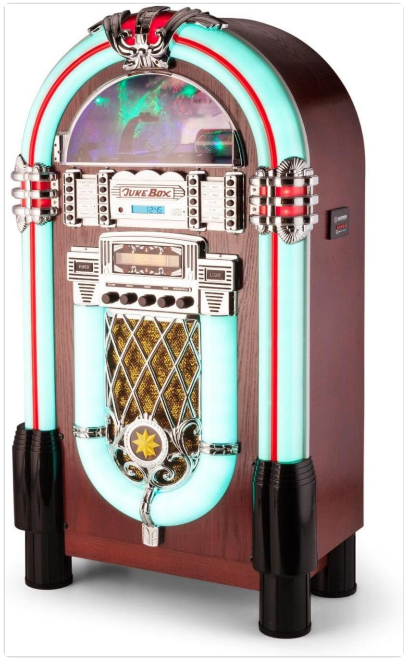


Figure 5: Jukebox illuminated with purple LED lighting.

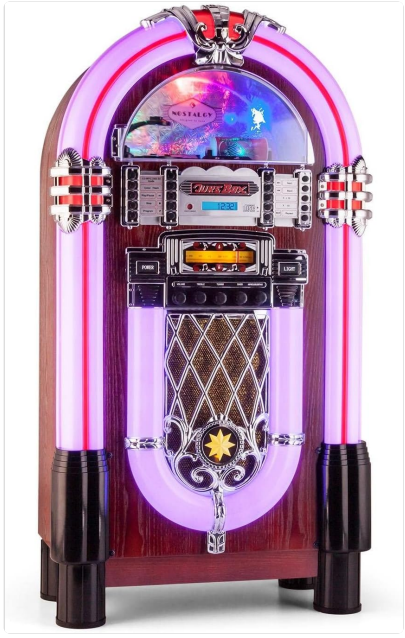


Figure 6: Jukebox illuminated with green LED lighting.

The jukebox features authentic LED lighting. Press the 'LIGHT' button on the front panel or remote control to cycle through lighting modes: static glow, color-changing, or off.

7. Remote Control Operation

The included remote control allows for convenient operation of all major functions from a distance. Point the remote control directly at the front panel of the jukebox for optimal response.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the jukebox. Do not use abrasive cleaners or solvents.
- **CD Player:** Keep the CD compartment clean and free of dust. Avoid touching the lens.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and cover it to protect from dust.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected; Test outlet with another device
No sound	Volume too low; Incorrect mode selected; External device not connected properly	Increase volume; Select correct input mode (CD, BT, AUX, FM); Check external device connections
Bluetooth not pairing	Jukebox not in BT mode; Device too far; Bluetooth disabled on external device	Switch jukebox to BT mode; Move device closer; Enable Bluetooth on your device
CD not playing	CD inserted incorrectly; CD scratched/dirty; Jukebox not in CD mode	Reinsert CD correctly; Clean or replace CD; Switch jukebox to CD mode

Specifications

- **Brand Name:** AUNA
- **Model:** Graceland XXL BT
- **Connectivity Technology:** USB, Bluetooth, Auxiliary
- **Color:** Purple (Note: LED lighting colors are variable)
- **Speaker Type:** Stereo
- **Power Source:** Corded Electric
- **Compatible Devices:** Laptop, Smartphone, Tablet
- **Style:** Retro
- **Supported Standards:** CD, MP3
- **Bluetooth Support:** Yes
- **Supported Audio Format:** CD, MP3
- **Audio Output Mode:** Stereo
- **Manufacturer:** AUNA
- **ASIN:** B09J8NZKM5

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09J8NZKM5

More documents and user manuals: **https://manuals.plus/**