Nokia TA-1391

Nokia C30 User Manual


Model: TA-1391

1. Product Overview

The Nokia C30 is a robust and reliable smartphone designed for everyday use. Featuring a large 6.82-inch HD+ display, a powerful 6000 mAh battery for extended usage, and running on Android 11, it offers a seamless user experience. Its durable Scandinavian design ensures longevity, while its camera capabilities allow for capturing and sharing moments with ease.



Figure 1: Front view of the Nokia C30 smartphone, highlighting its large display and sleek design.

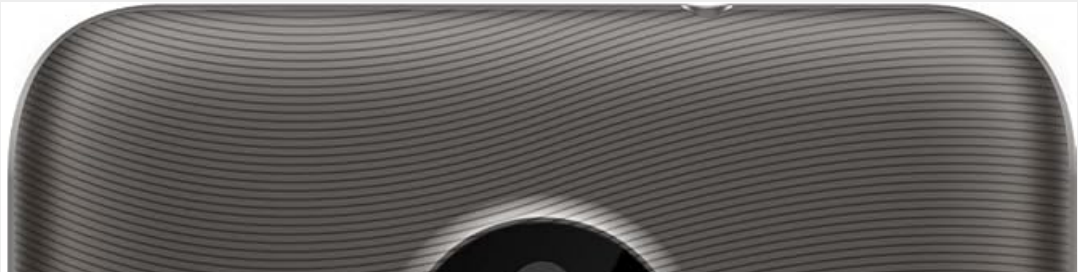


NOKIA



Figure 2: Rear view of the Nokia C30, showcasing the camera module and fingerprint sensor placement.

2. Getting Started: Setup

2.1 What's in the Box

- Nokia C30 Smartphone
- Adapter
- Quick Start Guide (not included in this manual)

2.2 Inserting SIM Card and Memory Card

Before you start using your phone, you need to insert a SIM card. You can also insert a memory card to expand storage.

1. Locate the SIM/memory card tray on the side of the phone.
2. Insert the SIM ejector tool (or a paper clip) into the small hole next to the tray to open it.
3. Carefully pull out the tray.
4. Place the nano-SIM card(s) into the SIM slot(s) with the gold contacts facing down.
5. If using a memory card, place it into the dedicated memory card slot.
6. Gently push the tray back into its slot until it clicks into place.

2.3 Charging the Battery

Your Nokia C30 comes with a powerful 6000 mAh battery. It is recommended to fully charge the battery before first use.

1. Connect the adapter to a power outlet.
2. Connect the other end of the adapter cable to the USB-C port on your phone.
3. The battery indicator on the screen will show the charging status.
4. Once fully charged, disconnect the charger.

Note: Only use chargers and cables approved by Nokia. Unapproved chargers may damage the device and void the warranty.

3. Operating Your Nokia C30

3.1 Power On/Off

- **To Power On:** Press and hold the Power button until the phone vibrates and the Nokia logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen, then tap "Power off".

3.2 Basic Navigation

The Nokia C30 uses Android 11, offering intuitive navigation through gestures and on-screen buttons.

- **Home Screen:** Swipe up from the bottom of the screen to access the app drawer.
- **Back:** Tap the back arrow icon or swipe from the left/right edge of the screen (if gesture navigation is enabled).
- **Recent Apps:** Swipe up from the bottom of the screen and hold to see recently opened applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles.

3.3 Making Calls and Sending Messages

- **Calls:** Open the **Phone** app, enter the number, and tap the call icon.
- **Messages:** Open the **Messages** app, tap "Start chat", enter the recipient, and type your message.

3.4 Camera Usage

Capture photos and videos with your Nokia C30's camera.

1. Open the **Camera** app.
2. Frame your shot.
3. Tap the shutter button to take a photo or the record button to start/stop video recording.
4. Switch between front and rear cameras using the camera switch icon.

4. Maintenance and Care

Proper care ensures the longevity of your Nokia C30.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Battery Care:** Avoid extreme temperatures. Do not let the battery fully discharge frequently.
- **Software Updates:** Keep your phone's software updated to ensure optimal performance and security. Go to **Settings > System > System update**
- **Storage:** Regularly clear unnecessary files and apps to maintain sufficient storage space.
- **Protection:** Consider using a protective case and screen protector to guard against physical damage.

5. Troubleshooting

Problem	Possible Solution
Phone does not turn on	Ensure the battery is charged. Connect to a charger for at least 30 minutes. If still unresponsive, perform a force restart by holding the Power button for 10-15 seconds.
Apps are crashing or freezing	Close and reopen the app. Clear the app's cache (**Settings > Apps & notifications > App info > [App Name] > Storage & cache > Clear cache**). Update the app or the phone's software.
Poor battery life	Reduce screen brightness, disable unnecessary background apps, turn off Wi-Fi/Bluetooth when not in use, and check for power-intensive apps in battery usage settings.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on your phone. Restart your Wi-Fi router. Forget the network and reconnect.

6. Technical Specifications

Feature	Specification
Model Number	TA-1391
Operating System	Android 11.0
Display	6.82 inches HD+ LCD, LED (720 x 1440 resolution)

Feature	Specification
RAM	2 GB
Internal Storage	64 GB (expandable via memory card)
Battery Capacity	6000 mAh Lithium Ion
Rear Camera	(Information not explicitly provided in specs, but description mentions "quality camera with a flash on both sides")
Front Camera	(Information not explicitly provided in specs, but "Other camera features: Front" is listed)
Connectivity	4G LTE, Wi-Fi, Bluetooth (not explicitly listed but standard), GPS (AGPS)
Audio Jack	3.5 mm
Dimensions (L x W x H)	7 x 3.11 x 0.39 inches
Weight	1.08 pounds
Color	Dark Grey

7. Warranty and Support

7.1 Warranty Information

Nokia provides a limited manufacturer's warranty for this product. Please refer to the warranty card included with your purchase or visit the official Nokia website for detailed terms and conditions, including warranty period and coverage. *Note: The warranty may not cover damage caused by misuse, accidents, unauthorized modifications, or use of non-original accessories.*

7.2 Customer Support

For further assistance, technical support, or service inquiries, please contact Nokia customer support through one of the following channels:

- **Online Support:** Visit the official Nokia support website for FAQs, troubleshooting guides, and contact options. www.nokia.com/phones/support
- **Phone Support:** Refer to the Nokia support website for regional contact numbers.

When contacting support, please have your product model number (TA-1391) and proof of purchase ready.

© 2021 Nokia. All rights reserved. Nokia and the Nokia logo are trademarks of Nokia Corporation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question