Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UGREEN MU003

UGREEN Wireless Mouse MU003 User Manual

Model: MU003 (90371)

1. Introduction

Thank you for choosing the UGREEN Wireless Mouse MU003. This manual provides essential information for setting up, operating, and maintaining your new wireless mouse. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

2. Package Contents

Please check the package contents upon opening. If any items are missing or damaged, please contact UGREEN customer support.

- 1 x UGREEN Wireless Mouse MU003
- 1 x USB 2.4G Receiver
- 1 x User Manual



Image: UGREEN Wireless Mouse MU003 retail packaging, showing the mouse and its box.

3. Product Overview

Familiarize yourself with the components of your UGREEN Wireless Mouse MU003.



Image: Top view of the UGREEN Wireless Mouse MU003, highlighting its ergonomic design and button layout.

1. **Left Click Button:** Standard mouse button.
2. **Right Click Button:** Standard mouse button.
3. **Scroll Wheel:** For vertical scrolling and middle-click function.
4. **DPI Switch Button:** Located on the bottom of the mouse, used to cycle through DPI settings.
5. **USB Receiver Storage Slot:** Located inside the battery compartment.
6. **Battery Compartment:** Holds one AA battery.

4. Setup

4.1. Battery Installation

The UGREEN Wireless Mouse MU003 requires one AA battery (not included).

1. Open the battery compartment cover located on the bottom of the mouse.
2. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

4.2. Connecting the USB Receiver

The mouse connects wirelessly via a 2.4G USB receiver.

1. Locate the USB 2.4G receiver, typically stored inside the battery compartment of the mouse.
2. Plug the USB receiver into an available USB-A port on your computer (desktop, laptop, etc.).
3. The computer should automatically detect and install the necessary drivers. This process may take a few moments.
4. Once the drivers are installed, the mouse is ready for use.

5. Operating Instructions

5.1. Basic Usage

Simply move the mouse on a flat surface to control the cursor on your screen. Use the left and right click buttons for standard interactions, and the scroll wheel for navigation.

5.2. DPI Adjustment

The UGREEN Wireless Mouse MU003 features adjustable DPI (Dots Per Inch) settings, allowing you to change the cursor sensitivity to suit your preference or task. The default DPI is 1200.

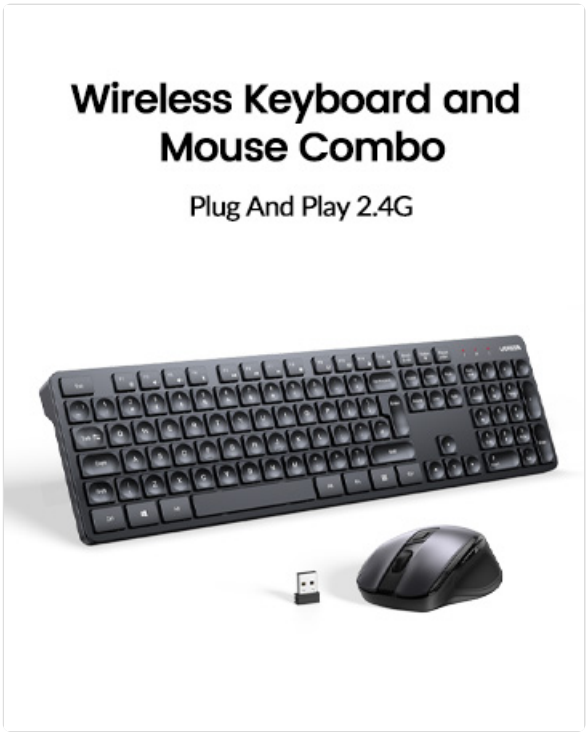


Image: Illustration showing the DPI button on the bottom of the mouse and its effect on cursor responsiveness.

To change the DPI setting, press the DPI switch button located on the bottom of the mouse. Each press will cycle through the available DPI levels:

- 800 DPI
- 1200 DPI (Default)
- 1600 DPI
- 2400 DPI

The red LED indicator will briefly flash to confirm the DPI change.

6. Maintenance

To ensure the longevity and optimal performance of your mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, remove the battery to prevent leakage. Store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.
- **Surface:** Use the mouse on a clean, flat, and non-reflective surface for best tracking performance.

7. Troubleshooting

If you encounter issues with your UGREEN Wireless Mouse MU003, please refer to the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Mouse not responding	Low or dead battery USB receiver not connected Driver issue	Replace the AA battery Ensure USB receiver is firmly plugged into a working USB port Try a different USB port; restart your computer
Erratic cursor movement	Dirty sensor Unsuitable surface Interference	Clean the optical sensor on the bottom of the mouse Use on a clean, opaque, and flat surface Move the mouse closer to the USB receiver; remove other wireless devices causing interference
DPI not changing	DPI button not pressed correctly	Ensure you are pressing the dedicated DPI switch button firmly on the bottom of the mouse.
Short wireless range	Obstructions or interference	Ensure a clear line of sight between the mouse and the USB receiver; avoid placing the receiver near large metal objects or other wireless devices.

If the problem persists after trying these solutions, please contact UGREEN customer support for further assistance.

8. Specifications

Detailed technical specifications for the UGREEN Wireless Mouse MU003.



Image: Diagram illustrating the product parameters and dimensions of the UGREEN Wireless Mouse MU003.

- **Brand:** UGREEN
- **Model:** MU003 (90371)
- **Product Type:** Silent Wireless Mouse
- **Click Button Lifespan:** 3 million times
- **Scroll Wheel Lifespan:** 300,000 times
- **DPI Levels:** 800 / 1200 (Default) / 1600 / 2400

- **USB Receiver:** 2.4G 250Hz
- **Wireless Distance:** Up to 15 meters (49 feet)
- **Battery Type:** 1 x AA battery (not included)
- **Connection:** 2.4G Wireless
- **LED Indicator:** Red LED
- **Compatible Systems:** Windows 10/8/7, Mac OS, Chrome OS, Linux, and others
- **Number of Buttons:** 3
- **Approximate Weight:** 500 Grams (including packaging)

9. Warranty and Support

UGREEN products come with a standard warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official UGREEN website. If you require technical support or have any questions, please contact UGREEN customer service through their official channels or the retailer where you purchased the product. For more information, visit the UGREEN Official Store.

© 2025 UGREEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09JNWPQFR

More documents and user manuals: **https://manuals.plus/**