Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nokia T20 (TA-1392)

Nokia T20 Tablet User Manual

Model: T20 (TA-1392)

Introduction

This user manual provides comprehensive instructions for the Nokia T20 tablet. Designed for versatility and durability, the Nokia T20 offers a crystal-clear 2K screen, enhanced audio, and long-lasting battery life, making it suitable for both productivity and entertainment. With 2 years of OS upgrades and 3 years of monthly security updates, this tablet is built to provide a reliable experience for years to come.

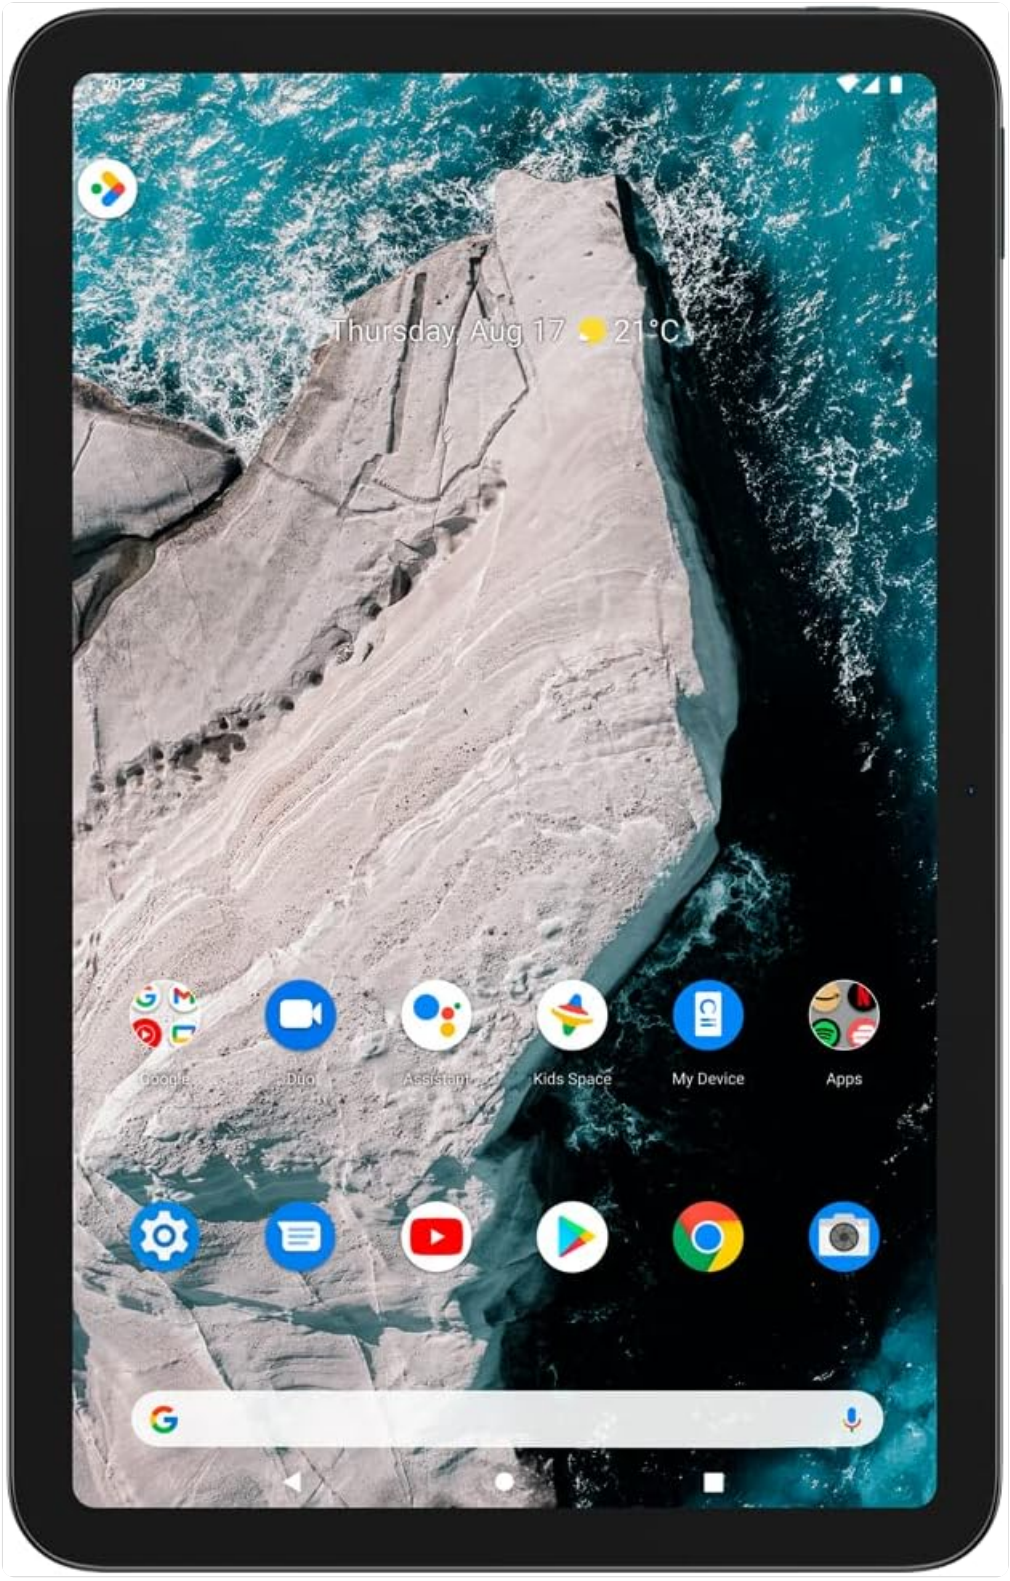


Image: Front view of the Nokia T20 tablet displaying its home screen.

What's in the Box

Upon opening your Nokia T20 package, you should find the following items:

- Nokia T20 Tablet
- Charger
- Charging Cable



Image: The Nokia T20 tablet alongside its charger and USB-C cable, indicating the contents of the retail box.

Setup

1. Initial Charge

Before first use, fully charge your Nokia T20 tablet using the provided charger and charging cable. Connect the charging cable to the tablet's USB Type-C port and the charger to a power outlet. The battery indicator on the screen will show charging progress.

2. Power On/Off

To power on, press and hold the power button located on the top edge of the tablet until the Nokia logo appears. To power off, press and hold the power button, then select "Power off" from the options displayed on the screen.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings.

4. Inserting a MicroSD Card (Optional)

The Nokia T20 supports MicroSD card expansion up to 512 GB. Locate the SIM/MicroSD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Place the MicroSD card into the designated slot and gently push the tray back into the tablet until it clicks into place.

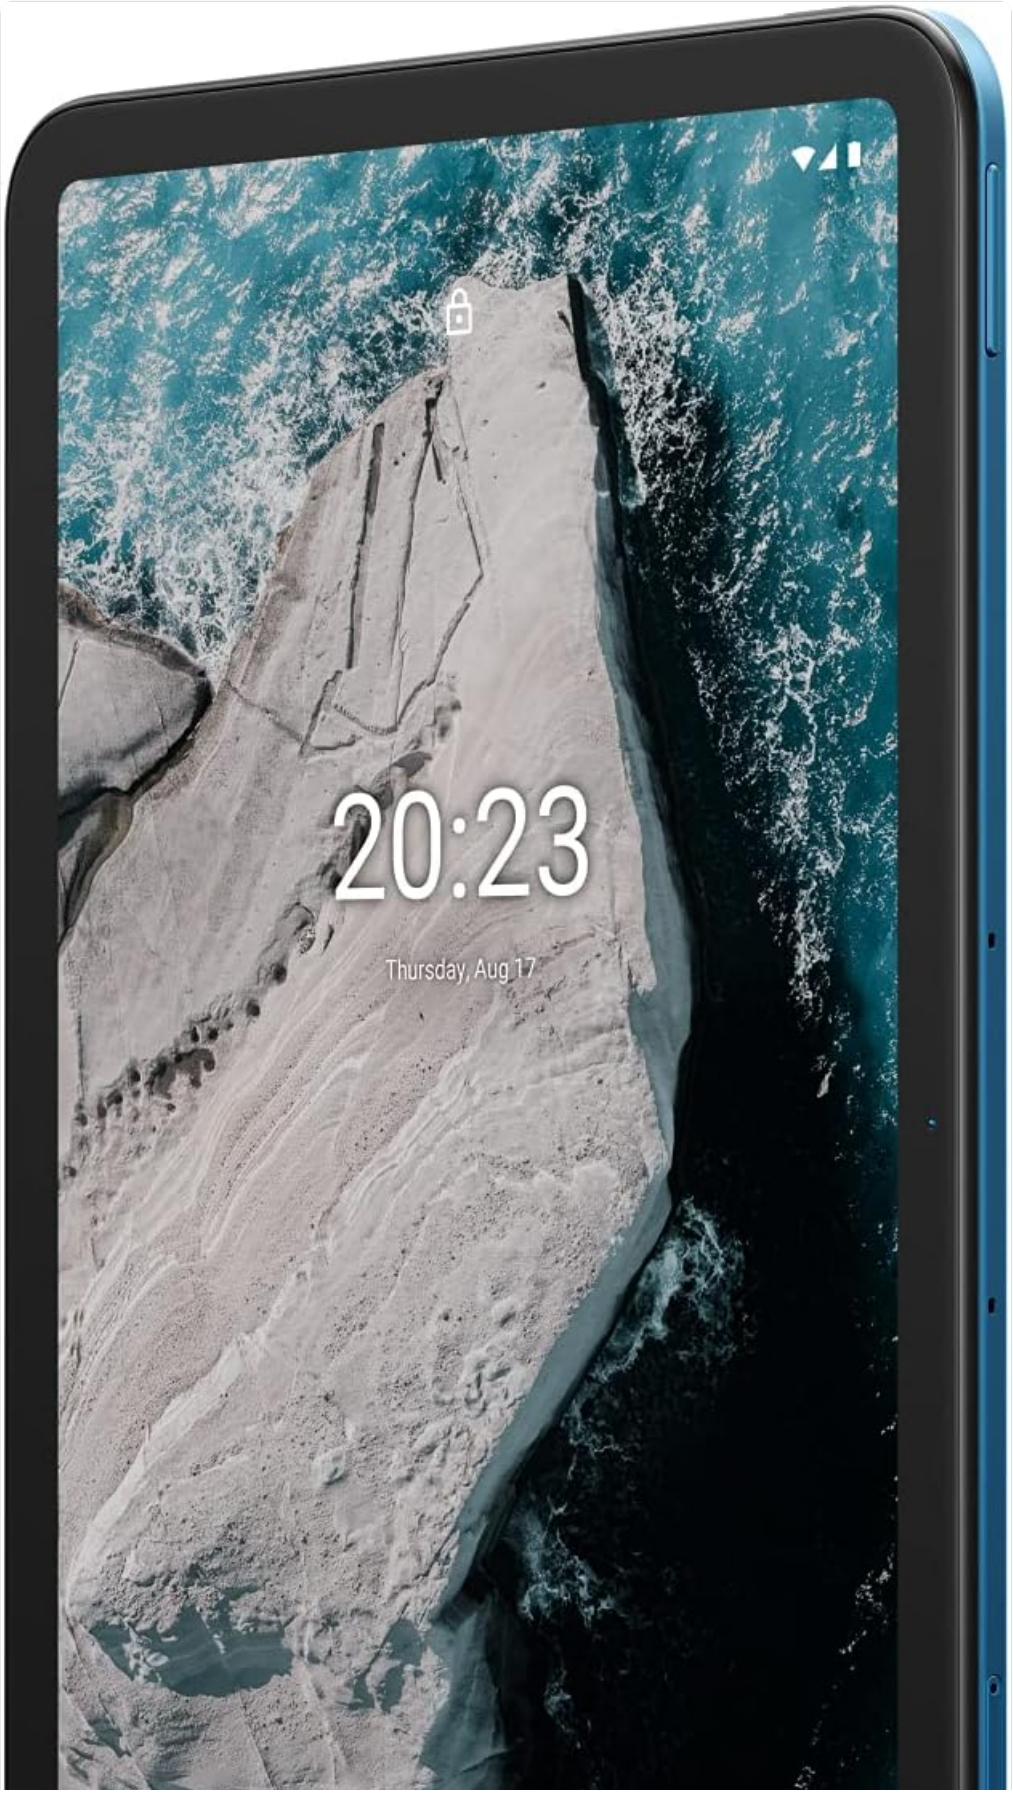




Image: Side view of the Nokia T20 tablet, highlighting the power button, volume rocker, and card tray location.

Operating Your Nokia T20 Tablet

1. Navigating the Interface

The Nokia T20 runs on Android 11. Use touch gestures to navigate: swipe up from the bottom for the app drawer, swipe down from the top for quick settings and notifications, tap to open apps, and pinch to zoom.

2. Connecting to Wi-Fi

Go to **Settings** > **Network & internet** > **Wi-Fi**. Turn on Wi-Fi, select your desired network from the list, and enter the password if prompted.

3. Using the Camera

Open the Camera app from the home screen or app drawer. Tap the shutter button to take photos. Switch between front and rear cameras using the camera switch icon. The rear camera is 8MP.

4. Media Consumption

Enjoy movies and shows on the 2K display. The tablet features enhanced speakers for an immersive audio experience. Connect wired headphones via the audio jack or Bluetooth headphones for private listening.



Image: Rear view of the Nokia T20 tablet, showcasing its Ocean Blue finish and camera module.

Maintenance

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

2. Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal long-term health. The tablet offers up to 7 hours of average battery life.

3. Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to **Settings** > **System** > **System update**. Nokia T20 receives 2 years of OS upgrades and 3 years of monthly security updates.

4. Storage Management

Periodically review and delete unnecessary files and apps to free up storage space. The tablet comes with 64 GB of flash memory, expandable via MicroSD card.

Troubleshooting

Tablet Not Turning On

Ensure the tablet is sufficiently charged. Connect it to the charger and wait a few minutes before attempting to power it on again. If it still doesn't turn on, try holding the power button for an extended period (e.g., 10-15 seconds) for a forced restart.

Screen Unresponsive

If the touchscreen is unresponsive, perform a forced restart by holding the power button until the device reboots. If the issue persists, ensure the screen is clean and free of debris.

Wi-Fi Connectivity Issues

Try toggling Wi-Fi off and on in settings. Restart your Wi-Fi router. Ensure you are within range of the Wi-Fi signal and that the password is correct.

Apps Crashing or Freezing

Close and reopen the app. If the problem continues, clear the app's cache (**Settings** > **Apps & notifications** > **[App Name]** > **Storage & cache** > **Clear cache**). If necessary, uninstall and reinstall the app.

SPECIFICATIONS

Feature	Detail
Brand	Nokia
Model Name	T20
Item Model Number	TA-1392
Operating System	Android 11
Screen Size	10 Inches
Screen Resolution	2000x1200 Pixels
Processor	1.8 GHz Unisoc
RAM	4 GB
Flash Memory Size	64 GB
Expandable Storage	Up to 512 GB (MicroSD)
Rear Webcam Resolution	8 MP
Average Battery Life	7 Hours
Item Weight	1.15 pounds (approx. 522g)
Product Dimensions	9.75 x 6.2 x 0.3 inches (approx. 24.75 x 15.75 x 0.76 cm)
Wireless Type	802.11ac





Image: Rear view of the Nokia T20 tablet with its length and width dimensions in millimeters.

Warranty and Support

The Nokia T20 tablet comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your product or visit the official Nokia support website. Nokia provides 2 years of OS upgrades and 3 years of monthly security updates to ensure your device remains secure and up-to-date.

For technical assistance, troubleshooting, or service inquiries, please contact Nokia customer support. You can often find support contact information and additional resources, including a detailed user guide in PDF format, on the official Nokia website. A user guide PDF is available at Nokia T20 User Guide (PDF).

© 2023 Nokia. All rights reserved. Nokia and the Nokia logo are trademarks of Nokia Corporation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09K2N5XTN

More documents and user manuals: **https://manuals.plus/**