Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Scosche PBQ5MSWT

Scosche GoBat PBQ5MSWT 5,000 mAh Fast Wireless Charging Power Bank User Manual

Model: PBQ5MSWT

Introduction

The Scosche GoBat PBQ5MSWT is a portable 5,000 mAh power bank designed for fast wireless charging and USB-C device compatibility. It features Qi-certified wireless charging up to 10 watts and a 10-watt USB Type-C port for efficient power delivery. The device is MagSafe compatible, allowing for magnetic attachment and wireless charging with compatible smartphones. Its compact design makes it suitable for on-the-go use.



Image: The Scosche GoBat PBQ5MSWT power bank, showcasing its compact white design with a wireless charging pad outline and LED indicators.

Product Components

Familiarize yourself with the key components of your GoBat power bank:

- **Wireless Charging Coils:** Located beneath the top surface for inductive charging.
- **MagSafe Magnets:** Integrated for secure magnetic attachment to compatible devices.
- **Power Button:** Activates the power bank and checks battery level.
- **USB-C Port:** For charging the power bank and charging external devices.
- **Power Level Indicator:** LED lights indicating the remaining battery capacity.



Image: An annotated diagram of the Scosche GoBat power bank, highlighting the wireless charging coils, MagSafe magnets, power button, USB-C port, and power level indicator.

Setup

Initial Charging of the Power Bank

1. Connect the included USB-C to USB-C charging cable to the USB-C port on the GoBat power bank.
2. Connect the other end of the cable to a compatible USB-C power adapter (not included).
3. Plug the power adapter into a wall outlet.
4. The LED power level indicators will illuminate to show the charging status. All four LEDs will be solid when fully charged.

It is recommended to fully charge the power bank before its first use.

Operating Instructions

Wireless Charging (MagSafe Compatible)

1. Ensure the GoBat power bank is sufficiently charged.
2. Align your MagSafe-compatible smartphone or device with the wireless charging area on the power bank. The magnets will assist in proper alignment.
3. Once correctly aligned, an LED battery light on the power bank will indicate that your device is successfully charging.



Image: A Scosche GoBat power bank magnetically attached to the back of a smartphone, demonstrating MagSafe compatibility for wireless charging.

USB-C Charging

1. Ensure the GoBat power bank is sufficiently charged.
2. Connect one end of a USB-C charging cable (included or compatible) to the USB-C port on the GoBat power bank.
3. Connect the other end of the cable to your device (smartphone, tablet, earbuds, etc.) that supports USB-C charging.
4. The power bank will begin charging your device.

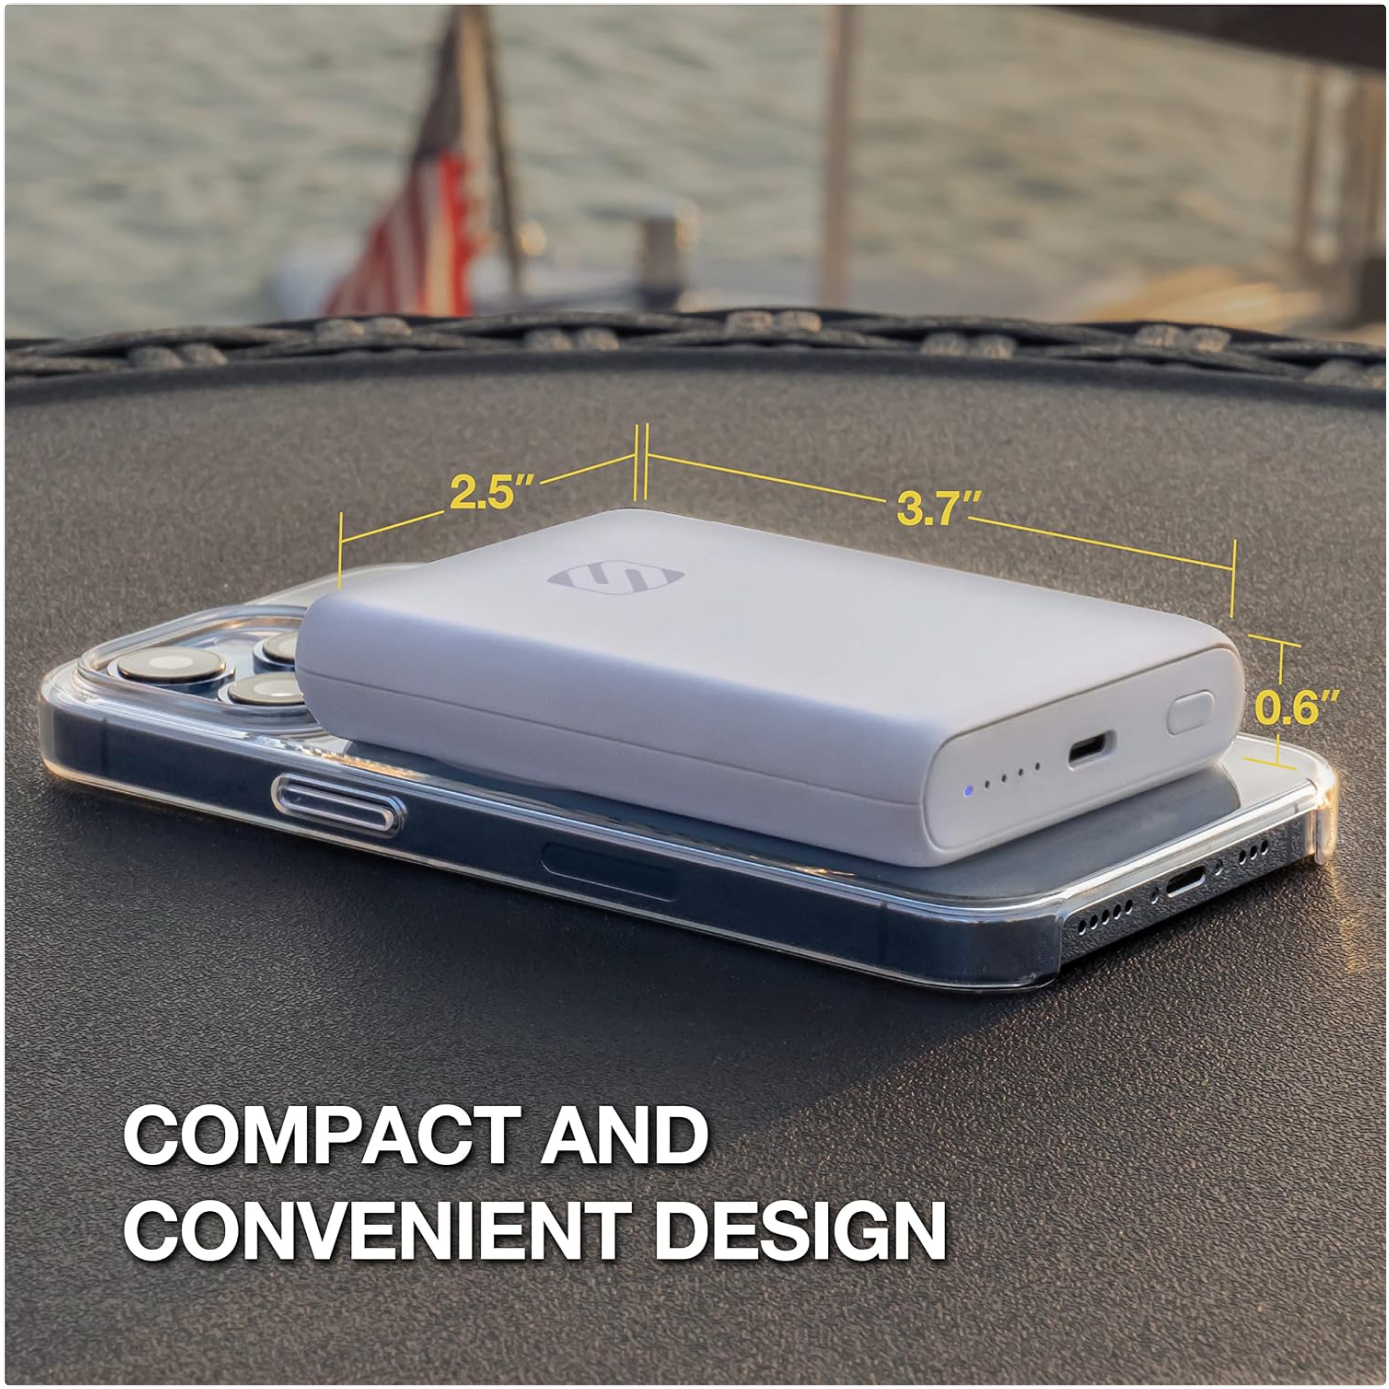


Image: The Scosche GoBat power bank connected via a USB-C cable to a smartphone, illustrating wired charging functionality.

Checking Power Level

Press the power button once to view the current battery level indicated by the LED lights. Each illuminated LED represents approximately 25% of the battery capacity.

Maintenance

- Keep the power bank dry and away from moisture.
- Avoid extreme temperatures.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- The power bank features Foreign Object Detection (FOD). If a metallic object is placed on the wireless charging pad, the charging function will shut down to prevent damage. Remove the object to resume normal operation.
- Store the power bank in a cool, dry place when not in use.

Troubleshooting

- **Device not charging wirelessly:** Ensure your device is Qi-compatible and correctly aligned on the charging pad. Remove any thick cases that might interfere with wireless charging. Check for foreign objects on the charging surface.
- **Device not charging via USB-C:** Verify that the USB-C cable is securely connected to both the power bank and your device. Try a different USB-C cable or device to rule out cable or device issues.
- **Power bank not charging:** Ensure the USB-C charging cable is properly connected to a working power adapter and wall outlet. Check if the power adapter is functioning correctly.
- **Slow charging:** Ensure you are using a compatible charging cable and that your device supports fast charging. Wireless charging speeds can vary based on device and alignment.
- **LED indicators not working:** Press the power button to activate the indicators. If they still do not light up, the power bank may be fully depleted or require service.

Specifications

Feature	Detail
Model Number	PBQ5MSWT-SP
Battery Capacity	5,000 Milliamp Hours
Wireless Charging Output	Up to 10 Watts (Qi-certified)
USB-C Output/Input	10 Watts
Product Dimensions	3.64 x 2.45 x 0.64 inches
Item Weight	5.6 ounces
Special Features	Fast Charging, Portable, Travel, Wireless Charger, Wireless Charging, MagSafe Compatible, Foreign Object Detection
Color	White



Image: The Scosche GoBat power bank shown next to a smartphone, with dimensions (3.7" length, 2.5" width, 0.6" thickness) highlighted to illustrate its compact size.

Warranty and Support

The Scosche GoBat PBQ5MSWT power bank is backed by Scosche's **3-year warranty**. For technical assistance or warranty claims, please contact Scosche customer support.

Scosche also provides **Lifetime Tech Support** for their products. For further assistance, please visit the official Scosche website or refer to the contact information provided with your product packaging.

You can find more information and support resources on the Scosche Brand Store.

© 2024 Scosche Industries, Inc. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09K9PKGQZ

More documents and user manuals: **https://manuals.plus/**